

Commissioning

VMS Compound Management System

TÜV type-tested

Test No. TÜV 12/97 0174

CE 0085 AS 0255



Sensors and Systems
for Combustion Engineering



Table of Contents

| | | | |
|--|---------|--|---------|
| General Information | 4 - 13 | Power control unit (option) | 23 - 25 |
| Validity of these instructions | 4 | Interface | 25 |
| Standards | 4 | Display | 25 - 26 |
| For your safety | 5 | Parameter for O ₂ -regulation | 27 |
| Follow the legislation on safety of appliances | 5 | Output regulator (optional) | 28 - 34 |
| Purpose | 6 - 7 | Method of operation | 28 - 30 |
| Intended purpose of VMS 4 / VMS 5 | 6 | Procedure description | 28 |
| Application-internal output regulator (optional) | 7 | Weather control | 28 |
| Application-internal O ₂ regulator (optional) | 7 | Set-point switch-over | 29 |
| Using these instructions 8 - 9 | | Startup circuit | 29 |
| Purpose of these instructions | 8 | Thermostat and control region | 30 |
| Preliminary clarification | 8 | Manual control | 30 |
| Finding the appropriate section | 8 | Setting the regulator | 31 - 34 |
| Conventions | 7 - 8 | Interpreting the display | 31 |
| Fault correction | 9 | Setting the output regulator | 31 |
| VMS Operating principle 10 - 13 | | Control region | 31 |
| VMS digital inputs | 10 | Regulator behaviour | 32 - 34 |
| VMS operating sequence | 10 - 11 | Before commissioning | 35 |
| Range limits | 11 | Adjusting motor limit switch | 35 |
| Internal load | 11 | VMS Commissioning | 36 - 61 |
| Manual operation | 11 | Function test | 36 - 37 |
| Parameterisation | 11 | Significance of VMS digital input display | 37 |
| Correction | 11 | Setting control elements | 38 |
| Flying curve change (option) | 12 | Operation of control elements for potentiometer adjustment and limit switch settings | 38 |
| Integrated power control unit (option) | 12 | Programming curves | 39 - 44 |
| 4 or 8 curve sets (option) | 11 | Programming the compound | 39 |
| Facility for direct connection of Namur transmitter (option) | 12 | Entirely new curve, clear memory | 39 |
| Freedom from error of feedback signals | 12 | Programming 1 st point (separate ignition point) | 40 |
| Pre-ventilation limit | 12 | Programming with burner running | 40 - 41 |
| Energy-saving mode for running text display | 13 | Programming with burner stationary | 41 |
| Separate ignition point | 13 | Programming 2 nd to 19 th point | 41 |
| Integrated O ₂ regulation | 13 | Programming last top point | 42 |
| Settings | 14 - 27 | Store curve | 42 |
| Inputs | 14 | Check monitoring values | 42 |
| Significance of ID number | 14 | Adding points | 43 |
| Inputs | 14 | Changing curve point | 44 |
| Configuration sticker/Configuration number | 14 | O ₂ regulation | 45 - 58 |
| Condition on delivery | 15 | Automatic functions control | |
| Assignment of sockets to inputs | 15 | during operation | 45 - 46 |
| Configuration cards (examples) | 15 | Adjusting the integrated O ₂ regulator (optional) | 45 |
| Inputs | 16 | Checks during burner start-up | 45 |
| Processor card | 16 | O ₂ monitoring bands | 45 |
| Power supply card | 16 | O ₂ boundary curves | 45 - 46 |
| Plug-in p.c. card for a continuous output | 16 | Dynamic probe test | 46 |
| Parameters | 17 - 18 | Probe blockage | 46 |
| Parameter setting | 17 | Correction output monitoring | 46 |
| Access levels | 17 | Regulation strategy | 47 - 49 |
| Entering the password | 17 | With pre-setting for load changes | 48 - 49 |
| Changing password | 18 | Extended regulation strategy (air shortage) | 49 |
| Changing parameters | 18 | Connection to O ₂ meter | 50 |
| List of parameters (level 0 and 1 parameters only) | 19 - 27 | Via analogue interface | 50 |
| Pre-ventilation | 19 | Operator controls and display | 51 - 52 |
| Running direction | 19 | Mode switching | 51 |
| Correction | 20 | Calling up O ₂ regulation text messages | 52 |
| Monitor output | 20 - 21 | Commissioning | 53 - 57 |
| Flying curve change | 21 | Setting the correction range | 53 |
| Band shift | 21 | Inputting the O ₂ target value curve | 54 |
| Compound | 22 - 23 | Calling up the correction range set | 55 |
| Control unit | 23 | | |

Table of Contents

| | | | |
|--|----------------|---|------------------|
| Calculation and setting of control parameters-(manual) | 55 | O₂ regulation | |
| Lag time (parameters 898/900) | 56 | What happens in the event of O ₂ regulator | 76 |
| P-factor (parameter 899) | 56 | Air shortage perturbation | 76 |
| Setting base value for "Deactivated control" and "Air shortage" | 57 | Resetting O ₂ errors | 76 |
| Calling up the base value for O ₂ regulation deactivated/air shortage | 57 | Calling up O ₂ regulation error history | 76 |
| Automatic | 57 | Fault codes | 77 - 83 |
| Operation | 58 | VMS Fault Correction/Aids | 84 - 108 |
| The meaning of the additional modes | 58 | General Faults (A) | 84 - 89 |
| Resetting "od" | 58 | Three-point step control output (B) | 90 - 91 |
| Calling up O ₂ regulation text messages | 58 | Continuous output (C) | 92 |
| Correction | 59 - 62 | Load signal (D) | 93 - 94 |
| Set correction input | 59 - 61 | Feedback (E) | 95 - 97 |
| Recall set correction range | 61 | Correction input (F) | 98 - 99 |
| Altering the correction range | 62 | Digital inputs VMS (G) | 100 - 101 |
| Correction modes | 62 | Parameters (P)/Parameters O₂ regulation | 102 - 110 |
| Run to shut-off limits | 63 - 64 | Servicing | 111 - 112 |
| Checking the combustion engineering limits | 63 | Changing EPROMs | 111 |
| Checking the shut-off limits at the continuous output of the VMS | 63 | Changing a data EPROM or a program EPROM | 111 |
| Checking the shut-off limits at three-point step output of the VMS | 64 | Re-entering range limits | 111 |
| Checking the O ₂ influence | 64 | Installing new software version | 112 |
| Commissioning | 65 - 70 | Procedure for installation of new software in the VMS | 112 |
| Tips & Tricks | 65 - 70 | Appendix | 113 - 129 |
| Programming 1st point (ignition load point) | 65 | EMC of wiring | 113 |
| Programming with burner running | 65 - 66 | Connection of screening | 113 |
| Programming with burner stationary | 66 | PE bus bar | 113 |
| Reversing the programming | 66 | Switch cabinet wiring | 113 |
| Instrumentation for commissioning | 66 | Screening of leads from the field | 113 |
| Adjusting load ratings individually | 67 | Feedback on TPS channels | 114 |
| Entering an initial curve | 68 | Positive connection | 114 |
| Approaching control elements from one side | 68 | Example of positive potentiometer connection | 114 |
| Entering settings | 68 | Error-proof feedback | 114 |
| Entering top setting | 68 | Examples of potentiometers | 114 |
| Starting without pre-ventilation | 69 | Examples of servomotors | 114 |
| Ignition delay when setting | 69 | Switch and key combinations on the VMS / FMS front panel | 115 |
| Pre-setting load automatically | 69 | Switch and key combinations O₂ regulation | 116 |
| Entering the compound curves with the burner stationary | 69 | Sequence of functions | |
| Keeping the re-circulation damper closed in pre-ventilation | 70 | VMS digital inputs (sequencer) | 117 |
| Switching the burner on again via the target value | 70 | Technical Data | 118 |
| System Operation | 71 - 83 | VMS 4/VMS 5 Connection diagram | 119 - 124 |
| Mode display | 71 - 73 | Direct connection of Namur transmitter (option) | 125 - 126 |
| Significance of modes on the VMS | 71 - 72 | Extract from circuit diagram | 125 |
| O ₂ regulator modes | 72 | Technical data | 125 |
| "ES" Mode progress (set-control) | 73 | Selecting a suitable sensor for rev. speed monitoring | 126 |
| Continue programming | 73 | Relay module connection diagram | 127 |
| Checksums/Running time meter | 74 | Connection Diagram | |
| Recalling the checksums and the safety times | 74 | Modem for remote control | 128 |
| Calling up running time meter | 74 | General Notes relay modules | 129 |
| Messages / Faults | 75 - 83 | Technical data | 130 - 132 |
| What happens in the event of VMS fault | 75 | Accessories and Spare Parts | 133 - 134 |
| Reading off a fault/Resetting a fault | 75 | Declaration of Conformity | 135 - 136 |
| Calling up fault history | 75 | Protocol example | 137 |
| | | O₂ target value curves | 138 |

Validity of these instructions

These instructions apply to the VMS 4 and VMS 5 Compound Management Systemv in any configuration (see VMS Commissioning Supplement, booklet No. D LT 6066.97 D).

The software-related information relates to the software version V 3.1 (recognisable from the sticker inscription on the program EPROM).

If you have a different version of the software, some of the functions described may not be available or some of the functions provided by that software may not be described

Standards

The units conform to the following standards and regulations:

VMS EN 298 (checked against this)
 EN 230 (checked against this)
 TRD 411
 TRD 412 [TRD = Technical Regulations for Steam Boilers]
 TRD 604
 EMC Directive, Low Voltage Directive
 Gas Appliance Directive

TÜV test symbol: TÜ 12 / 97 01 74
CE-0085 AS 0255

Follow the legislation
on safety of appliances

The legislation on safety of appliances states:

Follow the instructions !
Proceed only in accordance with this commissioning supplement
(booklet No. D LT 6065.98)

Use the appliance solely for the specified purpose.
It must be operated only by trained personnel. The appliance must be
operated and serviced only by persons with the required knowledge and
training. Follow the burner manufacturer's safety rules.

Electrical connection to appliances not mentioned in these instructions
Only after consultation with the manufacturers or a qualified expert.

To be used only in a grounded power line network!

Liability for proper functioning of the appliance passes to the owner
or operator.

Liability for correct functioning of the appliances in every case passes to the
owner or operator, should the appliance be incorrectly operated, serviced or
repaired by persons without the requisite knowledge, or if operation is
inconsistent with the specified intended purpose.

In the event of modifications to the unit the type approval lapses. The unit's
inputs and outputs and associated modules must only be wired according
to the specifications in these instructions.

LAMTEC GmbH & Co KG will not be liable for damage or injury arising out of
a failure to observe the instructions above. The warranty and liability provisions
of the terms and conditions of sale and supply of LAMTEC GmbH & Co KG
shall not be extended by virtue of the instructions above.

Where reference is made to legislation, government regulations and
standards, these are based on the legal system of Germany.

Intended purpose
VMS 4 / VMS 5

The VMS 4 / VMS 5 Combustion Management System is a control unit for combustion systems.

Brief description

The VMS 4 adjusts up to four control elements as a function of a control variable (generally the burner load) according to freely programmable curves.

The VMS 5 adjusts up to 5 control elements as a function of a control variable according to freely programmable curves).

2 sets of curves (e.g. for oil or gas) can be filed as standard, with the option for 4 or 8 sets of curves.

Examples of possible control elements:

- Combustion air damper
- Combustion air fan
- Fuel quantity
- Atomiser steam
- Re-circulation fan
- Flue gas damper
- Flue gas fan

Up to 20 points can be programmed for each channel. The display is relative between 0 and 999.

The VMS has two correction inputs for shifting the setting curves, allowing a feedback control (e.g. O₂ control unit) to be connected up.

Each output is freely configurable, either three-point step control element output for direct actuation of a motor or constant output (on the VMS 5 the 5th channel is always constant). The constant output can be set to any of the following variables:

- Current signal 0 ... 20 mA
- Current signal 4 ... 20 mA
- Voltage signal 0 ... 10 V

The VMS 4 also has a so-called monitor output. In addition an internal value (such as the load position of the burner or position of the gas control element) can be outputted by means of 4 ... 20 mA signal).

The VMS has one serial interface for remote control/ display via PC (Windows software available separately) and for connection to other system components via BUS (e.g. fault message system, O₂ control). Connections for Interbus-S, Profibus, Modbus and CAN-BUS are available as options. Other BUS systems on request.

The VMS constantly monitors its own functioning and that of the control elements connected.

Each analog input (control variable and feedback or correction) is freely configurable via plug-in cards.

Alternatively:

- Potentiometer (1 ... 5kW)
- Current signal 0/4 ... 20 mA
- Step input (DPS)
- Namur transmitter
- PT 100

The operating states are predefined in the VMS through potential-free contacts

- Burner on
- Pre-ventilation
- Flame signal
- Control enabling
- Recirculation enabling
- Fuel selection

The unit is of error-proof construction.


Application - internal
output regulator
(optional)

This software option makes it possible to calculate the burner's required load setting continuously for a specified target value (referred e.g. to temperature or pressure), through comparison with the actual value. This load setting can be notified internally to the electronic compound as the specified value.

Application - internal
O₂ regulator
(optional)

This software function makes it possible to regulate one or several actuators independently of a switched-on O₂ actual value. By using a self-optimising regulator strategy, it is also possible to regulate burners with frequent load changes.

| | |
|---------------------------------|---|
| Purpose of these instructions | <p>These instructions are concerned exclusively with commissioning and servicing. All information necessary for both of these topics is provided. Further information, for example design examples, possible uses, software settings etc., is given in separate booklets.</p> <p>Information relating to specific options for this installation is provided in separate documentation supplied with installations equipped with those options.</p> |
| Preliminary clarification | <p>To make the best use of these instructions, proceed as follows:</p> <p>Check whether the settings of your VMS meet the system requirements. You will find the settings on the sticker on the unit.</p> <ul style="list-style-type: none">- Which physical quantities (current, resistance) and values does your VMS need on its inputs?- Which physical quantities (current, voltage, relay signal) and values does the system expect on the outputs of the VMS- Do the settings of the VMS match your requirements with regard to operating behaviour (pre-ventilation, feedback etc) <p>Should these matters not be clear, please read the section "Settings" (page 14 - 27)</p> |
| Finding the appropriate section | <p>Determine what operation you wish to perform on the VMS.</p> <p>When initially putting into operating or tracing the cause of a fault, a function test is first recommended. You must then decide whether you wish to program with the burner stationary or running and whether or not an entire curve is to be programmed.</p> <p>Identify your current requirement from the table of contents and turn to the appropriate page.</p> |
| Conventions | <p>Sub-headings</p> <p>Serve as a guide if you can already handle the VMS and merely want to refer to certain information again.</p> <p><i>Lines in italics after the sub-headings</i></p> <p>describe what the current state of the system should be. If this is not the case, the subsequent operations will not show the desired result.</p> <p>Lines in bold type</p> <p>indicate an action which you are to perform.</p> |

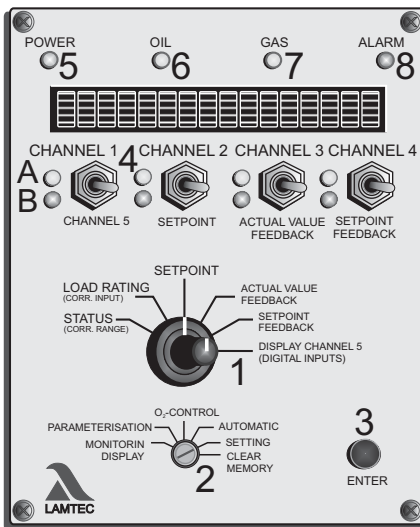


The figures and letters in brackets (1), (2), (3), (4), (5), (6), (7), (8), (A) and (B) relate directly to the picture of the front panel. They identify the part on which the specified action is to be performed or on which a reaction can be seen.

The lines in ordinary typeface below the procedural instruction describe the reaction of the system or unit following the operation.

The figures at the right-hand margin denote a paragraph in the "Fault Correction" section of these instructions. If the reaction indicated does not occur, please refer to this. It describes the possible causes of faults and how to rectify them.



The word in italics between two lines and the  sign are notes for a better understanding of the operation or notes on how to avoid incorrect operation.



The lines in bold italics between two lines and the triangle draw attention to dangers. The instructions given there must be followed.

If you now follow the operations step by step, paying attention to the instructions, you will automatically be working correctly. If any of the reactions indicated do not occur, there is a fault with the unit or the system. You should correct the fault first before proceeding.


Fault correction

Follow the instructions identified by the figures given after the fault codes and after the procedural instructions. You may find the solution to your problem there.

This section, however, makes no claim to completeness. Should the actions described there not have the desired effect, the unit or parts of the unit (e.g. front panel etc.) must be changed. If the fault still occurs you are dealing with a fault specific to the system.



Tip: You can download the up-to-date version of these instructions from <http://www.lamtec.de> as PDF File. You will find the version from the letter of the booklet no. (see the backside of this document). Example:

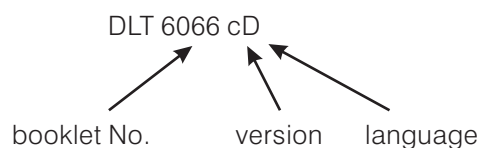

VMS Digital Inputs

For the VMS to function according to the requirements of a combustion system, the condition signals from the system must be relayed to the VMS.

These signals include:

- Burner starting
- Pre-ventilation signal
- Flame signal
- Control release
- Re-circulation release
- Fuel default

For use in burner control, the VMS emits 3 messages via relays (in addition to the outputs for control of the control elements):

- fault
- ignition position
- all channels to maximum value (high load position)

VMS operating sequence
(for diagram of example,
see appendix)

The operating sequence described relates to a usual configuration of the unit. The various parameter settings can result in a somewhat different sequence.

The mode display changes from "AU" (off) to "BE" (ready).
The flue-gas valve goes to "OPEN".
This is followed by the pre-ventilation signal (terminal 3).
Continuous-action outputs go to the highest programmed point.
Three-step outputs receive a continuous "OPEN" signal and go to the end-switches.

The mode display changes to "VO" (pre-ventilation).
The recirculation channels go to open only when a signal is applied to terminal 6 and the assigned channel, generally the air valve, is 75% open. If there is to be no separate recirculation valve delay, a continuous signal can be applied to terminal 6. The recirculation valve delay is then automatic. Once all active channels have reached their uppermost point, the high-load relay picks up. The fuel channel is then already going to the ignition position.
During pre-ventilation, the VMS checks the "CLOSED" and "OPEN" positions of each actuator.

On completion of the pre-ventilation period (removal of the signal from terminal 3), the air and recirculation channels also go to close (air to the ignition point and recirculation fully closed). The mode display changes to "CLOSED". The ignition-position relay then picks up. The flue-gas valve remains open, or the flue-gas fan remains on top rotational speed.

Following completion of ignition, a signal is applied to terminal 8 (flame signal). The flue-gas channel goes to the programmed point. The load displayed continues to be the load at the ignition load point. The mode display changes to "GL" (base load). A signal to terminal 6 then prompts the recirculation channel to go to the programmed point. Correction is active. The controller remains in the base load position until a control enabling signal (terminal 4) is given.


Once control is released, the VMS tracks the externally applied load. A current signal proportional to the position of the compound is emitted as internal load (not on VMS 5). The mode display goes out.

| | |
|-----------------------------------|--|
| Operating sequence (continued) | <p>If control release is withdrawn during operation, the compound returns to base load or ignition load (configurable). Following withdrawal of all signals the VMS goes into "post-ventilation" mode (if activated via parameters). The flue gas damper and air ducts run fully "OPEN" for a configurable period of time. Fuel and re-circulation ducts remain "CLOSED". Display "NA". Once the time has elapsed, all ducts run "CLOSED" and the VMS goes into "AU" (Off) mode.</p> |
| Range limits | <p>In the 1st pre-ventilation after "Clear memory", the VMS determines the maximum range of travel for each control element and stores this automatically. If no ranges limits have yet been determined, the setting (in the case of constant outputs the feedback setting) in pre-ventilation stands at 0 and 999 points respectively. At all further starts a check is made to see that these range limits are correct. Should the limit switches be shifted or the frequency converter setting changed after programming, the range limits must be re-entered.</p> <p>If the range limits cannot be determined automatically, they can also be entered manually by way of parameters. If the VMS has no existing range limits, it automatically takes the top and bottom point of the curve as the limit. It then does not go beyond this.</p> |
| Internal load | <p>The internal load is the load value at which the compound currently stands. It therefore corresponds indirectly to the output of the burner.</p> <p>The internal load is displayed in addition to the external load signal. In the "load value" position therefore both the external load (left-hand) and the internal load (right-hand) are displayed.</p> <p>The value of the internal load can be outputted via the monitor output, in order to connect further units (e.g. O₂ control, only on VMS 4). When connecting other units, it must be remembered that the signal in itself is not error-proof.</p> |
| Manual operation | <p>When switching over to "Load value" with the burner running the burner load can be set via the VMS. The load value can then be adjusted with the channel 1 toggle switch.</p> <p>The system follows this load value in the compound.</p> <p>Operating a switch other than channel 1 causes the unit to exit manual mode again.</p> |
| Parameterisation | <p>The person commissioning the unit can adjust various functions of the VMS by way of parameters (e.g. post-ventilation time). The parameters are classified into various safety levels. With the exception of the lowest safety level these are accessible only with a password. The parameterisation can be undertaken both on the unit itself and by means of a PC and Windows software.</p> |
| Correction | <p>The VMS has 2 correction inputs. An analog signal (0/4 ... 20 mA) can be connected to these for shifting the set curves (e.g. for O₂ correction or air temperature correction). The assignment of the correction to the individual output channels and the mode of operation can be adjusted via parameters.</p> <p>If the VMS cannot perform a correction because a control element stop has been reached, it adjusts the internal load and hence the compound until the correction can take effect as required.</p> |

| | |
|--|--|
| Flying curve change (Option) | <p>If the select signal for the curve sets is changed whilst in operation, the VMS goes to fault 351. With this option, however, it allows changing from one curve set to another.</p> <p>The settings change abruptly.</p> <p>The band monitorings are replaced for a period of 30 seconds by running direction monitoring.</p> <p>After 30 seconds the control elements must have reached their new value.</p> |
| Integrated power control unit (option) | <p>An integrated power control unit is also available as an option. Where this is used the actual temperature or the actual pressure is directly switched instead of the load signal. The control parameters are adjusted via parameters. It is also possible to change the setting (daytime/night time operation) and to control the atmospheric conditions by switching in the outside temperature.</p> <p>The integral output regulator is a PID controller with special combustion technology functions. It can be used as a fixed-value regulator or as a weather-dependent regulator. The following signals can be set:</p> <ul style="list-style-type: none">- Actual value (analogue)- External temperature or some other analogue signal for target value shifting (only in weather-dependent regulators)- Target value switching (via zero-potential contact) <p>Combustion enabling by the output regulator takes place internally in the VMS.</p> <p>Boundary values that switch the burner on and off, need to be set via parameter setting. In this case, the startup signal is removed internally from the VMS via the output regulator module.</p> <p>The operator is alerted by the display (running text) that the output regulator refuses to enable a startup.</p> |
| 4 or 8 curve sets (Option) | <p>The VMS has 2 curve sets as standard. 4 or 8 curve sets may be used, as option.</p> |
| Facility for direct connection of Namur transmitter (Option) | <p>An output for controlling the speed of a combustion air fan or a re-circulation fan etc. can be monitored by switching the pulse output of a Namur transmitter directly to the VMS.</p> |
| Freedom from error of feedback signals | <p>Continuous outputs and three-point step outputs have different feedback requirements. In the case of continuous outputs comparisons are made between output and feedback values in or to check the plausibility. The units therefore do not have to be intrinsically error-free in order to form the feedback signal. For availability reasons (minimisation of interference) the reproducibility of the values should be as good as possible.</p> <p>For technical reasons this method cannot be used in the case of three-point step outputs. For this reason TÜV approved potentiometers must be connected directly as feedback to the VMS. These potentiometers must positively render the position of the damper.</p> |
| Pre-ventilation limit | <p>Normally during pre-ventilation each control element runs as far as its uppermost stop. Now, by means of parameters, a limit can be set for each channel that is not exceeded during pre-ventilation.</p> |

| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|---|---|---------------------|-----------------------|----------------|--------|--|----------|--|--------|--|----------|--|--|-------|-----------------|---------------------|--|--|-------------|--|-----------------------|--|-----------|--|-------------|--|---------|--|--|--|---------------------------|--|--|
| Energy-saving mode for running text display | <p>The brightness of the display can be adjusted to the ambient light conditions by means of parameters.</p> <p>In addition the display can be set to automatically revert to the lowest brightness level if not operated within a given period of time.</p> | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Separate ignition point | <p>In the standard version the ignition point is situated outside the accessible range in order to set a separate fuel/air ratio. By means of parameters, however, the ignition point can be adjusted so that it lies on the compound curve.</p> | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Integrated O ₂ regulation | <ul style="list-style-type: none">- optimises combustion systems- saves fuel- minimises pollutants <p>The main purpose of O₂ regulation is to compensate for perturbations that affect combustion. In addition, the O₂ regulation system monitors the combustion's fuel/air ratio. A message is output at once if it strays outside the permitted limits.</p> <p>The following are the main perturbing factors that affect combustion:</p> <table><tr><td>Air:</td><td>Temperature</td><td>Contamination:</td><td>Burner</td></tr><tr><td></td><td>Pressure</td><td></td><td>Boiler</td></tr><tr><td></td><td>Humidity</td><td></td><td></td></tr></table> <table><tr><td>Fuel:</td><td>Calorific value</td><td>Mechanical systems:</td><td></td></tr><tr><td></td><td>Temperature</td><td></td><td>Mechanical hysteresis</td></tr><tr><td></td><td>Viscosity</td><td></td><td>(free play)</td></tr><tr><td></td><td>Density</td><td></td><td></td></tr><tr><td></td><td>Gas pressure fluctuations</td><td></td><td></td></tr></table> <p>The O₂ control unit is implemented as a free-standing software module. The unit compares the residual oxygen content in the exhaust gas of a combustion system measured by means of the LT1/LT2 Lambda transmitter (actual value) with the optimum residual oxygen content (target value). The target values are stored in the instrument in the form of an installation-specific curve. The control unit applies a correction until the actual value corresponds to the target. The calculated output value of the O₂ control module is transmitted to the compound module as a correction input signal.</p> | Air: | Temperature | Contamination: | Burner | | Pressure | | Boiler | | Humidity | | | Fuel: | Calorific value | Mechanical systems: | | | Temperature | | Mechanical hysteresis | | Viscosity | | (free play) | | Density | | | | Gas pressure fluctuations | | |
| Air: | Temperature | Contamination: | Burner | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | Pressure | | Boiler | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | Humidity | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Fuel: | Calorific value | Mechanical systems: | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | Temperature | | Mechanical hysteresis | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | Viscosity | | (free play) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | Density | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | Gas pressure fluctuations | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |

| | |
|---------------------------|---|
| Significance of ID number | <p>The ID number comprises 8 characters, e.g. 664 V 0010</p> <p>The two figures before the letter denote the unit, in this case a VMS 4.</p> <p>The letter denotes whether the unit is a VMS or a FMS. The penultimate figure provides information on the unit hardware.</p> <p>It also determines which connection diagram applies (see appendix).</p> |
| Inputs | <p>The inputs can be configured on the backplane by means of plug-in configuration cards. Any of the following can be connected up to each input:</p> <ul style="list-style-type: none">- a potentiometer in the range from 1-5 kW- a current signal 0 ... 20 mA or 4 ... 20 mA- a step signal ("OPEN - CLOSE" commands)- a frequency signal (Namur transmitter), for details see appendix- a PT 100 element- flame sensor module (in preparation) <p>There is a plug-in card for each configuration. This is inserted into the respective socket in order to configure the input.</p> |
| Configuration sticker | <p>The factory setting is entered on a sticker on the side of the unit.</p> <p>This corresponds either to the customer data or, if nothing was specified, the standard setting (see condition on delivery).</p> <p>The EEPROM checksums and thereby the software version are also entered on this sticker, together with the configuration number and hence the hardware setting.</p> |
| Configuration number | <p>The configuration number is a 15-digit number, constructed according to a fixed code.</p> |

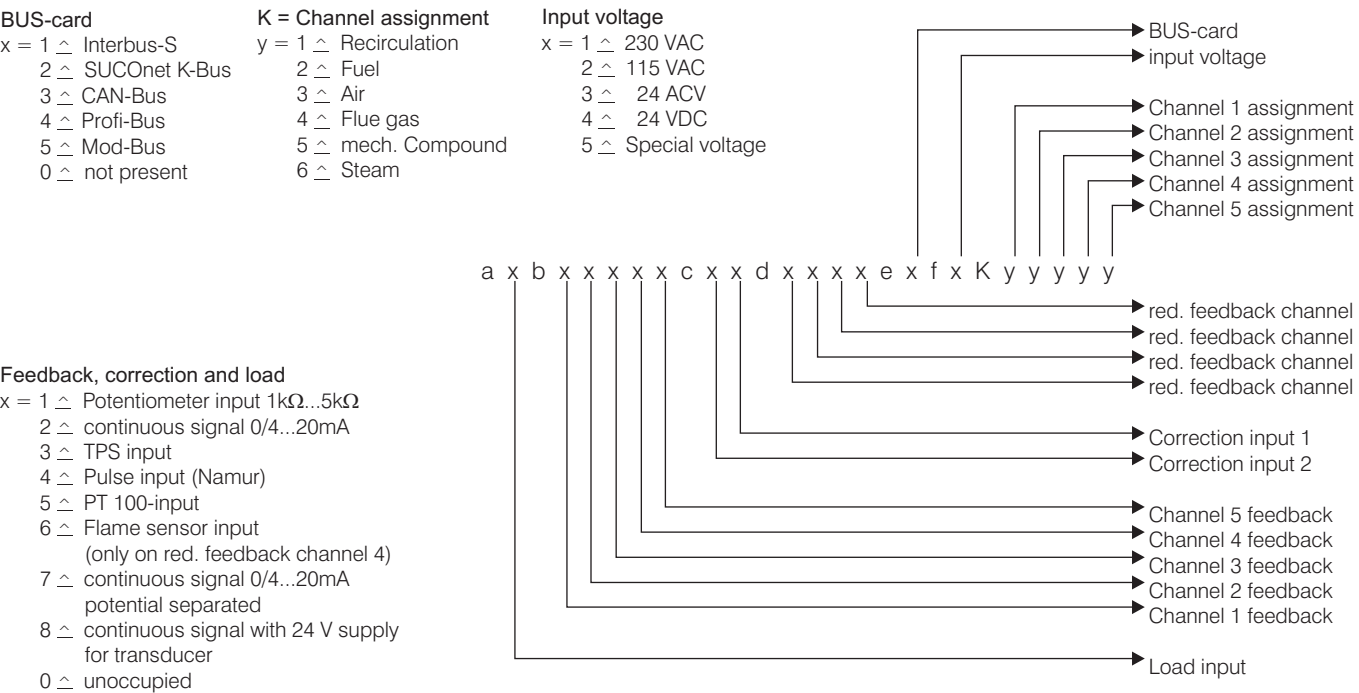

Condition on delivery

All units are set according to the order. Settings not evident from the ID number or configuration number must be indicated separately. In particular:

Outputs

- whether continuous or three-point step
- whether 0 ... 10 V, 0/4 ... 20 mA
- position of the outputs in the event of fault

Inputs, load, feedback


- Whether potentiometer or 0/4 ... 20 mA or step
- Whether inputs are used doubled (redundant) and if so, which (possible only if the integrated power control unit is not used)
- Whether special plug-in configuration cards (PT 100, Namur transmitter) are used

Correction input


- Whether 0 ... 20 or 4 ... 20 mA or direct temperature connection
- Mode of operation, on which channel, upward or downward shift (modifiable only via software)

Assignment of sockets to inputs


Backplane

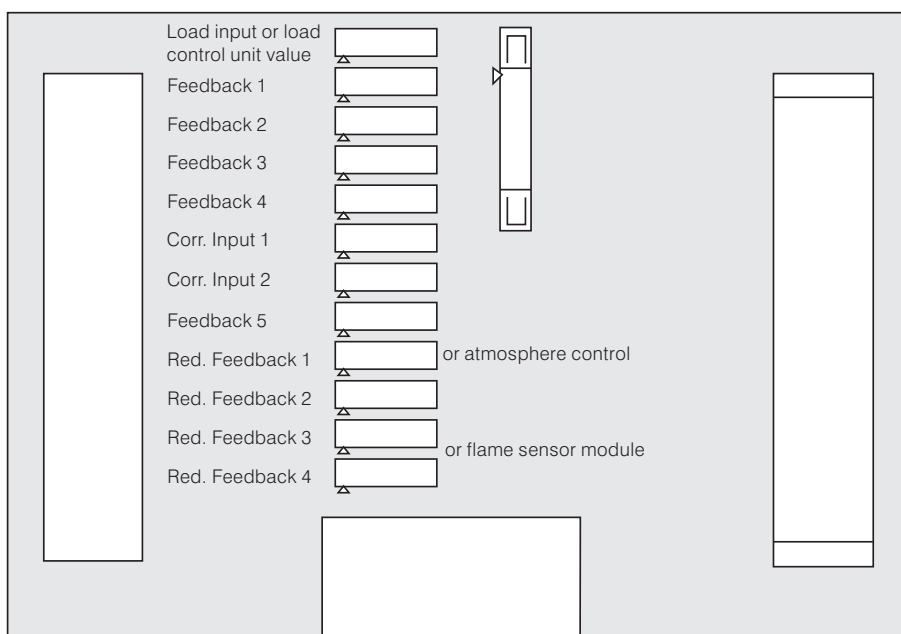


Configuration cards (examples)

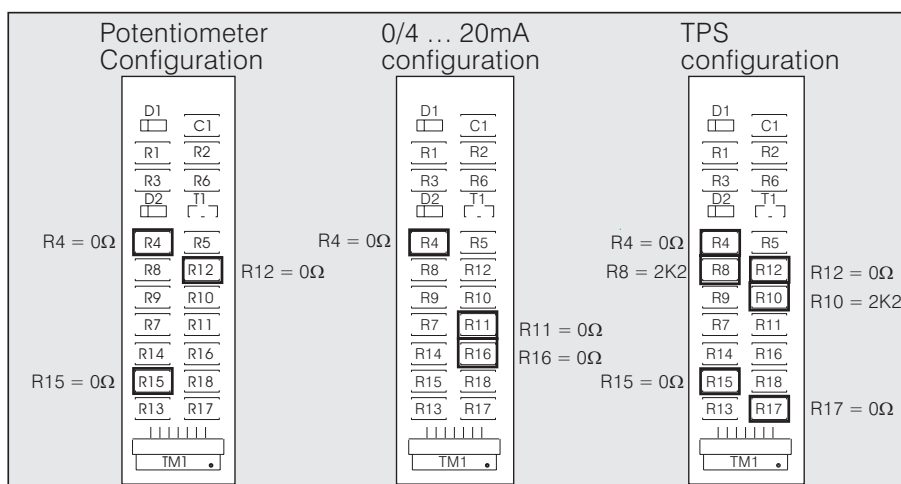


Processor card

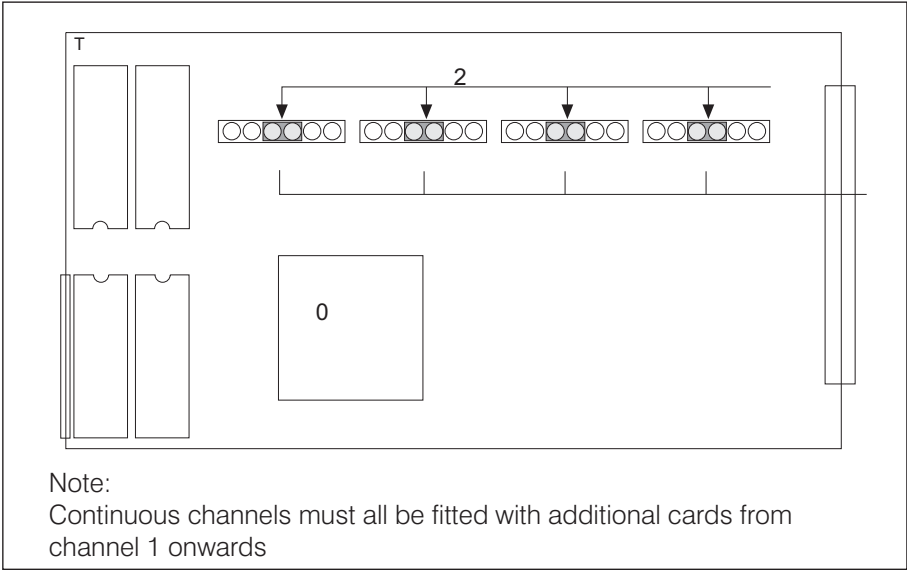


Power supply card

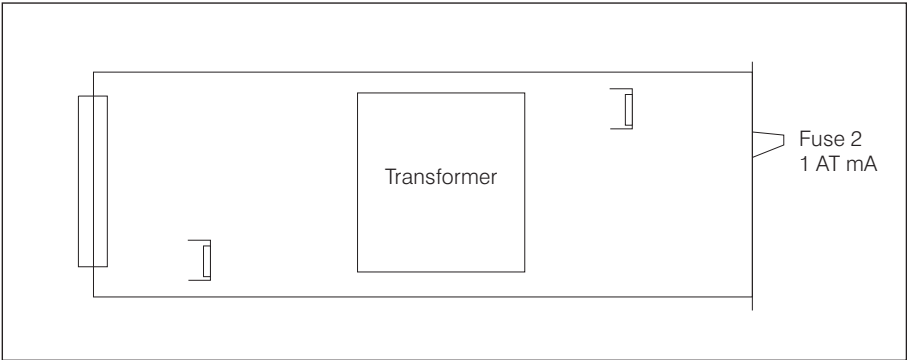

Plug-in p.c. card for a continuous output

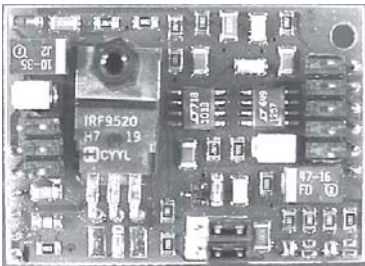

The standard control outputs are three-point step (except for a possible 5-channel. This is always continuous). Each TPS output can be reconfigured to make it continuous by plugging in an additional card.

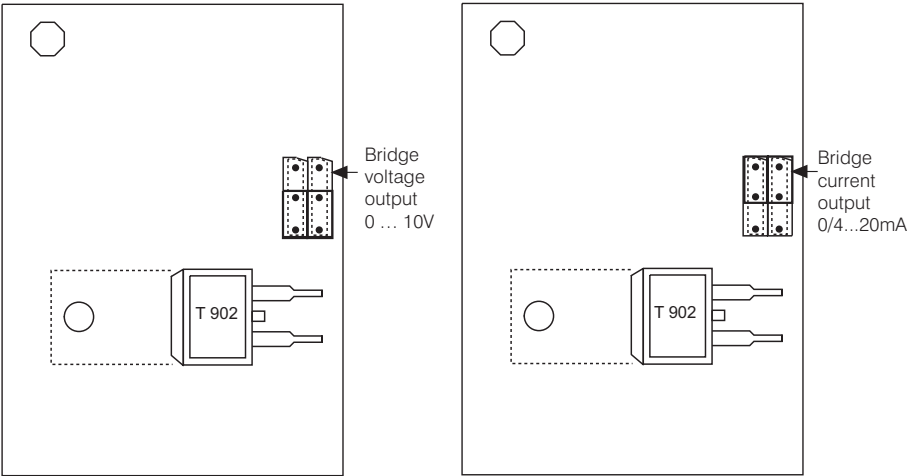

The jumpers serve only for hardware switching between current output and voltage output. The selection of 0 or 4 ... 20 mA is done through the software by means of parameters.

Parameter setting

The parameter level can be accessed by turning to the "Parameter" selector switch position. When working on level 1-4, this works only with the burner stationary (i.e. no signal on the digital inputs). Only level 0 is accessible with the burner running.



As a rule, the factory parameter settings are precisely tuned for the installation for which the unit has been designed. Therefore, it is only necessary to change parameter settings in exceptional cases.

Access levels

The parameters are divided into four different access levels according to function and safety classification:

Operating level (Level 0)

- Accessible without password, non-critical parameters that may possibly have to be altered during operation.

Customer level (Level 1)

- Accessible with modifiable password (on delivery set at "0000"), access to parameters, adjustment of which calls for technical knowledge, which are tailored to the system and which are not altered during operation.

Service level (Level 2)


- Accessible with a fixed password, but only to personnel specially trained in parameterisation. Access to all parameters that are not fixed on the basis of standards and technical regulations.

Production levels (Levels 3 and 4)

- Access to all parameters (only possible through LAMTEC)

Each parameter level is protected by its own checksum. This checksum serves to show that no changes have been made (see page 102).

Entering the password

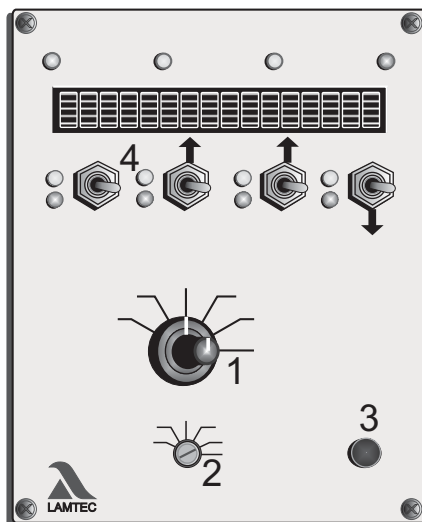

Selector switch (1) to status

Push switch (4), channel 2 and 3, up

and at the same time

push switch, channel 4, down

- the input field for the password appears on the display.


Set the appropriate password via the switch.

Acceptance key (3)

Parameters on the corresponding level are released.

Selector switch (2) to parameterisation

Changing the password

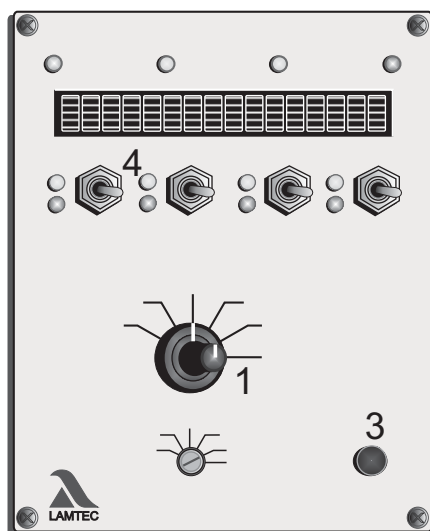

Only possible at customer level (level 1)

From level 1, once accessed:

Turn selector switch (1) to Status

Simultaneously push keys (4) channel 2 and 3 upwards
and channel 4 downwards

- the display shows the password input field


Set the new password for the level

Turn selector switch (1) to Digital inputs

Press the Acceptance key (3)

- new password is set

Changing parameters

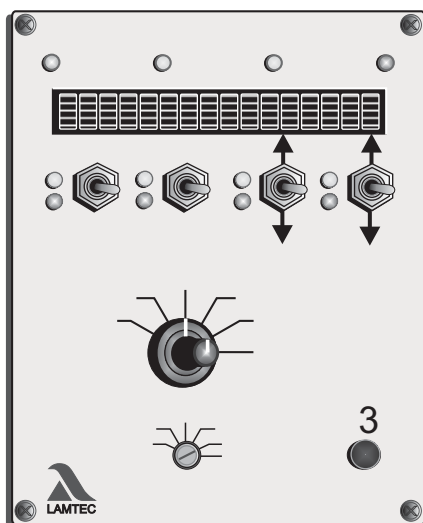

Select the required parameter with Channel 3 key

Change its value with Channel 4 key

- The values are accepted immediately without further confirmation

An explanatory text for the parameters can be called up by pressing
the Acceptance key (3)



For larger values, changes can be in x100 steps with Channel 1 key and
in x10 steps with Channel 2 key.

When changing the parameters via interface (by means of optional PC software) a check must then be made on the spot to ensure that the changes have been properly accepted. This can be done by reading out the parameters on the unit or by comparing the unit's checksums. See page 102 .

| Parameter-No. | Short designation | Safety level | Lower limit | Upper limit | Description | Standard values | Aids |
|---|-------------------|--------------|-------------|-------------|--|-----------------|------|
| Pre-ventilation | | | | | | | |
| 346 | VO LimK1 | 1 | 0 | 999 | Limit to which pre-ventilation can be terminated, Channel 1 | 999 | P4 |
| 347 | VO LimK2 | 1 | 0 | 999 | Limit to which pre-ventilation can be terminated, Channel 2 | 999 | P4 |
| 348 | VO LimK3 | 1 | 0 | 999 | Limit to which pre-ventilation can be terminated, Channel 3 | 999 | P4 |
| 349 | VO LimK4 | 1 | 0 | 999 | Limit to which pre-ventilation can be terminated, Channel 4 | 999 | P4 |
| 350 | VO LimK5 | 1 | 0 | 999 | Limit to which pre-ventilation can be terminated, Channel 5 | 999 | P4 |
| Running direction | | | | | | | |
| 374 | Laufr.K1 | 1 | 0 | 999 | Channel 1 running direction in event or fault | 2 | P6 |
| 0 = OFF (control element stops) 1 = Control element runs OPEN 2 = Control element runs CLOSED 3 = Control element runs to the setting 6 = Control element runs to its ignition point 8 = Control element runs to base load | | | | | | | |
| 375 | Laufr.K2 | 1 | 0 | 15 | Channel 2 running direction in event or fault | 2 | P6 |
| 376 | Laufr.K3 | 1 | 0 | 15 | Channel 3 running direction in event or fault | 2 | P6 |
| 377 | Laufr.K4 | 1 | 0 | 15 | Channel 4 running direction in event or fault | 2 | P6 |
| 378 | Laufr.K5 | 1 | 0 | 15 | Channel 5 running direction in event or fault | 2 | P6 |
| 427 | Vodel R | 1 | 0 | 999 | Re-circulation delay time (on FMS) No. of air duct points (VMS) | 750 | P71 |

| Parameter-No. | Short designation | Safety level | Lower limit | Upper limit | Description | Standard values | Aids |
|----------------|-------------------|--------------|-------------|-------------|---|-----------------|------|
| Correction | | | | | | | |
| 433 | K1 Spreiz | 1 | 0 | 999 | Spread factor for correction input (00.0 99.9) 01.0 = no expansion | 10 | P22 |
| 434 | K2 Spreiz | 1 | 0 | 999 | Spread factor for correction input (00.0 99.9) 01.0 = no expansion | 10 | P22 |
| 517 | KB11.1 | 0 | 0 | 999 | Correction range, correction input 1 | 0 | P7 |
| 597 | KB21.1 | 1 | 0 | 999 | Correction range, correction input 2 | 0 | P7 |
| Monitor output | | | | | | | |
| 677 | Moni.1 | 1 | 0 | 23 | Definition of the monitor output with curve set 1 <i>0= internal load</i> <i>1= channel 1 setting</i> <i>2= channel 2 setting</i> <i>3= channel 3 setting</i> <i>4= channel 4 setting</i> <i>5= channel 5 setting</i> <i>11= channel 1 actual value</i> <i>12= channel 2 actual value</i> <i>13= channel 3 actual value</i> <i>14= channel 4 actual value</i> <i>15= channel 5 actual value</i> <i>21= external load</i> <i>22= correction input 1</i> <i>23= correction input 2</i> <i>24=O₂-actual value</i> <i>25=O₂-setpoint</i> <i>26=Flame intensity</i> | 0 | P8 |
| 678 | Moni.2 | 1 | 0 | 25 | Definition of the monitor output with curve set 2 | 0 | P9 |
| 679 | Moni.3 | 1 | 0 | 25 | Definition of the monitor output with curve set 3 | 0 | P9 |
| 680 | Moni.4 | 1 | 0 | 25 | Definition of the monitor output with curve set 4 | 0 | P9 |
| 681 | Moni.5 | 1 | 0 | 25 | Definition of the monitor output with curve set 5 | 0 | P9 |
| 682 | Moni.6 | 1 | 0 | 25 | Definition of the monitor output with curve set 6 | 0 | P9 |
| 683 | Moni.7 | 1 | 0 | 25 | Definition of the monitor output with curve set 7 | 0 | P9 |
| 684 | Moni.8 | 1 | 0 | 25 | Definition of the monitor output with curve set 8 | 0 | P9 |
| 685 | Unt.Mo1 | 1 | 0 | 999 | Monitor output, curve set 1: 4 mA correspond to X points | 0 | P10 |
| 686 | Unt.Mo2 | 1 | 0 | 999 | Monitor output, curve set 2: 4 mA correspond to X points | 0 | P10 |
| 687 | Unt.Mo3 | 1 | 0 | 999 | Monitor output, curve set 3: 4 mA correspond to X points | 0 | P10 |
| 688 | Unt.Mo4 | 1 | 0 | 999 | Monitor output, curve set 4: 4 mA correspond to X points | 0 | P10 |

| Parameter-No. | Short designation | Safety level | Lower limit | Upper limit | Description | Standard values | Aids |
|---------------|-------------------|--------------|-------------|-------------|--|-----------------|------|
| 689 | Unt.Mo5 | 1 | 0 | 999 | Monitor output, curve set 5: 4 mA correspond to X points | 0 | P10 |
| 690 | Unt.Mo6 | 1 | 0 | 999 | Monitor output, curve set 6: 4 mA correspond to X points | 0 | P10 |
| 691 | Unt.Mo7 | 1 | 0 | 999 | Monitor output, curve set 7: 4 mA correspond to X points | 0 | P10 |
| 692 | Unt.Mo8 | 1 | 0 | 999 | Monitor output, curve set 8: 4 mA correspond to X points | 0 | P10 |
| 693 | Ob.Mo1 | 1 | 0 | 999 | Monitor output, curve set 1: 20 mA correspond to X points | 999 | P10 |
| 694 | Ob.Mo2 | 1 | 0 | 999 | Monitor output, curve set 2: 20 mA correspond to X points | 999 | P10 |
| 695 | Ob.Mo3 | 1 | 0 | 999 | Monitor output, curve set 3: 20 mA correspond to X points | 999 | P10 |
| 696 | Ob.Mo4 | 1 | 0 | 999 | Monitor output, curve set 4: 20 mA correspond to X points | 999 | P10 |
| 697 | Ob.Mo5 | 1 | 0 | 999 | Monitor output, curve set 5: 20 mA correspond to X points | 999 | P10 |
| 698 | Ob.Mo6 | 1 | 0 | 999 | Monitor output, curve set 6: 20 mA correspond to X points | 999 | P10 |
| 699 | Ob.Mo7 | 1 | 0 | 999 | Monitor output, curve set 7: 20 mA correspond to X points | 999 | P10 |
| 700 | Ob.Mo8 | 1 | 0 | 999 | Monitor output, curve set 8: 20 mA correspond to X points | 999 | P10 |

Flying curve change

| | | | | | | | |
|-----|----------|---|---|-----|--|---|-----|
| 702 | Luftvor | 1 | 0 | 999 | Air advance with flying curve change in points | 0 | P11 |
| 703 | Dauer LV | 1 | 0 | 999 | Duration of air advance with flying curve change in seconds | 0 | P11 |
| 704 | Wirku LV | 1 | 0 | 999 | Effect on air advance 0-Load / 1-Setting | 1 | P11 |

Band shift

| | | | | | | | |
|-----|----------|---|---|----|--|---|----|
| 707 | Wirk.Bve | 1 | 0 | 1 | Effect on band shift 0-Load / 1-Setting | 0 | P2 |
| 708 | BandV K1 | 1 | 0 | 50 | Band shift Channel 1 | 4 | P3 |
| 709 | BandV K2 | 1 | 0 | 50 | Band shift Channel 2 | 4 | P3 |
| 710 | BandV K3 | 1 | 0 | 50 | Band shift Channel 3 | 4 | P3 |

| Parameter-No. | Short designation | Safety level | Lower limit | Upper limit | Description | Standard values | Aids |
|---------------|-------------------|--------------|-------------|-------------|---|-----------------|------|
| 711 | BandV K4 | 1 | 0 | 50 | Band shift Channel 4 | 4 | P3 |
| 712 | BandV K5 | 1 | 0 | 50 | Band shift Channel 5 | 4 | P3 |
| Compound | | | | | | | |
| 718 | Laufz L | 1 | 0 | 65535 | Running time in pts./min for TPS Load input In the event of load via current or pot, the value must be 0 | 9999 | P12 |
| 719 | Laufz K1 | 1 | 0 | 65535 | Running time in pts./min for continuous output channel 1 | 9999 | P13 |
| 720 | Laufz K2 | 1 | 0 | 65535 | Running time in pts./min for continuous output channel 2 | 9999 | P13 |
| 721 | Laufz K3 | 1 | 0 | 65535 | Running time in pts./min for continuous output channel 3 | 9999 | P13 |
| 722 | Laufz K4 | 1 | 0 | 65535 | Running time in pts./min for continuous output channel 4 | 9999 | P13 |
| 723 | Laufz K5 | 1 | 0 | 65535 | Running time in pts./min for continuous output channel 5 | 9999 | P13 |
| 729 | stopVERB | 1 | 10 | 100 | Minimum compound running time in seconds | 10 | P15 |
| 730 | minTAKT1 | 1 | 1 | 100 | Minimum cycle length for channel 1 in 20ths seconds per digit (50 ms) | 1 | P16 |
| 731 | minTAKT2 | 1 | 1 | 100 | Minimum cycle length for channel 2 in 20ths seconds per digit (50 ms) | 1 | P16 |
| 732 | minTAKT3 | 1 | 1 | 100 | Minimum cycle length for channel 3 in 20ths seconds per digit (50 ms) | 1 | P16 |
| 733 | minTAKT4 | 1 | 1 | 100 | Minimum cycle length for channel 4 in 20ths seconds per digit (50 ms) | 1 | P16 |
| 734 | minTAKT5 | 1 | 1 | 100 | Minimum cycle length for channel 5 in 20ths seconds per digit (50 ms) | 1 | P16 |
| 740 | PauseT1 | 1 | 1 | 100 | Minimum pause between channel 1 cycles in 20ths seconds per digit (50 ms) | 2 | P27 |
| 741 | PauseT2 | 1 | 1 | 100 | Minimum pause between channel 2 cycles in 20ths seconds per digit (50 ms) | 2 | P27 |
| 742 | PauseT3 | 1 | 1 | 100 | Minimum pause between channel 3 cycles in 20ths seconds per digit (50 ms) | 2 | P27 |
| 743 | PauseT4 | 1 | 1 | 100 | Minimum pause between channel 4 cycles in 20ths seconds per digit (50 ms) | 2 | P27 |
| 744 | PauseT5 | 1 | 1 | 100 | Minimum pause between channel 5 cycles in 20ths seconds per digit (50 ms) | 2 | P27 |

Settings

List of Parameters
(Level 0 and 1 parameters only)

| Parameter-No. | Short designation | Safety level | Lower limit | Upper limit | Description | Standard values | Aids |
|--------------------------------------|-------------------|--------------|-------------|-------------|---|-----------------|------|
| 754 | ES aktiv | 1 | 10 | 100 | ES is activated when load falls by X points | 40 | P17 |
| 755 | Verz. ZÜ | 1 | 0 | 999 | Delay time of ignition position relay | 0 | P19 |
| 756 | Verz. GL | 1 | 0 | 999 | Delay time for base load with sep. ignition point | 0 | P20 |
| 757 | Verz. RG | 1 | 0 | 999 | Delay time for control release | 0 | P21 |
| 758 | ZEIT NA | 1 | 0 | 999 | Post-ventilation time | 0 | P18 |
| 759 | Verz. ZÜ | 1 | 0 | 30 | Ignition delay when setting after actuation of the ignition point | 0 | P29 |
| Control unit (not available for VMS) | | | | | | | |
| 768 | KuerznLE | 1 | 0 | 15 | Delay time for "Damper open" after fan on | 5 | P72 |
| 769 | D.n.Abs | 1 | 0 | 1 | Leak test after switching off 0 = Off, 1 = On | 0 | P53 |
| 772 | Dicht Zü | 1 | 0 | 1 | Leak test before starting 0 = Off, 1 = On | 1 | P53 |
| 777 | Prgüzeit | 1 | 0 | 9999 | Program monitoring time With content 0 no monitoring occurs | 4 | P40 |
| 782 | VorZüdel | 1 | 2 | 40 | Transformer pre-energise time (pre-ignition time) | 3 | P51 |
| 783 | Stab.zei | 1 | 3 | 100 | Stabilisation time | 3 | P52 |
| 785 | ZEIT VO | 1 | 30 | 999 | Pre-ventilation period | 30 | P54 |
| 787 | Wartung | 1 | 0 | 1 | Service mode, control unit runs only until stabilisation time | 0 | P60 |
| 789 | Nachbr.z. | 1 | 0 | 30 | Post-combustion time (flame signal irrelevant) in seconds | 10 | P62 |
| Power control unit (option) | | | | | | | |
| 790 | Lasttyp | 1 | 0 | 2 | Load control type 0 = off 1 = Fixed value control unit 2 = Atmosphere-controlled unit (possible only where there is hardware provision for this) | 0 | P80 |
| 791 | Anf.Temp. | 0 | 0 | 999 | Starting maximum temperature | 0 | P81 |
| 792 | Anf.Leis | 0 | 0 | 999 | Starting power | 0 | P82 |
| 793 | Anf.Zeit | 0 | 0 | 32767 | Starting time in minutes | 0 | P83 |
| 794 | ext.Lgre | 0 | 0 | 1000 | External power limit | 0 | P84 |

Settings

List of Parameters (Level 0 and 1 parameters only)

| Parameter-No. | Short designation | Safety level | Lower limit | Upper limit | Description | Standard values | Aids |
|---|-------------------|--------------|-------------|-------------|---|-----------------|------|
| 795 | SoftStop | 0 | 0 | 100 | Soft stop time □ Burner after running | 0 | P85 |
| 796 | Soll1min | 0 | 0 | 1000 | Control unit setting 1 minimum with atmosphere control/control unit setting 1 | | P86 |
| 797 | Soll1max | 0 | 0 | 1000 | Control unit setting 1 maximum with atmosphere control | | P86 |
| 798 | Soll2min | 0 | 0 | 1000 | Control unit setting 2 minimum with atmosphere control/control unit setting 2 | | P86 |
| 799 | Soll2max | 0 | 0 | 1000 | Control unit setting 2 maximum with atmosphere control | | P86 |
| 800 | Obergren | 0 | 0 | 1000 | Load regulator: upper limit with atmosphere control | | P87 |
| 801 | Untergren | 0 | 0 | 1000 | Load regulator: lower limit with atmosphere control | | P87 |
| 802 | Regelb.U | 0 | -999 | +999 | Control range, bottom | | P88 |
| 803 | Regelb.O | 0 | 0 | 999 | Control range, top | | P89 |
| 804 | Bren.AUS | 0 | 0 | 200 | Burner off | | P90 |
| 805 | P-Faktor | 0 | 0 | 999 | P-factor of control unit | 3 | P91 |
| 806 | I-Faktor | 0 | 0 | 999 | I-factor of control unit | 4 | P91 |
| 807 | D-Faktor | 0 | 0 | 999 | D-factor of control unit | 50 | P91 |
| 808 | Nachst.z | 0 | 0 | 60 | Rest time | 10 | P92 |
| 809 | L-Einheit | 1 | 0 | 3 | Load regulator actual value input and setting representation | 0 | P94 |
| 0 = Display in digits 1 = Display in °C 2 = Display in bar (XX.X) | | | | | | | |
| 810 | min.Einh. | 1 | 0 | 999 | Lower limit Pressure (4 mA) correspond to X bar | 0 | P95 |
| 811 | max.Einh. | 1 | 0 | 999 | Upper limit Pressure (4 mA) correspond to X bar | 0 | P95 |

Settings

List of Parameters (Level 0 and 1 parameters only)

| Para- meter- No. | Short design- nation | Safety level | Lower limit | Upper limit | Description | Standard values | Aids |
|------------------------|----------------------------|-----------------|----------------|----------------|---|--------------------|------|
| 814 | Leist. 1 | 1 | 0 | 1000 | Power output of burner with curve set 1 | | P91 |
| 815 | Leist. 2 | 1 | 0 | 1000 | Power output of burner with curve set 2 | | P91 |
| 816 | Leist. 3 | 1 | 0 | 1000 | Power output of burner with curve set 3 | | P91 |
| 817 | Leist. 4 | 1 | 0 | 1000 | Power output of burner with curve set 4 | | P91 |

Interface

| | | | | | | | |
|--|---------|---|---|----|----------------------------------|---|-----|
| 822 | BaudS 1 | 1 | 0 | 5 | Baud rate of serial interface 1 | 4 | P23 |
| 823 | BaudS 2 | 1 | 0 | 5 | Baud rate of serial interface 2 | 4 | P23 |
| 0 = 1200 3 = 9600 1 = 2400 4 = 19200 2 = 4800 5 = 38400 | | | | | | | |
| 826 | Adr.S 1 | 1 | 0 | 31 | Network address VMS / FMS ser. 1 | 0 | P24 |
| 827 | Adr.S 2 | 1 | 0 | 31 | Network address VMS / FMS ser. 2 | 0 | P24 |

Display

| | | | | | | | |
|---|-------------|---|---|-------|---|-----|-----|
| 831 | Helligt | 1 | 0 | 6 | Brightness of display in steps 0 = 100 % ... 6 = 13 % | 5 | P25 |
| 832 | DispOFF | 1 | 0 | 65535 | Display switch-off time in minutes (0 = none) i.e., time after operation until switched back to lowest brightness level | 15 | P26 |
| 833 | Sprache | 1 | 0 | 6 | Selection of language display | 0 | |
| 0 = German 4 = Swedish 1 = English 5 = not assigned 2 = French 6 = Dutch 3 = not assigned | | | | | | | |
| 838 | Int.L.AU | 1 | 0 | 999 | Value of internal load in AU mode (for external power display) | 200 | |
| 839 | LastTotb | 1 | 0 | 15 | Dead band definition +/- this value does not alter load | 10 | P14 |
| 850 | Einh. Kan.1 | 1 | 0 | 3 | Represented unit channel 1 0 = digits 2 = pressure, steam, 1 = °C (temp.) rev speed, quantity 3 = mA | 0 | P55 |
| 851 | Einh. Kan.2 | 1 | 0 | 3 | Represented unit channel 2 | 0 | P55 |

| Parameter-No. | Short designation | Safety level | Lower limit | Upper limit | Description | Standard values | Aids |
|---------------|-------------------|--------------|-------------|-------------|--|-----------------|------|
| 852 | Einh. Kan.3 | 1 | 0 | 3 | Represented unit channel 3 | 0 | P55 |
| 853 | Einh. Kan.4 | 1 | 0 | 3 | Represented unit channel 4 | 0 | P55 |
| 854 | Einh. Kan.5 | 1 | 0 | 3 | Represented unit channel 5 | 0 | P55 |
| 860 | R4mA K1 | 1 | 0 | 999 | 4 mA feedback corresponds to x units channel 1 | 0 | P55 |
| 861 | R4mA K2 | 1 | 0 | 999 | 4 mA feedback corresponds to x units channel 2 | 0 | P55 |
| 862 | R4mA K3 | 1 | 0 | 999 | 4 mA feedback corresponds to x units channel 3 | 0 | P55 |
| 863 | R4mA K4 | 1 | 0 | 999 | 4 mA feedback corresponds to x units channel 4 | 0 | P55 |
| 864 | R4mA K5 | 1 | 0 | 999 | 4 mA feedback corresponds to x units channel 5 | 0 | P55 |
| 870 | R20 mA K1 | 1 | 0 | 999 | 20 mA feedback corresponds to x units channel 1 | 0 | P55 |
| 871 | R20 mA K2 | 1 | 0 | 999 | 20 mA feedback corresponds to x units channel 2 | 0 | P55 |
| 872 | R20 mA K3 | 1 | 0 | 999 | 20 mA feedback corresponds to x units channel 3 | 0 | P55 |
| 873 | R20 mA K4 | 1 | 0 | 999 | 20 mA feedback corresponds to x units channel 4 | 0 | P55 |
| 874 | R20 mA K5 | 1 | 0 | 999 | 20 mA feedback corresponds to x units channel 5 | 0 | P55 |
| 880 | Einh. K01 | 1 | 0 | 3 | Represented unit correction input 1 | 0 | P55 |
| 881 | Einh. K02 | 1 | 0 | 3 | Represented unit correction input 2 | 0 | P55 |
| 882 | 4mA KOK 1 | 1 | 0 | 999 | 4 mA feedback correspond to X of correction input 1 | 0 | P52 |
| 883 | 4mA KOK 2 | 1 | 0 | 999 | 4 mA feedback correspond to X of correction input 2 | 0 | P52 |
| 884 | 20mA KOK 1 | 1 | 0 | 999 | 20 mA feedback correspond to X of correction input 1 | 0 | P52 |
| 885 | 20mA KOK 2 | 1 | 0 | 999 | 20 mA feedback correspond to X of correction input 2 | 0 | P52 |

Settings

List of Parameters
(Level 0 and 1 parameters only)

| Parameter-No. | Short designation | Safety level | Lower limit | Upper limit | Description | Standard values | Aids |
|---|-------------------|--------------|-------------|-------------|---|-----------------|------|
| Parameter for O ₂ regulation | | | | | | | |
| 896 | O2Regler | 0 | 0 | 9 | O ₂ -Regulator 0 = O ₂ regulator off 8 = Only display, base value 1 = Standard regulator for deact. O ₂ regulator 2 = Without lag time 9 = Only display, base value 3 = only display for air shortage neutral value | 1 | P30 |
| 897 | O2Stoer | 1 | 0 | 2 | Error shut-down by O ₂ regulator permitted (0=No, 1=on air shortage) | 0 | P31 |
| 898 | O2-TotZ | 0 | 3 | 20 | Lag time of the O ₂ regulation section | 15 | P32 |
| 899 | O2-P-Fak | 0 | 1 | 50 | O ₂ P-factor | 5 | P32 |
| 900 | O2 TZ - | 0 | 0 | 5 | Lag time shortening of the O ₂ regulation section with full load | 3 | P32 |
| 901 | O2Neutr1 | 1 | 0 | 1000 | Correction value output on deactivated O ₂ regulation. Fuel 1 | 300 | P31 |
| 902 | O2Neutr2 | 1 | 0 | 1000 | Correction value output on deactivated O ₂ regulation. Fuel 2 | 300 | P31 |
| 903 | O2FWZeit | 1 | 0 | 9999 | O ₂ deactivated after fuel change in sec.. | 30 | P33 |
| 904 | O2WarteZ | 1 | 0 | 9999 | O ₂ regulation active after ignition in sec. | 90 | P34 |
| 910 | O2Totbnd | 2 | 0 | 10 | O ₂ lag band in 0.1% | 2 | |
| 914 | O2Aktiv | 0 | 0 | 999 | Activate O ₂ regulation from load position X (in pts) | 0 | P35 |
| 915 | O2Deakti | 0 | 0 | 999 | Deactivate O ₂ regulation from load position X (in pts) | 999 | P35 |
| 917 | LftmKor1 | 1 | 0 | 999 | Air shortage correction value, fuel 1 | 150 | P31 |
| 918 | LftmKor2 | 1 | 0 | 999 | Air shortage correction value, fuel 2 | 150 | P31 |
| 919 | O2 4mA | 1 | 0 | 999 | O ₂ value 4mA | 0 | P36 |
| 920 | O2 20mA | 1 | 0 | 999 | O ₂ value 20mA | 250 | P36 |
| 931 | O22UBU1G | 1 | 0 | 250 | Lower 2nd monitoring band, fuel 1 in % of target value, base load | 100 | P37 |
| 932 | O22UBU1V | 1 | 0 | 250 | Lower 2nd monitoring band, fuel 1 in % of target value, full load | 100 | P37 |
| 933 | O22UBU2G | 1 | 0 | 250 | Lower 2nd monitoring band, fuel 2 in % of target value, base load | 100 | P37 |
| 934 | O22UBU2V | 1 | 0 | 250 | Lower 2nd monitoring band, fuel 2 in % of target value, full load | 100 | P37 |
| 936 | O2SOWert | 0 | 0 | 65535 | Probe dynamic test | 2 | P38 |

Procedure description

The burner's startup proceeds exactly as already described, except that an enabling command to start the burner must have been provided by the output regulator. In other words, the actual value must be smaller than the set-point by an appropriate amount.

The output regulator only operates once the burner has fired up and the signal "Enable regulation" (terminal 4) has been given. Load specification for the compound is then provided via the integral output regulator.

It depends on the difference between the actual value and the set-point, and on the control parameters set.


If the actual value exceeds the maximum value set, the output regulator shuts down the burner.

The load regulator is only active in "Automatic" mode.

Weather control

If the output regulator is configured as "weather controlled", the set-point can be shifted between the parameters SetpointMin and SetpointMax by altering the value at the redundant feedback channel 1.

When the regulator is weather-controlled, the outside temperature is taken into account when calculating the set-point. The operator can input a minimum and a maximum set-point, between which the outside temperature can determine the set-point (see diagram).

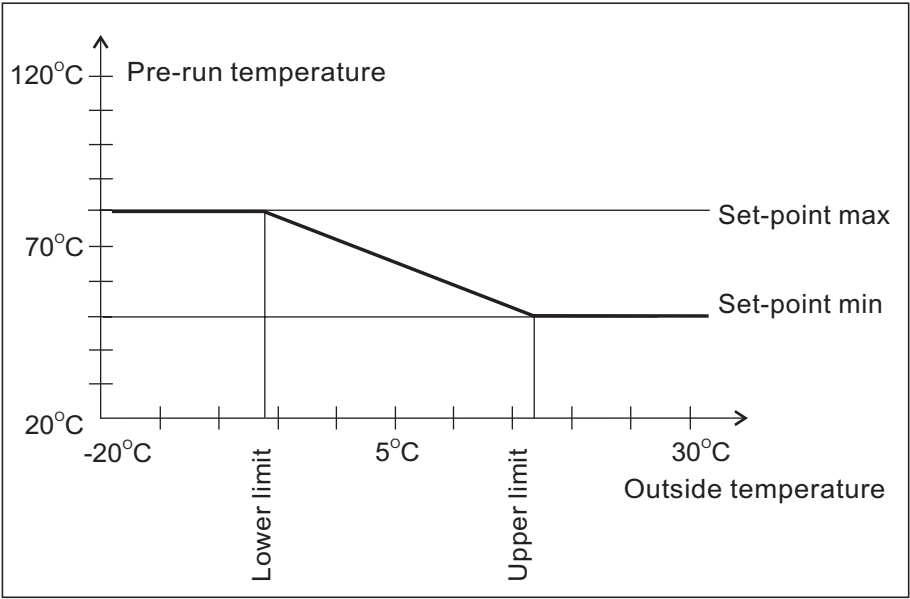

With the weather-controlled option activated, an external set-point specification can also be implemented.

Set-point switch-over

The set-point can be switched over via a digital input. In versions with a fixed set-point, this contact can be used to select between the two values entered in the parameters list.


If, in addition, weather control is activated, a selection is made between two pairs of limiting values (see Weather control and Limiting ranges). The parameters for Set-point 1 (for set-point switch-over) and Set-point min. 1 (for weather control) are equal. Similarly for the parameters Set-point 2 and Set-point min. 2. The relevant content is assigned in accordance with the configuration.

Activating the "Weather control" option and adjusting the variable parameters can also be used to implement external set-point specification. In other words, the set-point can be altered manually or automatically via a potentiometer (or switched through resistors). Thus, by connecting a double-throw switch, night-time reduction could be implemented instead of weather control. Night-time reduction and weather control can be achieved simultaneously by combining the weather controller with the set-point switch-over. When the weather controller is active, the compound's feedback can no longer proceed completely redundantly.

Startup circuit

The load regulator has a startup circuit, in order to brake the burner's start load. The startup circuit is run during each new burner start. The internal load is held at a value adjustable by the user, for as long as the boiler is cold (actual value is below a user-adjustable limit). If the regulator's actual value is equal to or larger than the parameterised startup maximum temperature, this limit is overridden.


In order to prevent a situation where with an excessively large demand on system output, the boiler temperature necessary to override the startup circuit is not reached, a startup timer is also triggered in parallel (this timer can also be adjusted by the operator). Once the internal load's value reaches the parameterised startup load, the output limit is increased linearly step-wise up to the maximum load. The slope of this linear increase is calculated from the parameterised startup time.

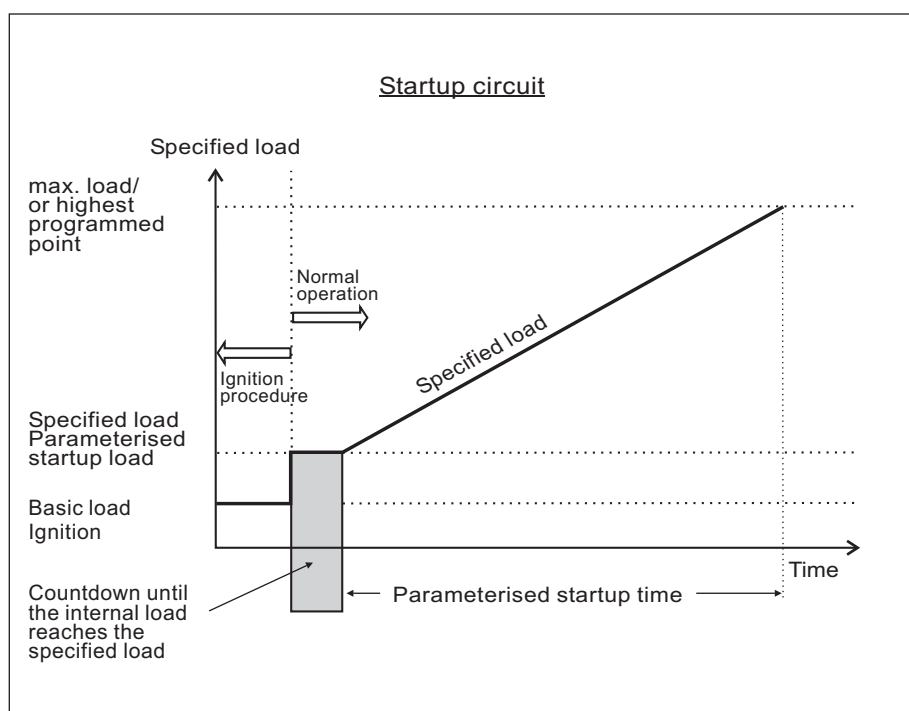


Thermostat and control region

The thermostat function switches the burner on or off, as a function of the temperature and/or pressure. However, this only happens if the burner has been enabled by the startup signal. The control region is formed by entering the regulator's set-point and the "Burner on" value (parameter). The shutdown hysteresis is divided into 3 regions. Generally speaking, the first section lies below the set-point. The second section lies above the set-point and bounds the control region, whilst the third section also lies above the set-point and forms the rundown region. Thus, the control region can lie asymmetrically around the set-point.

Within the upper and the lower control region, the load regulator operates in accordance with its set parameters and specifications. If the regulator's actual value reaches the rundown region, a basic load demand is output to the compound. If the regulator's set-point exceeds the rundown region, the regulator is shut down. A new startup can take place once the actual value falls below the switch-on point. This function can replace the control thermostat required in the system.

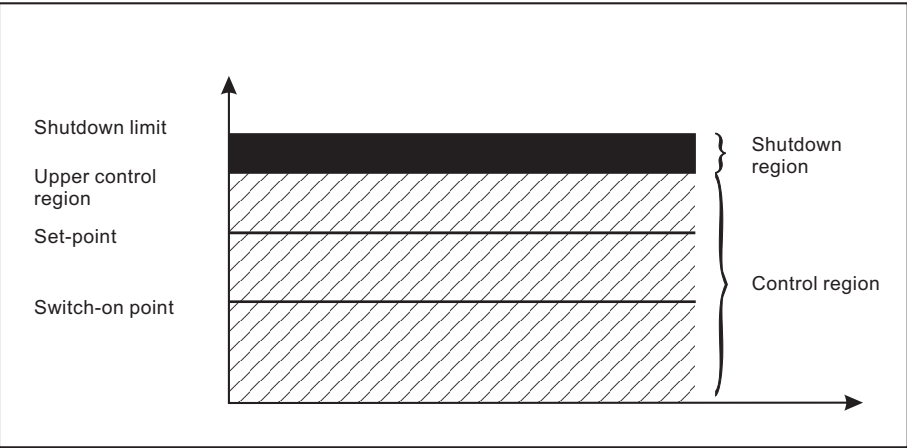


Manual control

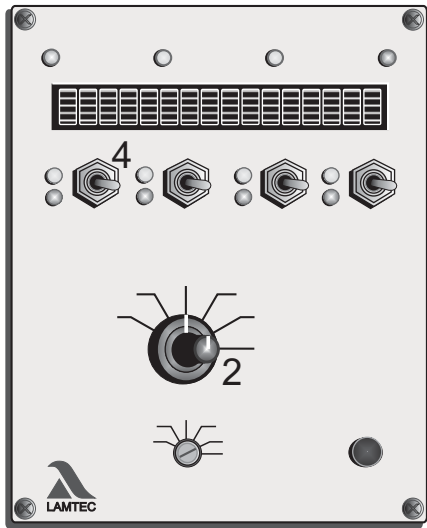


The output regulator's load specification can be overwritten by setting the selector switch (2) to "Load" and pressing the Channel 1 switch (4) upwards. This manual load control is cancelled by pressing the Channel 2 switch downwards. The shutdown limit is non-operational in manual mode. Hence the manual mode can be used to test the safety limiter.

In manual mode, the load regulator's functions such as startup circuit and control thermostat are switched off therefore always monitor the system continuously when using manual control.

Interpreting the display The display when "Load" is selected

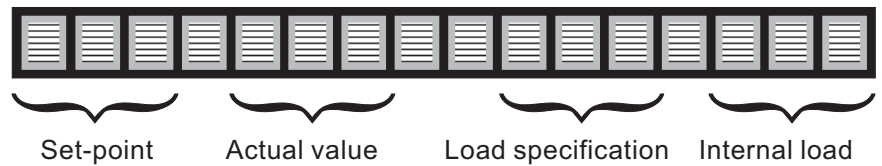

The display in manual operation

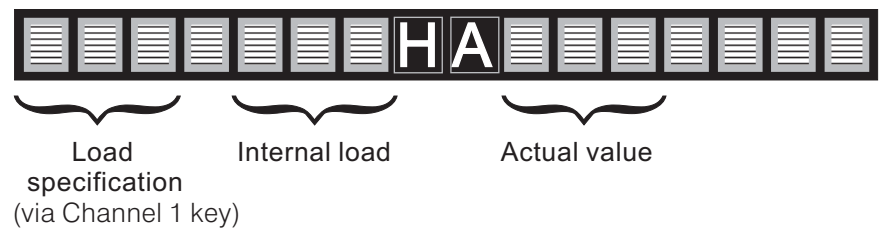

Setting the output regulator

The output regulator is only adjusted via the parameters.


Control region

The regulator's set-point lies below the value "Upper control region" "Burner on" value (parameter 802). The content of the parameter "Switch-on point" is subtracted from the set-point, giving the switch-on value. The value of the "Upper control region" (parameter 803) is added to the set-point and forms the control region's upper limit. Thus, the control region can lie asymmetrically around the set-point. The switch-on point can also be above the set-point; a negative value (<0) needs then to be input.

The rundown region is limited from above by the parameter "Burner off" (parameter 804). The parameter is added to the set-point. If this value is exceeded, the burner is shut down (via a relay output).

The region between the "Upper control region" and the "Shutdown limit" is the rundown region. If the actual value reaches this region, the compound returns to base load.

It also follows from the above that in general, the value in "Burner off" is greater than the one in "Upper control region". Otherwise there is no rundown region, and the burner is shut down directly when reaching the limit.

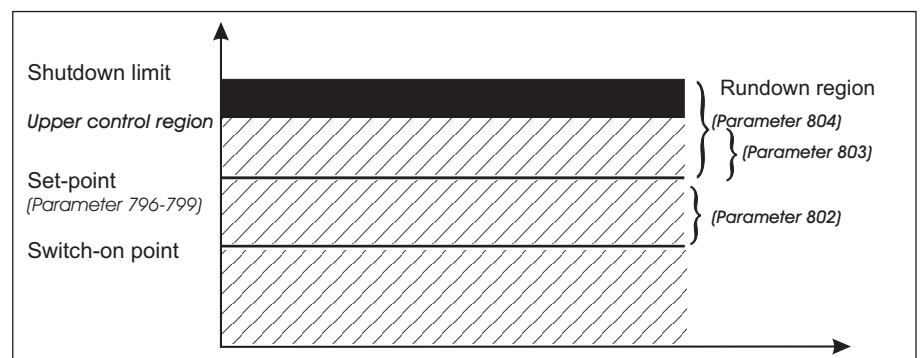

Regulator behaviour

The load regulator attempts to adjust the actual value to the set-point. A direct relationship between the internal load and the boiler's temperature is assumed. In other words, the higher the internal load, the faster the boiler's temperature rises.

The load regulator would not function if the curves were programmed otherwise.

Four parameters determine the regulator's behaviour:

Readjustment interval

The readjustment interval determines how often the deviation is monitored and a new adjustment calculated.

Example: a value of 10 in parameter 808 means that this procedure is carried out every ten seconds.

The value should correspond to the control section's lag time.

P-factor

The proportional factor acts directly on the deviation, i.e. the difference between the set-point and the actual value. The set factor is divided by 10 for the adjustment.

Example: with a set-point of 500, an actual value of 460 and a P-factor of 12, this results in a proportionality fraction of +48.

$$\frac{(500 - 460) \cdot 12}{10}$$

I-factor

The integral factor is calculated from the momentary deviation and the previous deviation from the set-point. The set factor is divided by 10 for the adjustment.


Example: with a set-point of 600 and a momentary actual value of 620, this results in an actual deviation of -20. Assume the actual value was 622 at the last calculation, i.e. before the set readjustment interval, giving a previous deviation of -22. With the factor set to 5, the adjustment would be -21 points (-42×0.5) .

D-factor

The difference factor is calculated from the change in the actual value. It is also divided by 10.

Example: the previous actual value (before the readjustment interval) was 600. The current actual value is 605. With a D-factor of 50, this results in a D-fraction of -25 points (-5×5) .

Example

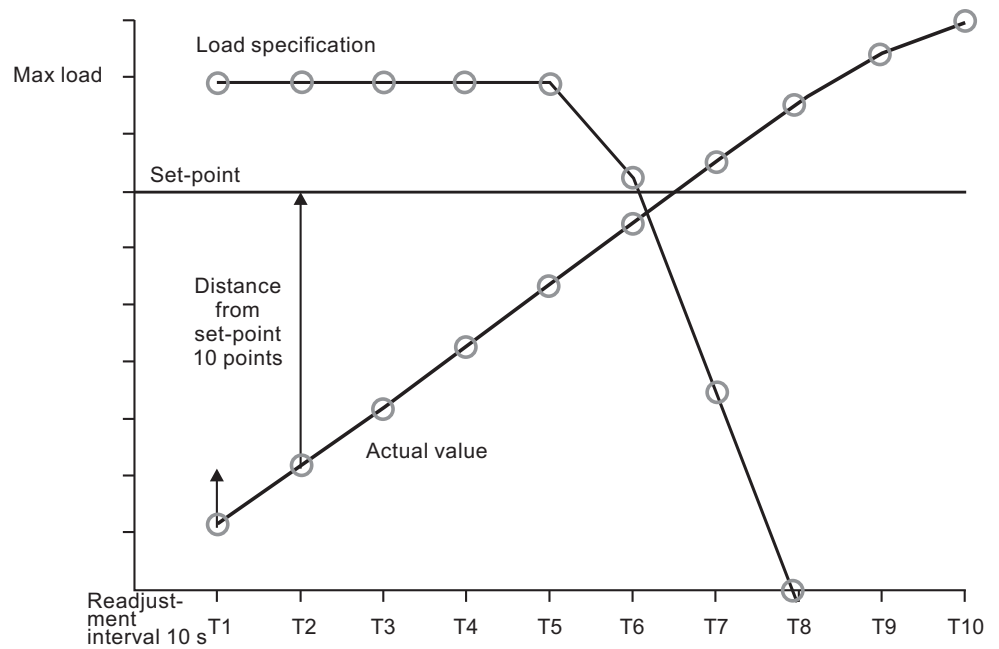

Parameters set in this example:

P-factor 10

I-factor 5

D-factor 50

| Time | T2 | T3 | T4 | T5 | T6 | T7 | T8 | T9 | T10 |
|--------------------------------|-----|-----|-----|-----|-----|-----|-------|-----|-----|
| Deviation from set-point | -45 | -35 | -25 | -15 | -5 | +5 | +14 | +22 | +28 |
| Change in actual value | +10 | +10 | +10 | +10 | +10 | +10 | +9 | +8 | +6 |
| P-fraction | +45 | +35 | +25 | +15 | +5 | -5 | -14 | -22 | -28 |
| I-fraction | +50 | +40 | +30 | +20 | +10 | 0 | -9,5 | -18 | -25 |
| D-fraction | -50 | -50 | -50 | -50 | -50 | -50 | -45 | -40 | -30 |
| Load specification adjusted by | +45 | +25 | +5 | -15 | -35 | -40 | -63,5 | -80 | -83 |

Regulator behaviour

- All three fractions (P-fraction, I-fraction, D-fraction) are added together and act as an adjustment to the compound regulator's load specification. The value is added to the momentary internal load.
- As long as the actual value is below the set-point, the P-fraction and the I-fraction are positive, i.e. both these fractions act to increase the load specification.
- Only the D-fraction is still negative in such a case (assuming the boiler's temperature is rising).
- A sufficiently large D-factor should be selected, in order to avoid an excessively large overshoot during burner startup.
- The D-fraction can also be increased by increasing the readjustment interval, since the boiler has more time for a change in temperature.
- If, despite a large set-point deviation, the burner is not driven to full load or base load respectively, the P-factor should be increased.
- The larger the readjustment interval, the quieter the compound but also the larger the actual value's deviation from the set-point and the slower the adjustment.
- The overshoot effect can result in a failure of the control mechanism, hence the readjustment interval should be so selected that the compound (the internal load) settles down.

Examples

| Hot water installations | | Steam boiler installations |
|-------------------------|-----|----------------------------|
| P-factor: | 4 | 10 |
| I-factor: | 3 | 5 |
| D-factor: | 250 | 100 |

Readjustment interval: corresponds to the control section's lag time.

Before commissioning

Adjusting motor
limit switch



As soon as the VMS is supplied with voltage, it attempts to drive the actuator motors to the lower boundary of the factory curve. If the end-bearing's limit switches are not properly adjusted for this then the motor may hit the actuator's mechanical stop.


This can damage the motor or the valve.

Therefore:

Check the position of the end-bearing limit switches in the motors, taking into account the motor output shaft's travel.

If in doubt, set a shorter travel. It can be readjusted later.

Function test

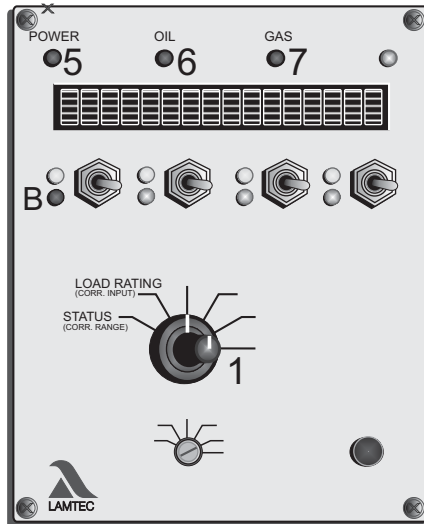

Signal on terminal 2 (boiler thermostat) = 0 or 1
 Signal on terminal 3 = 0
 Signal on terminal 4 (Control release) = 0
 Signal on terminal 8 = 0
 Control quantity (load rating) is minimum.
 Selector switch for mode (2) set to "Automatic"


Apply voltage to unit:
 Unit performs a self-test
 VMS appears briefly on display
 Software version No. appears on display

Compare software version No. with number on the sticker
 - operating display (5) lights up
 - fuel LED (6 or 7) lights up
 - the four "CLOSED" LEDs (B) light up

Selector switch (1) to "Status"
 "OFF" appears on the display

Selector switch (1) to "Load rating"
 The following appears:
 - for external load default » 200
 - for internal load control unit » 0

Aids

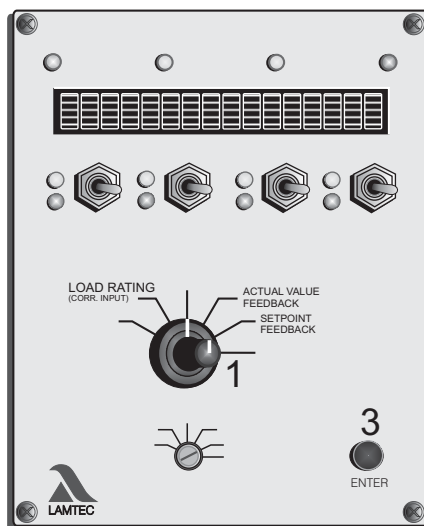

Set selector switch (1) to "Set-point feedback"

- the programmed value of the external feedback appears
 (120, if no curve has yet been programmed)

Set selector switch (1) to "Actual value feedback"
 - the instantaneous value of the external feedback appears
 via 0 ... 20 mA » 0
 via 4 ... 20 mA » 200
 via potentiometer » 120
 (normally, but not necessarily)

The values indicated only appear, however, if the control element is situated at the bottom stop.

Set selector switch (1) to "Load rating"

and


Press acceptance (3) (and keep pressed)
 - The instantaneous value of the correction inputs is displayed
 - KO appears between the channels
 the display is in %, irrespective of the input signal setting
 (0 ... 20 mA or 4 ... 20 mA)

Set selector switch (1) to "Status"
and
Press Acceptance (3) (and keep pressed)
- the instantaneously set correction range appears
- KB appears between the channels

On a 4-channel unit:
Selector switch (1) to "digital inputs"

On a 5-channel unit:
Selector switch (1) to channel 5 display
and
Press Acceptance (3)
- the condition of the digital inputs appears
- "-" signifies input not activated
- "↑" signifies input activated



Significance of VMS
digital input display

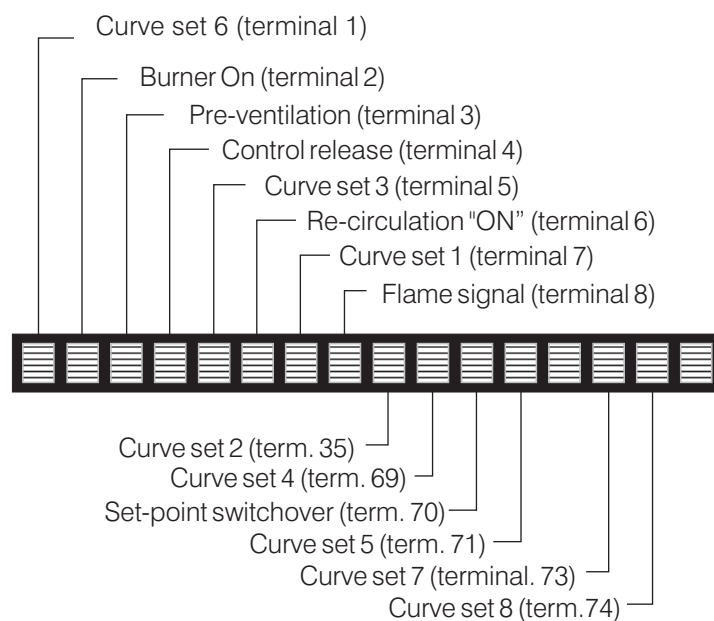

↑ = signal present
- = signal not present

Aids

Operation of control elements for potentiometer adjustment and limit switch settings

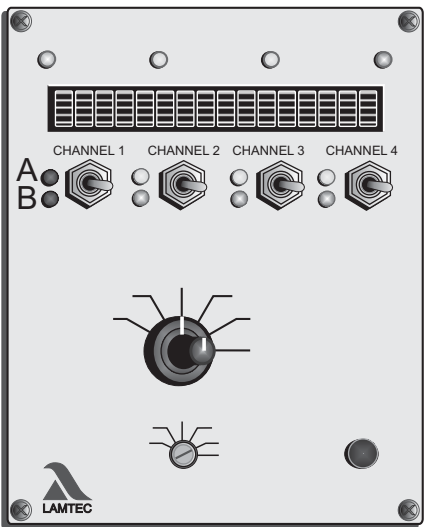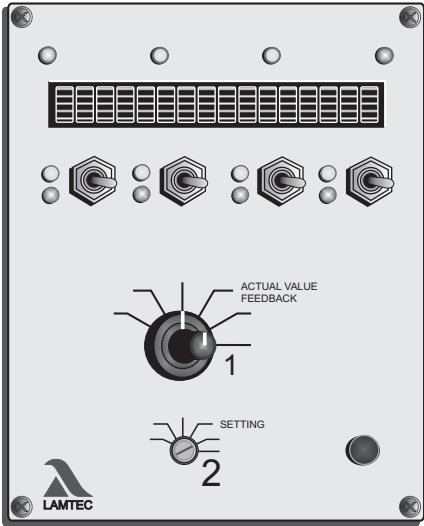

“Setting” mode permits direct access to the control elements. It is therefore essential to follow the safety rules laid down by the burner manufacturer!

Adjust the control elements only when the system is at rest.

Selector switch (1) to "Actual value feedback"

Selector switch (2) to "Setting"

- “EI” appears on the display

Set "Lower stop"

Set the channel's target value to "0" via key (4)

- Red LED (B) comes on
- Actuator responds
 - e.g. fan runs down or
 - motor moves in the "CLOSED" direction

Limit switch to "CLOSED". Adjust valve stop

Program the frequency converter to minimum rev. speed

Turn selector switch (1) to "Feedback actual value"

Adjust potentiometer to lower value (see table below)

Set "Upper stop"

Turn selector switch (1) to "Target value"

Set target value = 999

Limit switch to "open" Adjust valve stop

Check frequency converter's maximum rev. speed

Turn selector switch to "Feedback actual value"

Check upper potentiometer value (see table)

Check rev. speed feedback value (see page 126)

Potentiometer adjustment values (approximate)


| Pot | Lower stop* | Upper stop* |
|-----|-------------|-------------|
| 5kΩ | 80 | 920 |
| 1kΩ | 200 | 800 |

* assuming that full potentiometer rev. range is utilised

Aids

C1
B1
E2

Programming the compound

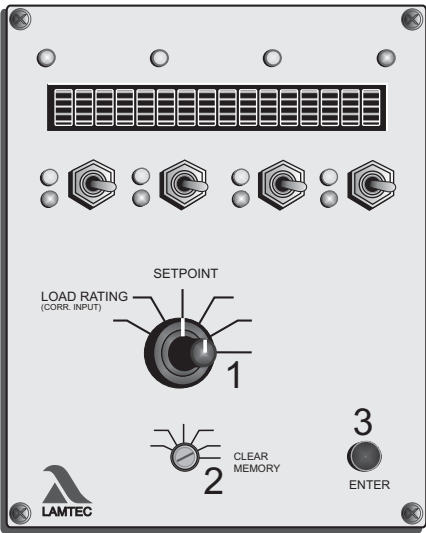

Entirely new curve,
Clear memory

Final programming of the unit with the burner stationary can only be done when it is certain that all feedback signals are present in the same way as with the burner running (e.g. not temperature-dependent or active speed feedback). Otherwise program with burner running.

either with burner stationary
VMS
Signal on terminal 2 (boiler thermostat) = 0 or 1
Signal on terminal 3 = 0 display AU
Signal on terminal 4 (Control release) = 0 or BE
Signal on terminal 8 = 0

or with burner running
VMS:
Signal on terminal 2 (boiler thermostat) = 1
Signal on terminal 3 = 0
Signal on terminal 4 (Control release) = 1
Signal on terminal 8 = 1

Programming can be performed only with the signal combinations indicated. Otherwise the unit registers a fault and/or will accept no inputs. It may be necessary to wait for the automatic firing sequence control to release the control before programming with the burner running (via mode "EV", "EZ", "EG").

If burner drops out whilst programming in process
e.g. owing to control shut-off
- proceed to page 73 (continue programming)

If VMS skips to "ES" mode whilst programming
is in progress
- see page 73

Selector switch (1) to load rating
- set load rating to 200 via channel 1 switch

Selector switch (1) to set-point


Mode selector switch (2) to "Clear memory"
- "SL" appears in centre of display

Press Acceptance (3):
- "cleared" appears on display

When programming the ignition load point for the first time, it is recommended that the VMS be initially started via the automatic firing sequence control. At the end of the pre-ventilation time all channels close. As soon as a switch is operated the "EI" mode is reactivated and the ignition point can be set

Aids

Programming 1st point
(separate ignition point)

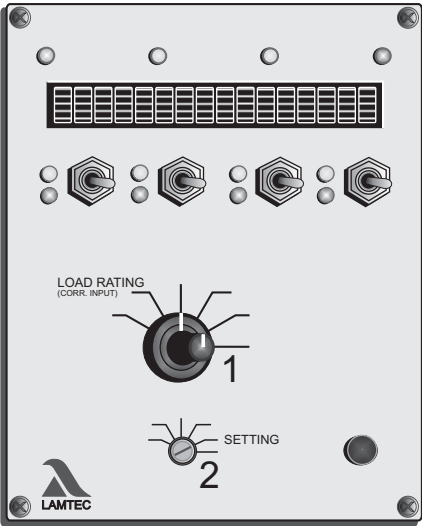

For safety reasons
"Setting" mode permits direct access to the control elements with the burner running. It is therefore essential to follow the safety rules laid down by the burner manufacturer!


"Setting mode" with the system running must only be undertaken by trained and experienced personnel, whilst keeping a constant watch on the system.

The first point entered after clearing the memory is always the ignition load point. This is fixed at a load rating that can no longer be run to whilst in operation (load rating 002)

Mode selector switch (2) to "Setting"
- "EI" appears in the middle of the display

Aids

A6

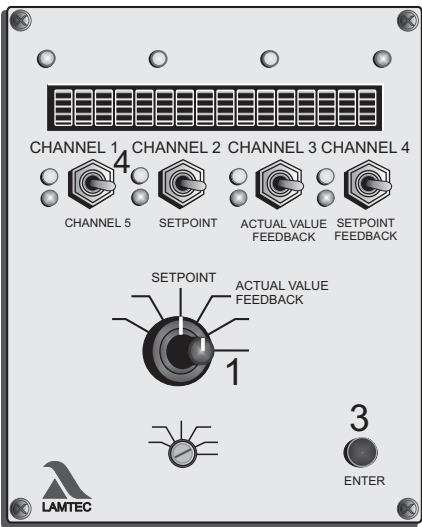

Selector switch (1) to "Set point"

Switch (4) up or down
until system is optimally adjusted at ignition load point
- control element reacts
- display changes

On VMS 5: Selector switch (1) to "Channel 5 display"
- set point and feedback actual value are displayed

Switch (4) (channel 2) up or down
until channel 5 is optimally adjusted

Selector switch (1) to "Actual value feedback"
- Value of the external feedback (with continuous output) is displayed
- with three-point step channel the same value as in "set point" position is displayed

Wait until feedback has stopped

E2
B1,C1,E12


Programming with burner running
(i.e. pre-ventilation has been carried out previously without programmed point)

Press Acceptance (3)
- "Really ignite?" appears on display

By operating the switch the ignition point setting can be corrected again

Programming
with burner stationary

Programming 2nd to 19th point

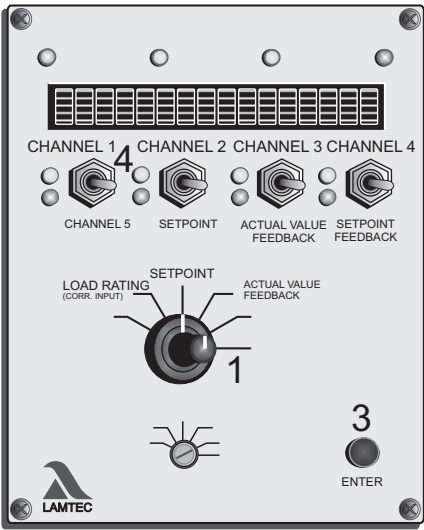

Press Acceptance (3) again

- burner ignites
- sep. ignition point appears on display

Press Acceptance (3)

- ignition point 1 appears on display

Selector switch (1) to "Load rating"

Run to desired load rating using channel 1 switch

Selector switch (1) to "set point"

Switch (4) up or down
until system is optimally adjusted at instantaneous load rating

On VMS 5: Selector switch (1) to "Channel 5 display"

- set point and actual value feedback are displayed.

Switch (4) (channel 2) up or down

- until channel 5 is optimally adjusted

Selector switch (1) to "Actual value feedback"

Wait until feedback has stopped

Press Acceptance (3)

- Point X appears on the display (X is the number of the programmed point. That is, at the 4th press of the acceptance key, point 4)



A load point on the curve must be the lowest possible load rating that can be pre-set by the load control unit in operation, otherwise the compound cannot completely follow the load control unit. The compound does not go below its lowest point even in the event of lower load requirements.

Aids


E2,B1,C1

E12

E12

A16

Programming
last top point

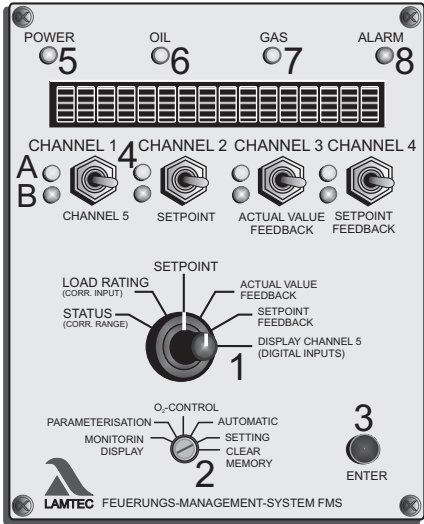

Selector switch (1) to "Load rating"

Run to top load rating

- 999 on the display (corresponds to 20 mA on the load input)

Aids

D4, D6

It is essential to run to the highest load rating that can be pre-set by the load control unit in operation, otherwise the compound cannot completely follow the load control unit. The compound does not go above its highest point even in the event of higher load requirements

Selector switch (1) to "set point"

Switch (4) up or down

until system is optimally adjusted at instantaneous load rating

On VMS 5: Selector switch (1) to "Channel 5 display"

- set point and actual value feedback are displayed.

Switch (4) (channel 2) up or down

until channel 5 is optimally adjusted

Selector switch (1) to "Actual value feedback"

Wait until feedback has stopped

Press Acceptance (3)

- Point X appears on the display

Store curve

Switch mode selector switch (2) from "Setting" to "Automatic"

- "Memory" appears briefly on the display.

The curve has been transferred into the EEPROM

A5, A10

Check monitoring values

Mode selector switch (2) to "Monitoring display"

- The display skips to the values of the monitoring section

Selector switch (1) to "Load rating"

Run to programmed load ratings


Selector switch to "Set-point" or "Actual value feedback"

For specimen report, see appendix page 137



The monitoring values may clearly deviate from the values of the main processor, depending on the configuration (redundant signals or not). What is important is that the actual value and set-point value for the respective processor agree, not that there is agreement between the values of different processors.

Adding points

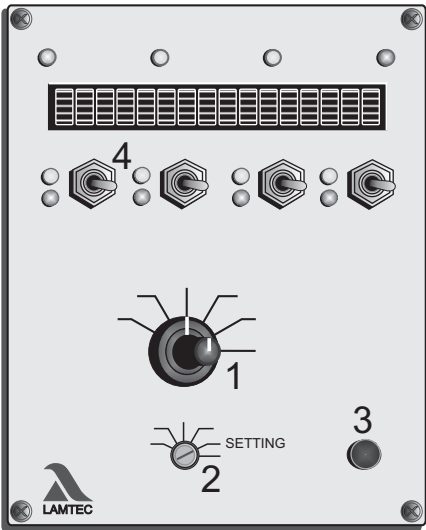

If a curve has previously been stored that does not contain twenty points, additional points may be added.

Mode selector switch (2) to "Setting"

Selector switch (1) to "Load rating"

Run to desired load rating

If a flashing number appears after the load rating, instead of adding a new point an old one is overwritten.

Selector switch (1) to "Set-point"

Switch (4) up or down
until system is optimally adjusted at the selected load rating

On VMS 5: Selector switch (1) to "Channel 5 display"
- set point and actual value feedback are displayed.

Switch (4) (channel 2) up or down
until channel 5 is optimally adjusted

Selector switch (1) to "Actual value feedback"

Wait until feedback has stopped.

Press Acceptance (3)

- Point X (number of the new load rating appears on the display,
if 6 points have previously been entered, "Point 7" appears,
only then is it classified according to its value)

if necessary

add further values

otherwise

Store

Note monitoring values



Up to 20 points can be programmed. A high resolution should also be used, since this ensures precise firing control. It is also possible, however, to store fewer than 20 points. This is advisable, for example when entering an initial, approximate curve.

A definitive curve for the VMS should always comprise at least 10 points.

Aids


D2

C1,E2

A16

A5,A10

Changing curve point

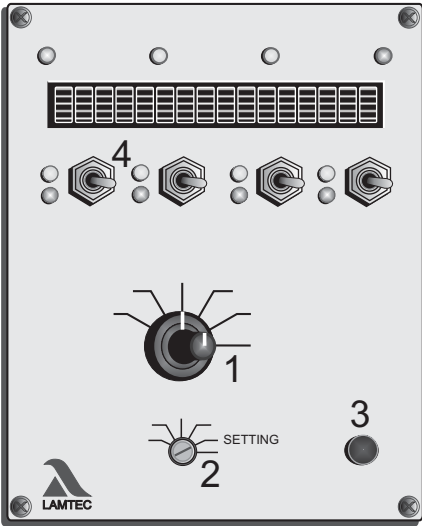


| | |
|---|---------|
| Mode selector switch (2) to "Setting" | Aids |
| Selector switch (1) to "Load rating" | |
| Run to load rating with switch channel 1 the set-points of which are to be altered. Recognisable by the flashing digits after the load rating, e.g. 687 (8) | D2 |
| <i>A digit or "Z" must appear after the load rating, otherwise the VMS does not accept the change and a point may be accidentally added.</i> | |
| Selector switch (1) to "Set-point" | |
| Switch (4) up or down until system is optimally adjusted at the selected load rating | C1,E2 |
| On VMS 5: Selector switch (1) to "Channel 5 display" - set point and actual value feedback are displayed. | |
| Switch (4) (channel 2) up or down until channel 5 is optimally adjusted | |
| Selector switch (1) to "Actual value feedback" | |
| Wait until feedback has stopped | |
| Press Acceptance (3) - Point X (number of the new load rating) appears on the display if necessary change another curve point otherwise | A16 |
| Store | A5, A10 |
| Check monitoring values | |
| <div><div><div>i</div></div><div>The separate ignition point can also be started up and altered in this way.</div></div> | |

**Adjusting the integrated
O₂ regulator (optional)**


This section explains only the operating steps needed to input the O₂ curve. Further information on O₂ regulation is contained in the publication DLT 5002.99cD Commissioning Supplement for the Optional "Integrated O₂ Regulator".

Checks during burner start-up

This tests whether during pre-ventilation, the O₂ actual value has complied with the air value (no smaller than 18 vol.% O₂ and smaller than 24 vol.% O₂). After ignition, the O₂ actual value should have reached a value of no less than 14% within 45 seconds. Reaching the threshold value is monitored. If one of the two values is not met, O₂ regulation is deactivated. The regulator outputs "Base value without regulation".

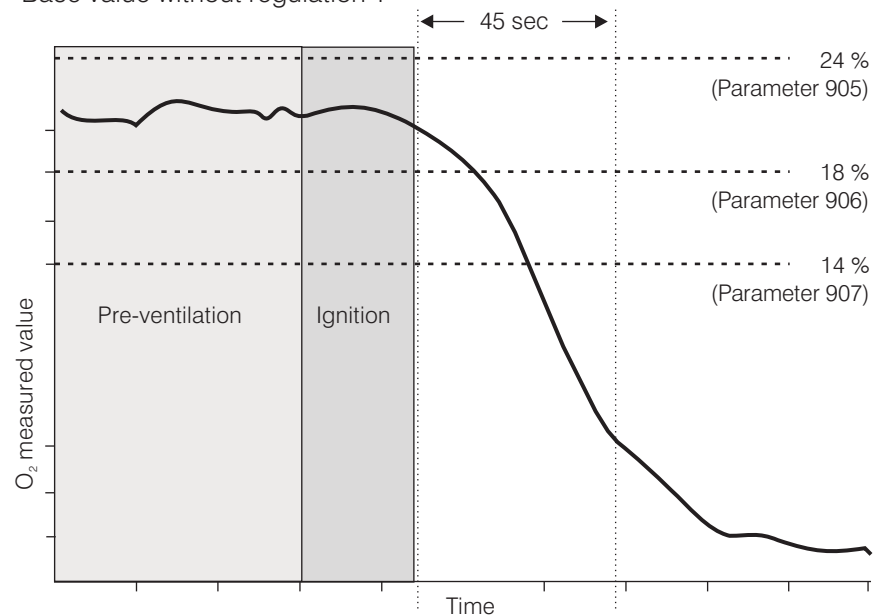**O₂ monitoring bands**

The O₂ actual value is constantly checked during burner operation for one maximum and two minimum permitted values. These ranges are located around the O₂ target value as a function of the load. If the actual values are outside these bands over a defined period of time, regulation is deactivated and the warning "Fault" is output. Thereafter, the regulator output (correction input) corresponds to "Base value without regulation" or "Base value for air shortage" as relevant.

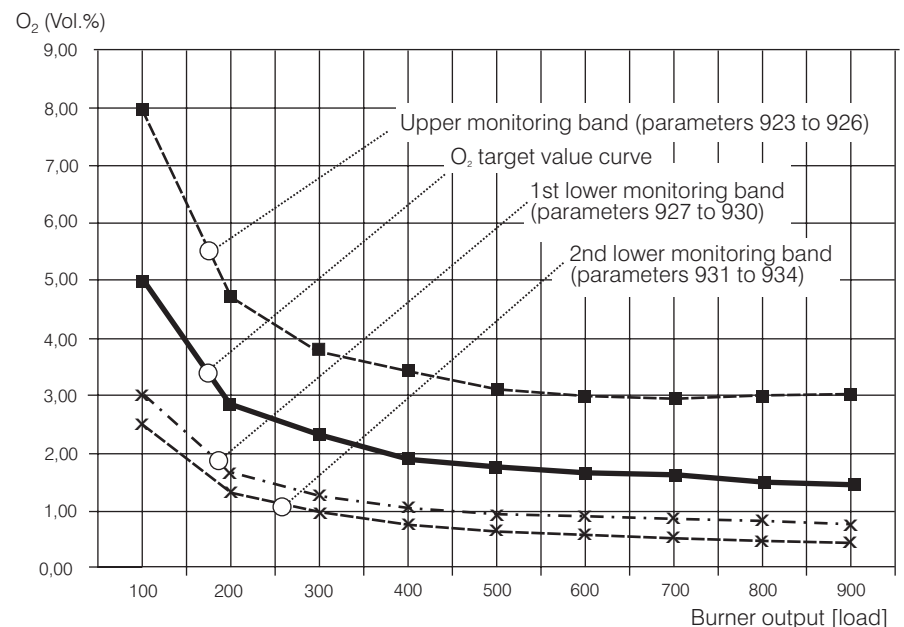O₂ boundary curves

The monitoring bands can be parameterised for 2 fuels, oil/gas, referenced to each fuel (parameters 923 to 934). In the case of more than 2 curve sets, these can be assigned to the individual curves via the parameters 912 and 913. The permitted deviation is calculated as a percentage of the target value. Two separate percentages can be specified for basic load and full load. The range between those is interpolated linearly.

Monitoring/shut-down times:

1st monitoring band 120 seconds; active after "Regulator on"

2nd monitoring band 30 seconds; active after "Burner on"

Factory settings:

1st monitoring band in the upper direction

Basic load (parameters 923/925) 60%

Full load (parameters 924/926) 100%

1st monitoring band in the lower direction

Basic load (parameters 927/929) 40%

Full load (parameters 928/930) 50%

2nd monitoring band in the lower direction

Basic load (parameters 931/933) 50%

Full load (parameters 932/934) 70%

Dynamic probe test

During active operation, the measured O₂ value is monitored by the main processor for any changes. If no greater fluctuation than 0.2 vol.% O₂ is detected over a period of 10 minutes, the fuel/air mixture is altered to force an air excess. If after 1 minute there is still no change in the actual O₂ value, the test is repeated with a higher air excess. If this does not cause a change in the actual value, this test is repeated yet again with an even higher air excess.

If even this does not force a change in the actual O₂ value, the regulator deactivates itself and displays a warning notice.

Thereafter the regulator output (correction input) corresponds to "Base value without regulation".

Probe blockage

Blockages in the probe can cause the measured value to increase slowly but steadily, in such a way that the dynamic probe test is not triggered. The main processor monitors whether the actual O₂ value drops by more than 0.2 vol.% O₂ at least once within 15 minutes. If this is not the case, then a dynamic test is triggered.



Note:

O₂ optimisation fault messages have no effect on the burner's function or that of the combustion system. They only notify that:

O₂ optimisation was deactivated.

Note error status and load value.

If desired, it is also possible to have the burner shut down on "Air shortage" faults via parameter 897.

Correction output monitoring

If the O₂ correction output is constantly greater than 98% [980 points] over 60 minutes, the O₂ regulator is deactivated for safety reasons. The base value for "Deactivated regulation" is output. If thereupon the O₂ value increases significantly, then the O₂ regulator is reactivated as soon as the O₂ value is (e.g.) at another load setting in the 1st monitoring band.

The regulation strategies employed were specially developed and optimised for the circumstances prevailing in combustion facilities:

- Frequent output changes,
- long lag times.

During burner start-up, the O₂ regulator remains on standby until it is ensured that plausible O₂ measured values are being displayed.

Factory setting 90 seconds after ignition - this is adjustable via parameter 904.

The "Neutral value" is output during standby.

It is calculated automatically from the range set.

Ignition takes place with the neutral value.

The neutral value depends on the selected correction mode;

e.g. at -50% to +50%, the output correction value (neutral value) is 500, whilst at -30% to +70% it is 300.



Note: The neutral value corresponds to the basic setting of the VMS/FMS without regulation.


In the case of fuel/curve switching during operation, the neutral value is output during the switch-over. An air advance can be set to the neutral value by means of parameters 702 to 704.

O₂ regulation is reactivated, with a time delay, once the switch-over is completed.

Factory setting 30 seconds, adjustable via parameter 903.

Various regulation strategies are available.

In the event of a fault, "O₂ regulation base value deactivated" or "Base value for air shortage" is output, depending on the cause.

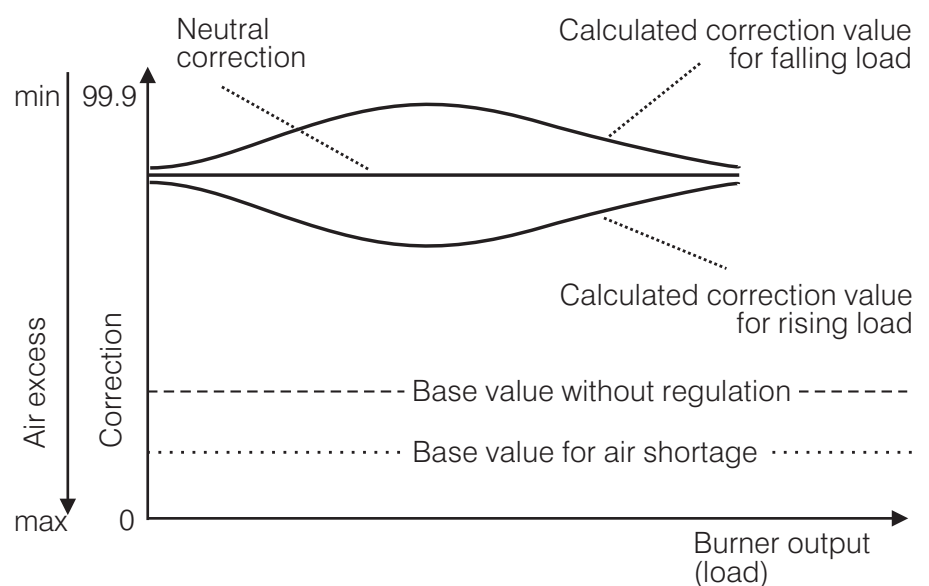

With pre-setting for load changes (standard regulator)

O₂ regulation by means of a comparison between target and actual values is only performed if no output change (load change) takes place ("internal load" static). After a preceding load change, an target/actual value comparison is performed and an actuation step triggered only after expiry of the set lag time (parameters 898 and 900).


If the O₂ actual value corresponds to its target value, the current correction value, referenced to the load value and the load direction, is stored in a table. The updated value is output at the next load change.

A pre-update is already carried out as from the 2nd target/actual value comparison, after a load change. As soon as the actual value gets close to the target value, the correction value is updated.

When the load changes, regulation is terminated immediately after target/actual value comparison and the neutral value, or if relevant the correction value obtained (updated) for this load point, is output D pre-setting!

Regulation after a target/actual value comparison is only performed again if the load is stationary and on expiry of the lag time.

In this type of regulation, the overshoot is automatically deactivated in the VMS/FMS. The actuators' hysteresis is compensated for by the load direction-dependent updating of the correction value.

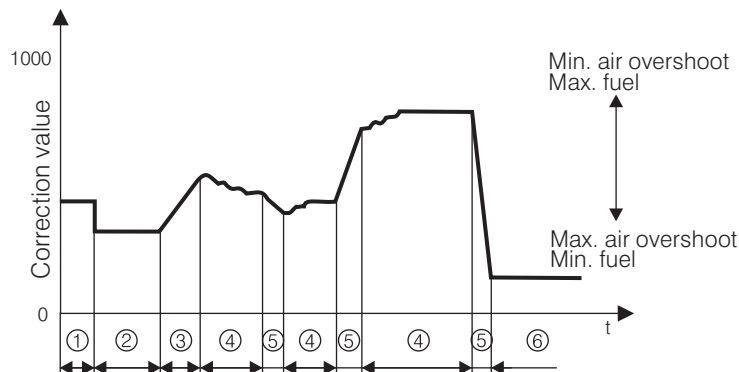

Regulation strategy with pre-setting for load changes

- ① Pre-ventilation/ignition
The correction is switched off; i.e. the neutral correction value is output.
- ② O₂ regulation on standby
The "Correction value with deactivated regulator" specified in parameter 901/902 is output.
- ③ Regulator takes over the neutral correction value, or the updated correction value is output.
- ④ On expiry of the set lag time, the residual deviation between target and actual value is corrected.
- ⑤ Load change
O₂ regulation is suspended and pre-setting carried out - neutral correction value, or the updated correction value is output.
- ⑥ Regulation is deactivated, e.g. by a fault
The correction value for deactivated regulator specified in parameter 901/902, or the one specified in parameter 917/918 for "Air shortage", is output.

Parameter 896 can be used to select whether the pre-setting is always (at each load change) to be activated (factory setting Standard 1), or not activated (content 2).

Furthermore, the updating too can be turned off. It is then possible to select whether, at load changes, the neutral correction value or the "Base value without regulator" is to be output (parameter 896).
The overshoot becomes active again when updating is turned off.

Extended regulation
strategy (air shortage)

Regardless of the selected regulation strategy and the lag time set (parameter 898/900), immediate and extensive action is taken by the regulator to combat any air shortage occurring. The objective is to avoid air shortage and to correct any such shortage as quickly as possible.

Regulator overshooting and the resulting excess air are accepted as unavoidable.

Via analogue interface

The default for the measured O₂ value is set via standard signal 0/4...20 mA to the VMS/FMS correction input 1.




ATTENTION:
Only O₂ meters whose t₉₀ response time is < 15 sec may be connected.

Release of the analogue interface is only possible at the factory.
(Cat. no. 663 R0030).
In case of doubt, please contact LAMTEC.

Range compensation via parameters 919 and 920
Factory setting: 4...20 mA $\hat{=}$ 0...25.0 vol. % O₂
0 mA when O₂ measurement is perturbed

Electric connection:

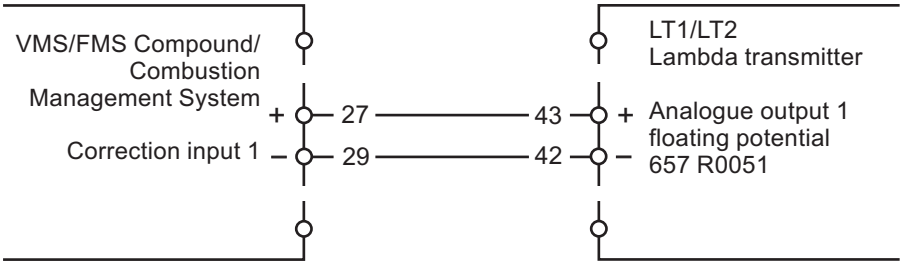


Mode switching

Selector switch (1) to status.


With channel key 3 in upward position, switch the display to O₂ regulation.

O₂ actual value and O₂ target value are displayed whilst the switch is in the Status position. If O₂ regulation is deactivated, the figures are shown in parentheses.

O₂ regulation
activated

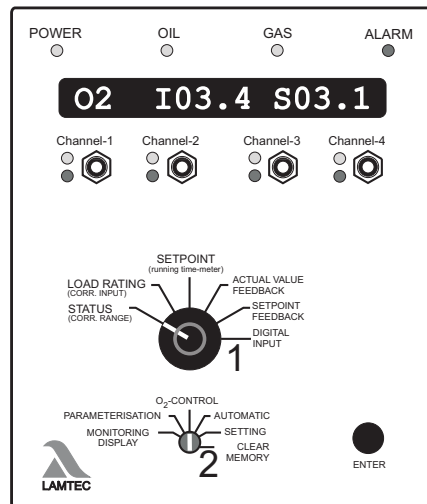

O₂ regulation
deactivated

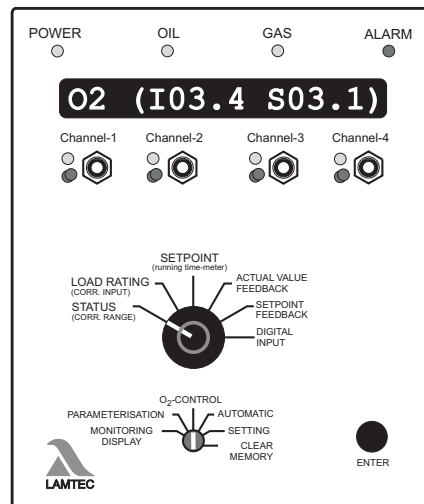

Push channel key 3 downward to return to VMS/FMS mode.




Note: O₂ actual and target values are only displayed if O₂ regulation or O₂ display are activated by means of parameter 896.

In automatic operation, the display switches during regular operation to the O₂ regulation mode. During burner start-up and with the basic load, VMS/FMS text mode is active - basic setting. However, switching the display by means of channel key 3 is always possible. Nevertheless, the manually preselected setting only remains in force until the next change-over into "Regular operation" or "Basic load regulation", and then returns automatically to the basic setting.

In "O₂ regulation" mode, and with the selector switch in the Status position, pressing the Acceptance key calls up commentary texts (running texts) relating to O₂ regulation.

The selector switch position (2) O₂ Regulation serves only for the input of O₂ target value curves.

Calling up O₂ regulation
text messages

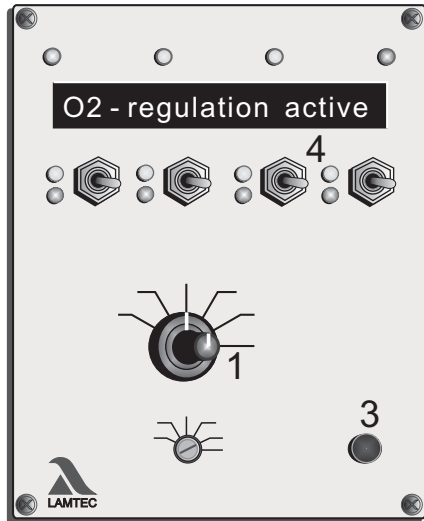

- Switch display to O₂ regulation.

Selector switch (1) to "Status".

Channel key 3 (4) upwards.

- Call up text messages by pressing the Acceptance key (3).

- Back D press the Acceptance key (3) again,
or turn selector switch (1) to a different position.

First adjust the electronic compound completely.
The integrated O₂ regulator remains deactivated.
Set parameter 896 to 0 "No regulator"
or 3 "Only display".

Setting the correction range and correction mode

The integrated O₂ regulator is connected inline and upstream of the VMS, as a free-standing program block. It acts exclusively on correction input 1. The correction signal (actuation signal) transmitted to the VMS is 0...100% with a resolution of 0.1%.

0% corresponds to maximum excess air, 100% to minimum excess air. The factory setting is a correction mode of +60 / -40 when correcting for air-valve / fan and -60 / +40 when correcting for fuel and a neutral value (base setting with the O₂ regulator switched off) of 50%.

This basic setting was selected on the assumption that over time, burner and boiler contamination during their operation would result in the installation's flow resistance increasing and thus a somewhat greater actuation range in the excess air direction could be of benefit.

If some other correction mode is selected by means of parameter 437 (expert level), the base setting also alters at the same time.

| With correction mode | Base setting |
|----------------------|--------------|
| + 50 % ___ - 50% | 50.0% |
| -50 % ___ + 50% | 50.0% |
| + 70 % ___ - 30% | 70.0% |
| -70 % ___ + 30% | 30.0% |
| 0 % ___ -100% | 0.0% |
| -100 % ___ 0% | 100.0% |

The base setting can be called up when the O₂ regulator is switched off, e.g. when the burner is off, during burner start-up etc, by turning the selector switch to Load (correction input) whilst simultaneously pressing the Acceptance key.

Details and examples see "Correction input", page 59 - 60.

Inputting the
O₂ target value curve



Calculation of O₂ target values as part of burner adjustment

Note: O₂-regulated operation is the normal operation. Unregulated operation should only be considered to be the emergency situation. Hence, the objective of burner adjustment should be to calculate the optimised operation and to store the corresponding curves in the VMS/FMS. The O₂ values calculated as part of burner adjustment are now input as target values for O₂ regulation.

The excess air required for unregulated operation is set via the base value without regulation (parameters 901/902). This is specified during Regulation off, Regulation in standby etc.

The O₂ values calculated during burner adjustment are input and stored as follows, regardless of whether the burner is off or in operation. The O₂ target values can be input arbitrarily. It is not necessary to observe any particular sequence.



Set selector switch (2) to O₂ regulation.

Delete the whole O₂ curve with channel key 4 (4) upwards.

If only points need to be changed, push channel key 4 (4) downwards.

Set selector switch (1) to Load.

Using channel key 1 (5), the composite curve's programmed load points can now be called up.

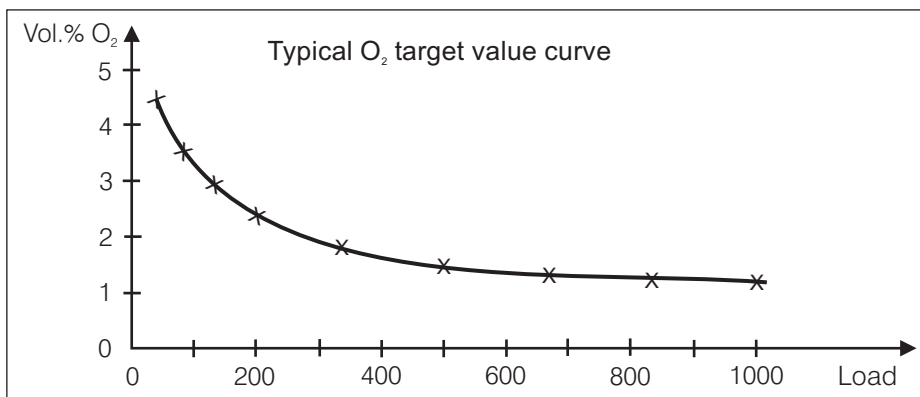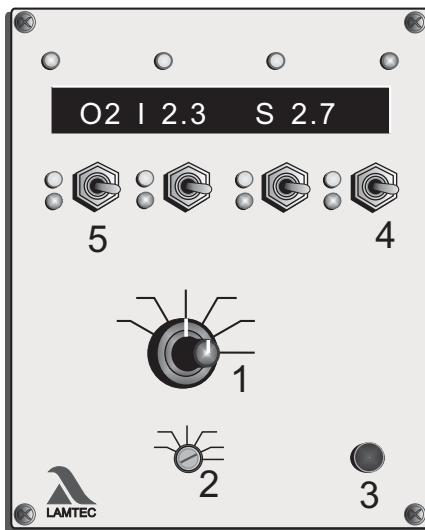

Note: The O₂ target values can only be stored in the programmed load points. If load points are skipped, the line in between is interpolated.

- Set selector switch (1) to target value.
- Channel key 4 (4) is used to set the required O₂ target value.
- Press the Acceptance key (3).




Note: Each stored O₂ target value can be changed as many times as necessary, including immediately after storing it.

Set selector switch (3) to Load and use channel key 1 (5) to call up the next load point; etc.

As soon as all required O₂ target values have been entered, set selector switch (2) back to Automatic.

The O₂ target value curve is now stored.

Calling up the
correction range set

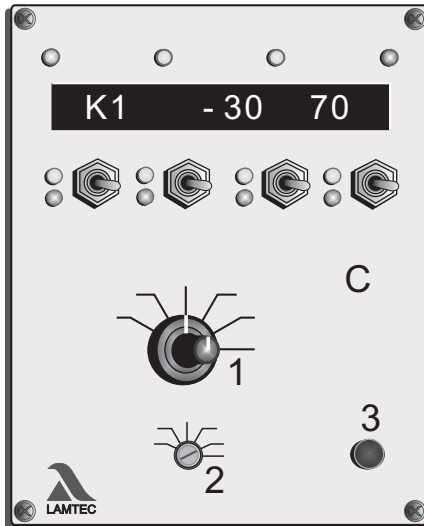

Turn selector switch (1) to Status

Press the Acceptance key (3)

The selected correction range appears on the display.

If both correction inputs act on one channel, the sums are shown.

Press the Acceptance key (3) again, or


turn selector switch back (1) → return to normal display.

*The correction should be taken into account during later programming.
The correction should be able to act without the VMS reaching the end
of its travel (0 or 999 or end-switch values).*

*If the correction cannot drive the servo because a channel has reached the
range limit obtained during pre-ventilation, burner output is increased or
decreased until the correction can be effected. This function can be
switched off via the parameter 0 - Release level 2. Content 0 → off!*

Calculation and setting
of control parameters

- Manual

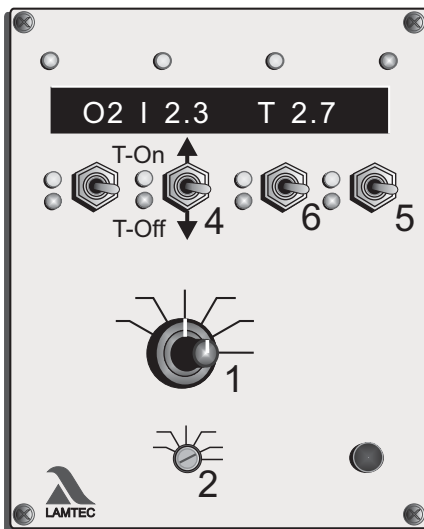

Run burner on low load.

Set selector switch (2) to O₂ regulation

Text message appears

Push channel key 4 (5) downwards

Text message disappears

Set selector switch (1) to target value

Push channel key 2 (4) upwards

The O₂ regulator is activated when this is set.

The O₂ target value can now be adjusted using channel key 3 (6) within a
range of +3 to -1 vol.% O₂ from the target value entered. The change in the
actual O₂ value can be observed at the same time on the display.

Channel key 3 (6) upwards → more O₂

Channel key 3 (6) downwards → less O₂

The setting of parameters 898/899 and 900 should be such that the next
target/actual value comparison (actuation pulse) takes place only if the O₂
actual value has changed discernibly. A symbol +;-at the centre of the target
value display indicates that a target/actual value comparison is being
performed.

No change or change too small:

Increase P-factor parameter 899.

For details see page 56.




Note: The P-factor (proportionality factor, parameter 899) is specified by
means of the parameter setting. The new correction is obtained
from the two input quantities, deviation and P-factor. The former is
then output to the VMS.

The procedure is repeated after the lag time's expiry. If the internal
load has changed during this time, the O₂ regulator exits this
routine. It must then be reactivated again as described above, via
channel key 2 (4).

Deactivating test mode

Push channel key 2 (4) downwards

Lag time
Parameters 898 / 900

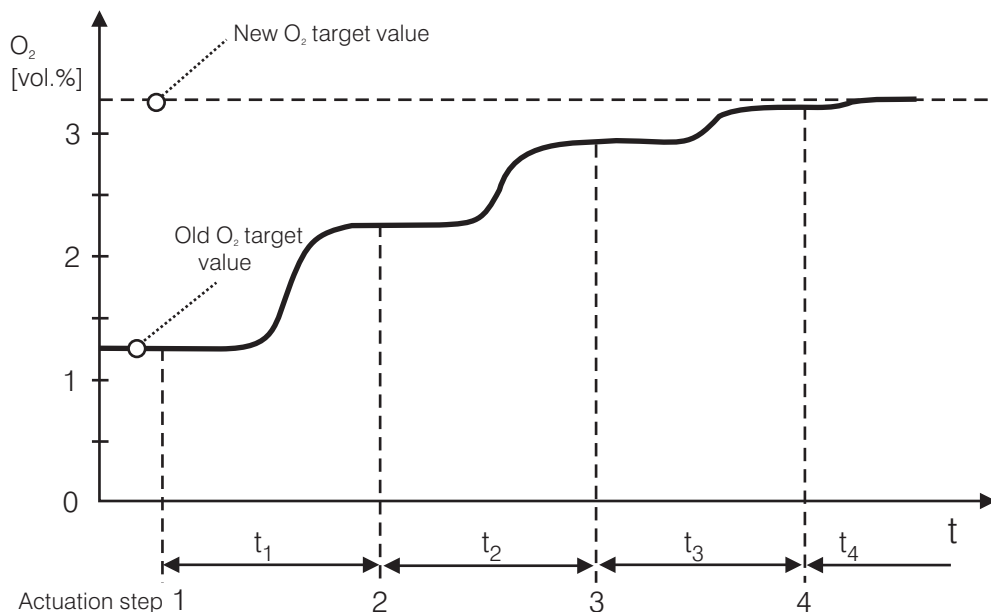

Regulation parameter setting
t₁ ... t₄ = regulation section's lag time
Specified via parameters 898 and 900

The calculated value should be input by means of parameter 898.
Factory setting: 15 seconds.

The lag time can be adjusted to the load via parameter 900.
The lag time gets shorter at full load, due to the higher gas velocities.
Lag time shortening of 3 seconds is preset at the factory.

To calculate lag time at full load: proceed as described above.

Guideline for 2 or 3-draught boiler:

Parameter 898 → 12 seconds

Parameter 900 → 3 seconds

The P-factor should be so adjusted that a target/actual value deviation of 1...2 vol.% O₂ is corrected within 4...6 steps without overshooting.

P-factor
Parameter 899

Actuation pulse too short → increase P-factor parameter 899
Overshooting → reduce P-factor.

Repeat until the target value is corrected within ca. 4...6 steps.
Check regulator setting at intermediate and full load.



Note: It is possible to achieve optimisation by means of the P-factor (parameter 899) and the lag time (parameters 898 and 900), that inter alia also depends on the installation's properties; e.g. one may set a somewhat shorter lag time if the P-factor is reduced at the same time.

Recommendation:

Set a slightly longer regulation cycle and smaller P-factor Z safer !!!

Setting a base value for
"Deactivated regulator"
and "Air shortage"

Parameters 901/902
917/918

Calling up the base value
for O₂ regulation
deactivated / Air shortage

Perturbation of O₂ regulation causes it to deactivate, and the specified correction value for "Deactivated O₂ regulator" or "Air shortage" is output, depending on the cause. The burner is not shut down.

Parameter 897 can be used by the customer to specify a burner shut-down if the perturbation is "Air shortage".

The base values for deactivated O₂ regulation and air shortage can be called up via parameter 896.

8 → Correction input $\hat{=}$ base value for "Deactivated O₂ regulation"
Parameter 901/902

9 → Correction input $\hat{=}$ base value for air shortage
Parameter 917/918

Recommended settings:

for parameters 901/902 and 917/918

Base value for deactivated O₂ regulation \leq neutral value

Base value for air shortage < base value for deactivated O₂ regulation



Note: The neutral value is obtained from the chosen correction mode:

Correction mode +50% / -50% → neutral value 500 $\hat{=}$ 50%

Correction mode +60% / -40% → neutral value 600 $\hat{=}$ 60%


See also the explanations on page 62.

Factory settings

Parameters 901/902 - base value for "Deactivated O₂ regulation" 300

Parameters 917/918 - base value for "Air shortage" 150


This results in the following approximate picture of burner output:

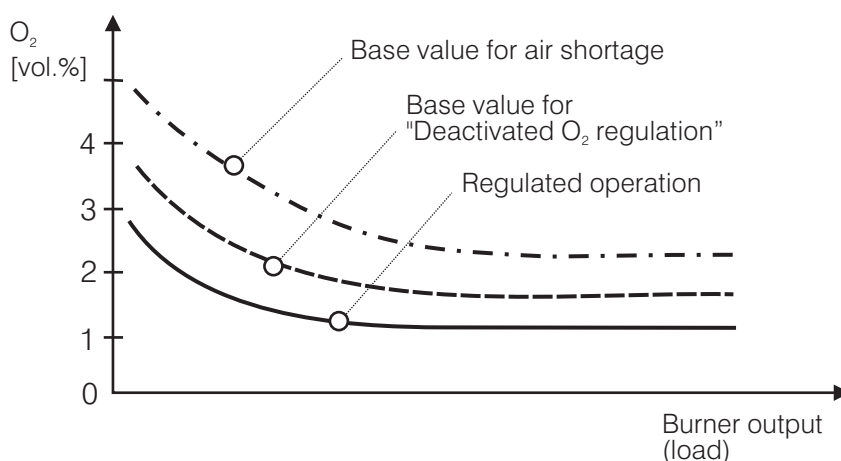

Automatic:

In preparation

The meaning of the additional modes

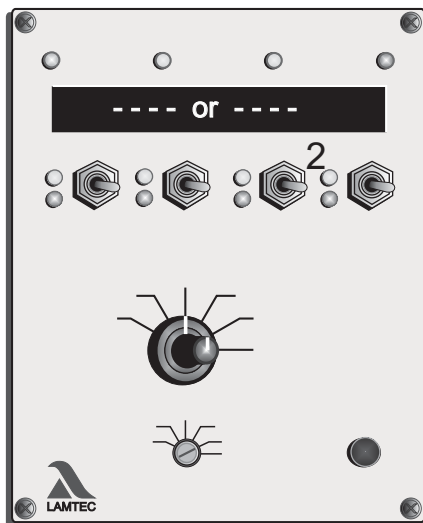

- op O₂ regulation on standby (during burner start-up), or O₂ regulation temporarily switched off via parameters 914 and 915 as a function of load.
- or O₂ regulation active.
- ot O₂ regulation temporarily deactivated (air shortage, probe dynamics etc).
- od O₂ regulation deactivated (perturbed), e.g. test routines failed during burner start-up, dynamic test negative, O₂ regulation temporarily deactivated for over 1 hour etc.

Resetting od:


Manually
Switch to "O₂ regulation" mode.
Press the Acceptance key and call up error text.
Push key 3 (2) upwards D error deleted.



ATTENTION: If deleting an error, the error text must always first be called up by pressing the Acceptance key.

Automatic
During each new burner start-up.

Calling up O₂ regulation text messages

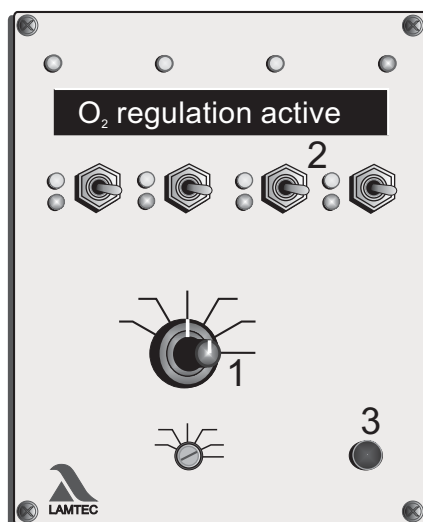

- Switch display to O₂ regulation mode.
Selector switch (1) to "Status" and channel key 3 (2) upwards.
- Call up text messages by pressing the Acceptance key (3).
- Back D press the Acceptance key (3) again,
or turn selector switch (1) to a different position.

Set correction input

If corrective intervention is desired:
- Make sure that correction input is set

Correction signal: terminals 27 and 29 (correction input 1) or
Correction signal: terminals 33 and 34 (correction input 2)

The correction is set via the parameter numbers 429 - 676, of which, however, only a fraction are generally released for use by the person commissioning.

The following settings are possible,
expert level only (level 2):

Current signal:

| | | |
|--------------------|-------------------------|---------------|
| Correction input 1 | 0 ... 20 or 4 ... 20 mA | Parameter 431 |
| Correction input 2 | 0 ... 20 or 4 ... 20 mA | Parameter 432 |

Correction mode:

| | |
|--|---------------|
| Correction mode for correction input 1 | Parameter 437 |
| Correction mode for correction input 2 | Parameter 441 |

Correction mode and input signal are quoted in the order and are set at the factory. Any change on site is possible only by parameter intervention at expert level.

Aids

Available correction modes


The correction mode specifies how the correction should act. Manifold settings are possible. Diagrams 1 and 2 show two typical correction modes for O₂ correction.

Type 1: correction acting on the target value

Type 1 is used if the correction is applied to a linear actuator, e.g. a frequency converter shifting the combustion air blower's rotation speed. The correction is directly added to, or subtracted from, the target value.

— = programmed curve
- - - = correction range

Correction mode: acting on the target value axis

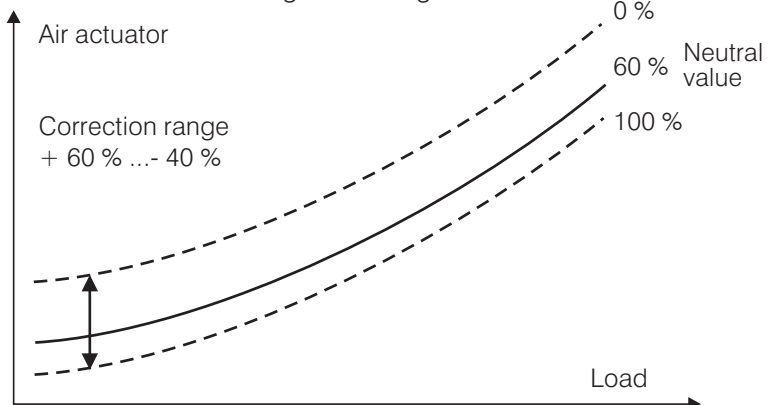

If the correction is applied to a fuel actuator, the effect is reversed so that 0% corresponds to the smallest target value.

By using the expansion factor held in parameter 433 - Commissioning level - the correction effect can also be weighted across the burner's output.

with rising burner output.

Fuel actuator

Correction range
+ 30 % ... -70 %

100 %

70 %

0 %

Expansion factor > 10

Load




When applying O₂ corrections, make sure that the combustion limits are observed even with the maximum correction applied (100%). For details see page 63, "Checking the combustion engineering limits".

This is used if correction is made via a non-linear actuator, e.g. air flap. The curve's slope is taken into account before calculating the correction. Thus, a flat curve results in a small correction range, whilst a steep curve results in a large one.



This is only meaningful if the curve rises monotonically.

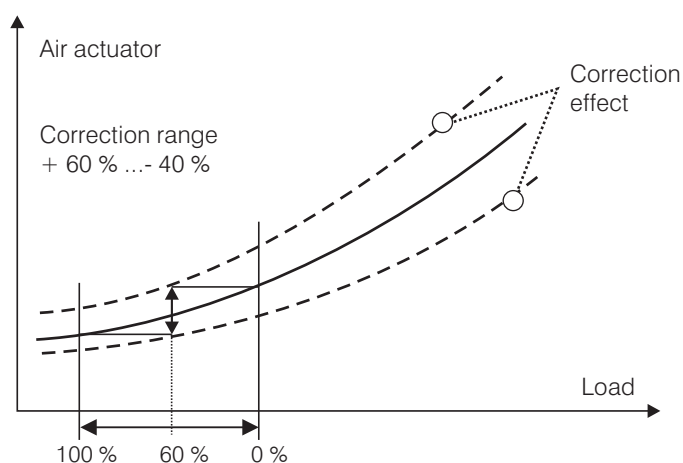

When applying O_2 corrections, make sure that the combustion limits are observed even with the maximum correction applied (100%). For details see page 63, "Checking the combustion engineering limits".



The correction mode indicates how the correction is intended to act. A variety of settings are possible. Figure 1 and 2 show two typical correction modes for O₂ correction.

Type 1 is used where the correction is made on a linear control element, such as a fan frequency converter. The correction is directly added to or subtracted from the set-point value.

Type 2 is used where the correction is made on a non-linear control element such as an air damper. Before determining the correction, account is taken of the steepness of the curve. A flat curve results in a small correction range, whereas a steep curve give a large range.

If the correction is made to a fuel control element, the effect of the current is reversed, so that 0 mA corresponds to the smallest set-point.

Aids



Do not use if parts of the curve are horizontal.

Setting the correction range: The correction range can be set between 0 and 999 via parameter 517, commissioning level.


- Example:

A typical correction range for O₂ regulation is 200. This means:
With a correction mode of +40% ... -60% (factory setting) and correction for a target value of +80, the actuation range across which the correction can be applied is -120 points.
- Recommendation:

The correction mode and correction range should be so chosen that the effect on the O₂ value in the direction of excess air is -2 to 3 vol.% O₂,
and the effect in the direction of air shortage is 1 to 1.5 vol.% O₂

Recall set correction range

- Selector switch (2) to "Setting"
- Selector switch (1) to "Status"

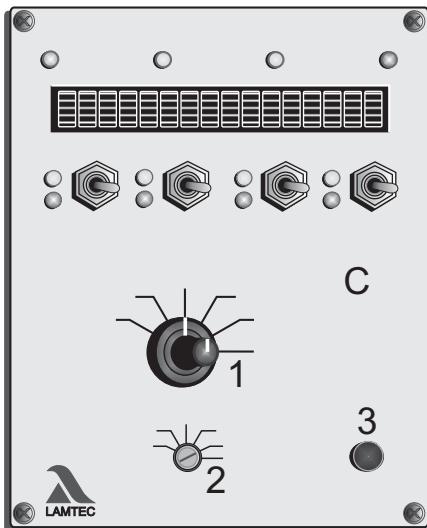

- Press Acceptance key (3)
- Set correction range appears on the display on the respective channel.
- If two correction inputs act on one channel, the ranges are displayed alternately (e.g. 15 points)
- If "OFF" appears on the display, no correction is activated for this channel
- Take account of correction in subsequent programming
- The correction must be able to act without the VMS reaching the stop (0 or 999 or limit switch values).
- If the correction cannot extend the adjustment travel because a channel does not reach the range limit determined for pre-ventilation, the burner output is increased or reduced until the correction can be extended.


Altering the correction range

The parameters must be changed to allow the correction range to be altered. These parameters are accessible via Customer level (Level 1).

Proceed as described under Parameter setting.
The values associated with the correction range are stored in parameters 517 and 597.


Examples and illustrations

Correction mode +60% ... -40% (recommended for air correction)

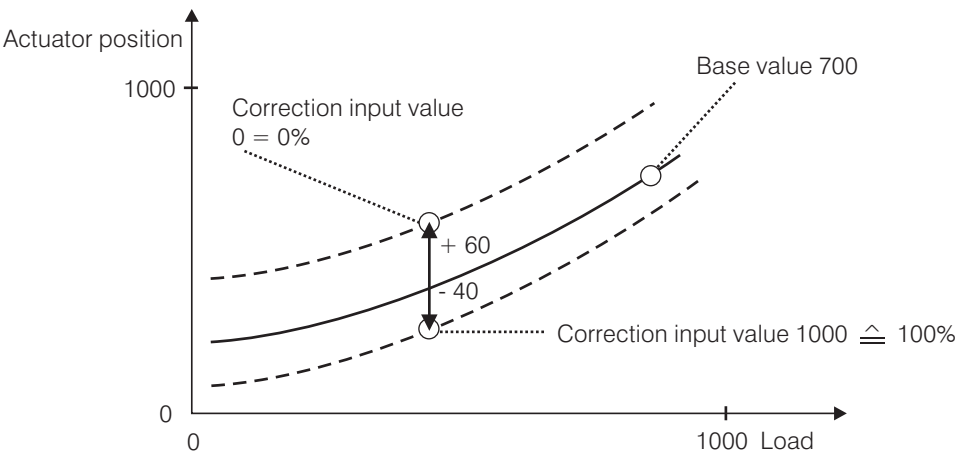

+60% corresponds to correction input value 0
-40% corresponds to correction input value 1000
Base value 700 $\hat{=}$ 70%

Correction mode -60% ... +40% (recommended for fuel correction)

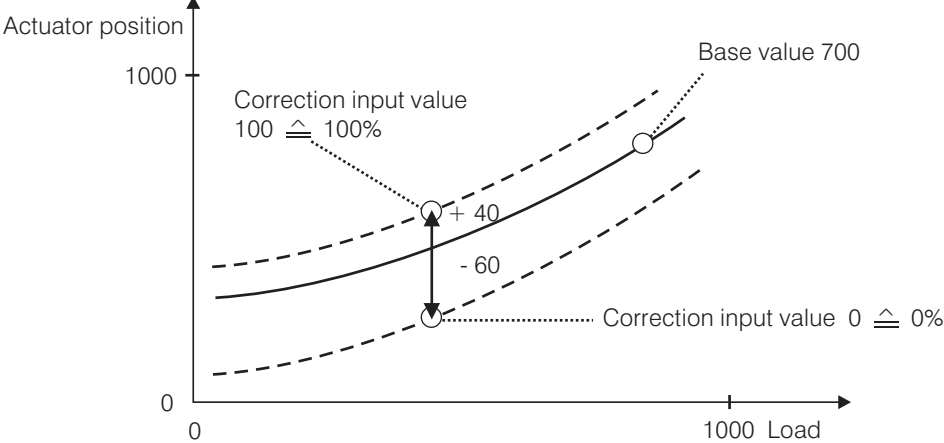

-60% corresponds to correction input value 0
+40% corresponds to correction input value 1000
Base value 300 $\hat{=}$ 30%

Correction modes:

| Correction for air actuator (valve/revs) | | | Correction for fuel actuator | | | |
|---|-----|-------|------------------------------|-------|----------|------|
| Base setting | | | Base setting | | | |
| +50% | ___ | - 50% | 50% | - 50% | ___ +50% | 50% |
| +60% | ___ | - 40% | 60% | - 60% | ___ +40% | 60% |
| +70% | ___ | - 30% | 70% | - 70% | ___ +30% | 70% |
| +80% | ___ | - 20% | 80% | - 80% | ___ +20% | 80% |
| +90% | ___ | - 10% | 90% | - 90% | ___ +10% | 90% |
| +100% | ___ | - 0% | 100% | -100% | ___ 0% | 100% |


Checking the combustion engineering limits

If the system is not equipped with error-proof O₂ or CO monitoring, it must be ensured that the firing still functions reliably at the shut-off limits of the VMS. To do this it is necessary, separately for each channel, to run to the edges of the shut-off bands in the air deficiency direction in order to check whether the combustion engineering limits are being adhered to.

Aids

Checking the shut-off limits at the continuous output of the VMS

In the standard software the monitoring bands to the air deficiency side at continuous outputs are each 12 points, that is to say that the combustion engineering limits must be adhered to with 12 points deviation from the programmed feedback. Since the monitoring bands can be adjusted by the system manufacturer, however, (parameter level 2), the set value must be checked.

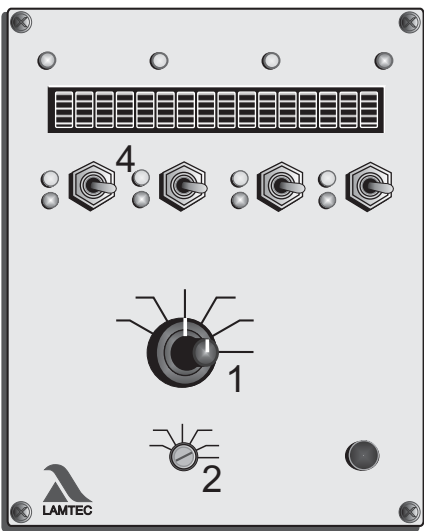

Selector switch (1) to "Load rating"

Run to load point to be checked

Wait until the system has run to that point

Mode selector switch (2) to "Setting"

Adjust set-point value (4) of the continuous channel in the air deficiency direction until the actual value feedback has changed by the set number of points (monitoring band)

In the event of differing monitoring band settings, run to the corresponding value.

Check firing

Reset set-point value (4) to the next continuous channel in air deficiency direction.

Check firing

Repeat, until all continuous channels are checked at their limits.

Checking the shut-off limits
at three-point step output
of the VMS

In the standard software the dead bands to the air deficiency side are 3 points, that is to say that the combustion engineering limits must be adhered to with 3 points deviation from the programmed set-point.

Selector switch (1) to "Load rating"

Run to load point to be checked

Wait until the system has run to that point

Mode selector switch (2) to "Setting"

Adjust set-point value (4) of the three-point step channel in the air deficiency direction (for dead band setting, see parameters)

Reset set-point value (4) to original value

In this way run all channels in succession to the limit at the various load points normally at low, medium and full load

Checking the O₂ influence

If the system is not equipped with error-proof O₂ or CO monitoring, it must be ensured with any existing O₂ correction that with the maximum correction applied the combustion engineering limits are adhered to.



The correction value can be altered as follows in order to set the correction range and to check the combustion boundary values.

Burner on, regulator is enabled (terminal 4).

Turn selector switch (2) to O₂ regulator

Explanatory text is displayed

Press channel key 4 (5) downward

Explanatory text disappears

Turn selector switch (1) to load value (correction range)


Press Acceptance key (3)

With channel key 2 (4) in the Up position, manual correction is switched on visible through the TK display at the centre of the display.

The correction value can now be changed at will with Channel key 1 (6), with the burner on. The manually-selected correction value is maintained until the selector switch (2) is turned to some other position, or normal correction is activated by pressing Channel key 2 (4) downward.

Adjustment of the correction range is possible via parameter 517 (with the burner operational). In the event of several fuels (curve-sets), the range can also be adjusted individually for each curve-set and channel via parameters 517 to 596 (Expert level).

Programming 1st point
(ignition load point)

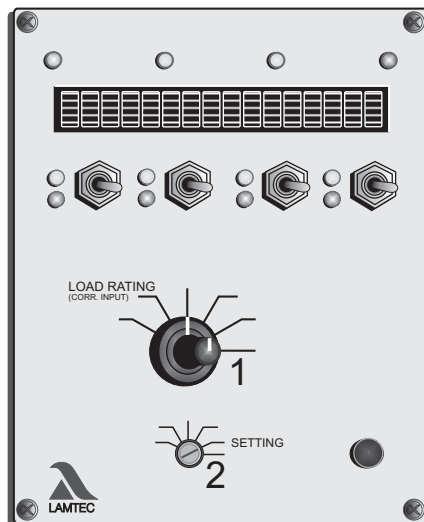

If no separate fuel/air ratio is to be set for the ignition point (selectable via parameter 4= 0 or 2), proceed as described here.

For safety reasons

"Setting" mode permits direct access to the control elements with the burner running. It is therefore essential to follow the safety rules laid down by the burner manufacturer.

"Setting mode" with the system running must only be undertaken by trained and experienced personnel, whilst keeping a constant watch on the system.

The first point entered after clearing the memory is always the ignition load point. This need not be the lowest load point, it is possible to enter ones lower than this.

At least 1 point must be entered in order to form a new curve. A subsequent addition up to 20 points is possible at any time, see "Adding points" on page 43.

Aids

Mode selector switch (2) to "Setting"


- "EI" appears in the middle of the display

A6

Selector switch (1) to "Load rating"

Run to ignition load point by means of channel 1 switch (4)

D1, D2,
D5

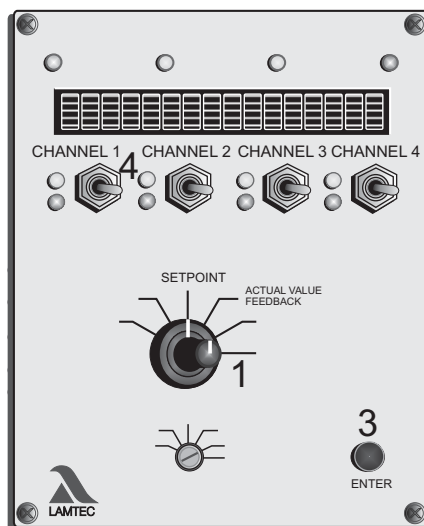

Selector switch (1) to "Set point"

Switch (4) up or down

until system is optimally adjusted at ignition load point

- control element reacts

- display changes

E2

Selector switch (1) to "Actual value feedback"

- Value of the external feedback (with continuous output) is displayed

- with three-point step channel the same value as in "set point" position is displayed

B1, C1

On VMS 5: Selector switch (1) to "Channel 5 display"

- set point and actual value feedback are displayed.

Switch (4) (channel 2) up or down
until channel 5 is optimally adjusted

Wait until feedback has stopped

Programming with burner running
(i.e. pre-ventilation has been carried out previously without programmed point):

Press Acceptance (3)


- "Really ignite?" appears on display

By operating the switch the ignition point setting can be corrected again.

Programming with burner stationary

- Press Acceptance (3) again
- ignition position relays pull up
burner ignites
 - ignition point 1 appears on display

Reversing the programming

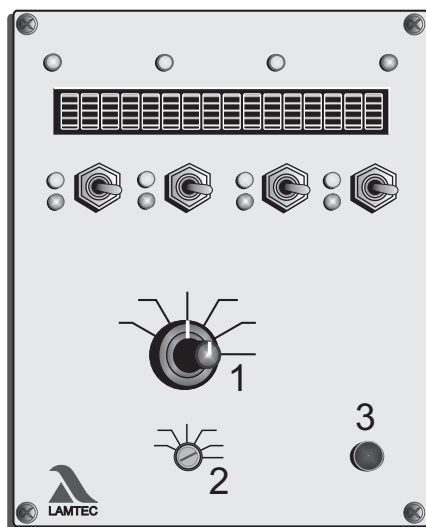

- Press Acceptance (3)
- ignition point 1 appears on display

If you have started programming and do not want to save these values, but to re-activate the old curve instead.

Selector switch (2) to "Clear memory"

Selector switch (1) to "Set-point"

- Press Acceptance (3)
- "cleared" appears on the display

- Selector switch (2) to Automatic
- The old curve is valid again.

The unit recognises that the RAM does not contain a valid curve that could be transferred to the EEPROM. The last valid EEPROM curve is therefore re-activated.

Instrumentation for commissioning

When commissioning systems with the VMS it is recommended that several 5K potentiometers with ready-made connections and at least 2 current transmitters be always carried, (particularly where the continuous outputs are used).

The current transmitter should be adjustable in the range 0 ... 20 mA. A voltage range of 0 ... 10 V would also be advantageous in order to be able to simulate the continuous voltage output of the VMS.

In addition 2 multimeters (measuring ranges: current, voltage, resistance) should be to hand when commissioning.

Adjusting load ratings individually

- when load points are to be adjusted without programming a complete curve

When adjusting individual points it is normally only possible to freely adjust the set-point values. This is done by running to the load value (figure appears after the value). The associated set-point can be adjusted. The figure, which shows that the change is admissible, appears not only right at the programmed load point but also in the range ± 3 points around this. When stored, however, the value actually displayed is adopted.

At each adjustment of individual points it is therefore possible to shift the load value by up to 6 points.

Procedure for shifting the load value:

Undertake operations as described under "Adjusting individual points"
but shift the load rating as required,
Set set-point value

Store

If the desired load rating cannot be achieved in one operation:

Repeat procedure

- Output point is now the last curve entered

Entering an initial curve

Since, prior to initial programming, the set-point EEPROM contains a standard curve that very probably does not correspond to the actual conditions of the system (ranges, set-point values), the following procedure is recommended for the initial curve:

Make sure that the signal wiring is correct
- see Function test and Manual

Clear memory

Leave VMS at "Setting"

Have system started up without control release (terminal 4)

After pre-ventilation, enter ignition load point

Ignition

Give control release (terminal 4)

Enter further points with burner running

Store

Approaching control elements from one side

During operation the compound approaches the control elements from one side in order to compensate for the mechanical hysteresis of the valves, approaching all set-points from above.

Exception: The top point is never overrun and therefore approached from below.

When setting, care should be taken to approach the valves in the same way. As a result the system values in automatic mode are reproduced in exactly the same way.

Entering settings

Selector switch (2) to "Setting"

Run to desired set-point from above

if accidentally running below this point

Run above set-point and re-approach from above

Entering top setting

Selector switch (2) to "Setting"

Run to desired set-point from below

if accidentally running above this point

Run below set-point and re-approach from below

Only in this way will you reach the same valve position and hence also the same combustion values in setting as later during automatic operation.

| | |
|---|--|
| Starting without preventilation | Even if the installation is to be started without preventilation, the preventilation signal (terminal 3) must be given for at least 3 seconds so that the VMS progresses one sequence and approaches the ignition point. Preventilation need only be continued to the end, i.e., with the channels running to their end position, if the preventilation signal is present for more than 10 seconds. If the preventilation signal is removed before all actuators are up, this is ignored and the actuators still move to the topmost limit stop. |
| Ignition delay when setting | <p>When the ignition point is entered for the first time the facility exists for observing the ignition process by entering a delay time. To do this, the time needed to run to the burner sight glass and to the boiler end respectively must be set in parameter 759.</p> <p>As soon as the question "Really ignite?" is confirmed by pressing the acceptance key, this time expires. On expiry the ignition is released. This time operates only if the VMS is on "Setting".</p> |
| Pre-setting load automatically | <p>Parameter 4 can be used not only to select the separate ignition point but also to determine whether the load default is to be automatically pre-set during setting. If this is the case the load points (in addition to the ignition point) are fixed at the values 200 (corresponding to 4 mA at the load input), 250, 300, 400, 500, 600, 700, 800, 900 and 999.</p> <p>It is then possible to switch only between these points by means of the load rating switch position. You cannot run to intermediate values during setting.</p> <p>Storing a point causes the load default to skip to the next value (unless this is already taken up). In this way a curve can be entered without shifting to load rating.</p> |
| Entering the compound curves with the burner stationary | <hr/> <p><i>In order to be able to program the VMS without a flame, the fan must be in operation (at least where a speed-controlled fan is actuated by the VMS)</i></p> <hr/> <p>Apply 230-V signal to fan</p> <ul style="list-style-type: none">- e.g. Bridge terminal 81 and terminal 89 on relay R 18 (caution: as a result, terminal 92 also receives a voltage) <p>Disconnect "Burner On" signal (terminal 2) so that burner does not start</p> <p>Enter curve</p> <p>Connect fan actuation again (e.g. remove bridge)</p> |

Keeping the re-circulation damper closed in pre-ventilation

The pre-ventilation behaviour of the re-circulation duct according to the technical regulations on steel boilers [TRD] is incorporated into the software of the VMS. That is, the re-circulation dampers always open with a delay. If the system subsequently requires the re-circulation to remain closed during pre-ventilation, this can be achieved by means of the pre-ventilation limit parameters (parameter 346-350).

Clear range limits

Selector switch (2) to "Clear memory"

Press Acceptance

- Selector switch to Automatic

Select pre-ventilation limit parameter for the re-circulation duct

Enter CLOSE position of the re-circulation damper

Have range limits re-entered through pre-ventilation

Now the re-circulation damper does not open during pre-ventilation

Switching the burner on again via the target value

If the integral output regulator is used and a negative value is entered in parameter 802, it is possible to achieve a situation where the burner is switched on accordingly via the target value.

Significance of modes
on the VMS

Abbreviation

Mode

| | | |
|--------------------|---|-----------------------------|
| ON | → | "Switch-on sequence" |
| BE | → | "Ready" |
| ZÜ | → | "Ignition position" |
| EZ | → | "Setting/Ignition position" |
| GL | → | "Base load" |
| EG | → | "Setting/Base load" |
| NA | → | "Post-ventilation" |
| AU | → | "Off" |
| EI | → | "Setting" |
| SL | → | "Clear memory" |
| EV | → | "Setting/Pre-ventilation" |
| ES | → | "Setting/Control" |
| ST | → | "Fault" |
| VO | → | "Pre-ventilation" |
| HA or HAND | → | "Manual mode" |
| LE | → | "Load extern" |
| (RG) keine Anzeige | → | "Control mode" |

- BE indicates that the signal is present on terminal 2, and all other signals = 0.
If the VMS controls a flue gas damper, this opens. It is possible to switch to "Setting".
- ZÜ indicates that pre-ventilation is finished and the ignition position relay pulls on. The VMS is in the ignition position, but the flame signal is absent. Switching to "Setting" merely causes the mode display to switch to EZ. Programming is not possible in this mode.
- GL indicates that the burner is on (terminal 8=1), but the control release is absent (terminal 4=0). The VMS therefore remains in base load position. Switching to "Setting" merely causes the mode display to switch to EG. Programming is not possible in this mode.
- EG
- NA indicates that the VMS is in post-ventilation mode.
All signals = 0
All air ducts open. When the configured time has elapsed, the VMS changes to "AU" mode.
- AU indicates that the VMS is "OFF". All control elements closed.
Selector switch on "Automatic", all signals = 0.
- EI indicates that the mode selector switch is on "Setting".
Single points can now be altered or new curves can be entered.
- SL indicates that the mode selector switch is set to "Clear memory".
By pressing the acceptance key the existing curve is cleared and a new curve can be entered.
- EV indicates that although the mode selector switch is on "Setting" it is nevertheless performing the pre-ventilation routine.
These is a signal on terminal 3.

*If the selector switch is on "Setting" and there is a "signal on terminal 3", the VMS nevertheless maintains its control function.
The setting mode (display "EI") is only activated when the pre-ventilation is completed and there is a flame signal and control release. The VMS can therefore only be programmed when the signal combination corresponds either to the "AU" and/or "BE" modes, or when the signal combination corresponds to the "Automatic" mode.*

- ES indicates that although the mode selector switch is on "Setting", its control function is working according to a calculated curve in the RAM. The curve is calculated from a partial curve already entered. This mode is arrived at if the burner is switched off during a programming sequence and then restarts. The programming can be continued by operating a switch (change to "EI" mode"). Flame signal and control release are present.
- ST indicates that the VMS has gone to "Fault". The fault code can be called up in "Status" switch position. In the "load rating" switch position the load rating at the time of the fault is displayed.
- VO indicates that the VMS is in "Pre-ventilation" mode. There is a signal on terminal 2 and a signal on terminal 3. Pre-ventilation routine active.
- HAND or HA indicates that the VMS has been switched to manual mode whilst the burner is running. In the "Load rating" selector switch position the load can now be adjusted by means of the channel 1 switch. To quit manual mode, press a switch other than the channel 1 switch.
- ext Hand indicates that the VMS was switched to manual operation, but the load was specified externally and not via the channel 1 key (that is, e.g. via remote software or bus).
- LE indicates that the output regulator of the VMS is deactivated and the load is controlled by an external signal.

| Input terminals | | | | Mode | |
|-----------------|--------|--------|--------|-----------|----------------------|
| term.2 | term.3 | term.4 | term.8 | | If also on "Setting" |
| 0 | 0 | 0 | 0 | AU or NA | EI or EZ |
| 1 | 0 | 0 | 0 | BE or ZÜ | EI or EZ |
| 1 | 1 | 0 | 0 | VO | EV |
| 1 | 0 | 0 | 1 | GL | EG |
| 1 | 0 | 1 | 1 | Automatic | EI |

O₂ regulator modes

- op O₂ regulator on standby (during burner startup), or O₂ regulator temporarily switched off as a function of load via parameters 914 and 915.
- or O₂ regulator active
- ot O₂ regulator temporarily deactivated (air shortage, probe dynamics, etc)
- od O₂ regulator deactivated (during fault) e.g. test routines failed during burner startup, dynamic test negative, O₂ regulator temporarily deactivated for longer than 1 hour, etc.

"ES" Mode
(set - control)



Should the burner skip to "ES" mode whilst programming is in progress

This mode allows the electronic compound to run within curve sections already entered and thereby facilitates setting.

If the load drops by 40 points, the VMS skips to "ES" mode, thereby controlling the outputs automatically.

"ES" mode is also started if the selector switch 1 is set to load rating and the channel 2 switch is pushed up.

Back to normal programming:

touch a switch

- the VMS changes back to "EI" mode

Continue programming in the usual way

If the burner cuts-out whilst programming is in progress

Continue programming

Should the burner cut out due to control shutoff, proceed as follows:

Undertake no further action on the VMS

Wait until the boiler temperature falls

Allow burner to start quite normally

Pre-ventilation

- "EV" appears on the display

- VMS controls the outputs according to the pre-ventilation



The highest load point already entered is not exceeded.



For your safety:

"ES" mode should be run only by trained personnel with the system under constant supervision.

Run to next load rating to be programmed

Push switch up

- VMS switches back to "EI" mode

continue programming at the point where the burner cut-out previously occurred



Should the mains voltage to the unit have failed (display dark, operating LEDs out), before switching back to automatic, all curve points already entered will have been lost. Start programming from beginning again.

Recalling the checksums and the safety times

Selector switch (1) to "Set-point feedback"

Press acceptance (3) and keep pressed

- the checksums and the safety times appear one after the other on the display

Each of the parameter levels is safeguarded by its own checksum. The checksums for each level and the safety and pre-ventilation times are displayed here in succession


Order:

- CRC 16 of level
- 0: adjustable without password
 - 1: adjustable by person commissioning
 - 2: adjustable by burner/boiler manufacturer
 - 3: adjustable only by LAMTEC
 - 4: adjustable only by LAMTEC



After changing of one parameter, the new checksum can be determined after 1 hour or direct after power on of the VMS.

Calling up running time meter

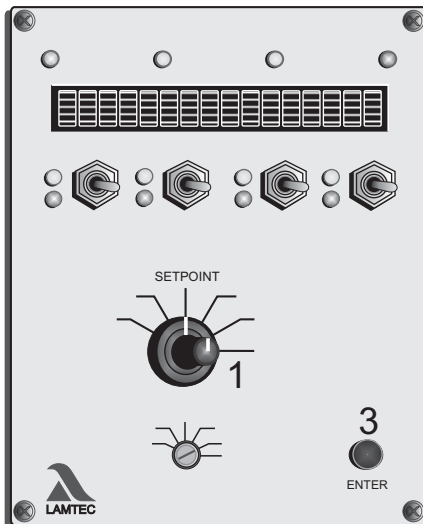

Selector switch (1) to set-point

Press Acceptance (3) and keep pressed

- a moving text appears giving the following data:

- total running hours
- running hours on curve set 1
- starts on curve set 1
- running hours on curve set 2
- starts on curve set 2

Where the 4 curve set or 8 curve set option is used the running hours and starts on the additional curve sets are also displayed.

The sum of the curve set 1 running hours and curve set 2 running hours does not necessarily give the running hours value displayed in total. The total counter relates to the VMS running hours. It runs as soon as the unit is connected to a voltage (this also provides the basis for the fault history). The single running time meters relate to the burner running hours. These run as soon as the burner is in operation with the respective curve set (flame signal to the VMS)

What happens in the event of VMS fault



*If the processor detects a fault, it runs the outputs in the programmed direction, e.g. air on, fuel off, re-circulation closed
The fuel solenoid valves close. The fault signal relay pulls on with a few seconds delay. Automatic restarting may be possible, depending on the nature of the fault.*

Reading off a fault

Red fault LED lights up

Selector switch to "Status"

- Fault code is displayed / Load rating at the time of the fault is displayed (externally and internally)

Note code / Note load ratings

Press Acceptance

- Plain text message appears on display incl. running time meter reading up to the time of the fault

Resetting a fault

Selector switch to "Status"

Left-hand switch up


- the fault is cleared unless the cause is still directly present.

Alternative:

VMS: Emit terminal 2 signal briefly (min. 1 seconds) via external switch.
Fault is cleared!

Calling up fault history

The VMS stores the last 10 faults with the associated running time meter reading.

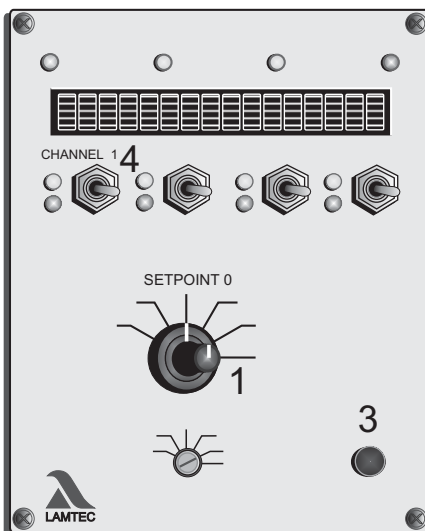

Selector switch (1) to Status

- Instantaneous status appears on display

Channel 1 switch (4) up

- last fault code appears on display
- associated running time meter reading appears on display

Press Acceptance (3)

- text and running time meter reading appears on display

Channel 1 switch (4) up again


- penultimate fault code appears on display
- associated running time meter reading appears on display

In this way the fault history can be browsed through by operating the channel 1 switch



If you are sure that there has been a voltage on the VMS at all times since the last fault, the time of the fault can be determined by means of the current running time meter reading and the current time.

O₂ regulation perturbed

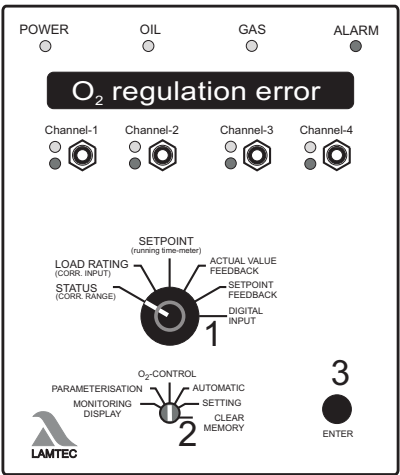

In the event of perturbations, a warning message is displayed and the O₂ regulator is deactivated. The specified base value "Without regulation" or the one for "Air shortage" is set. The display shows the running text "O₂ regulation perturbed". The burner is not shut down as a rule.

The corresponding error code can be called up by setting the selector switch to Status. A plain text message about the cause of error appears after pressing the Acceptance key (3).

Air shortage perturbation

If the actual O₂ value is significantly smaller than the target value and corrective action by the VMS cannot rectify this error, the regulator is deactivated and the base value for air shortage errors is output. If desired, an air shortage burner shut-down can be triggered by the VMS. This is achieved by setting parameter 897 to 1.

The error code is H360, "Error shut-down by O₂ regulator".

Resetting O₂ errors

O₂ errors are automatically reset with each new burner start-up. This is permissible, since a 100% O₂ measurement test is performed at each start-up.

Manual resetting of O₂ errors is possible at any time, as follows:

- Set selector switch (1) to Status
- VMS in O₂ regulation mode?
 - If not, switch over to O₂ regulation mode by pushing channel key 3 (4) upwards.

- Press the Acceptance key (3) and
 - call up the cause of error (mandatory!)


Push key 3 (4) upwards

Calling up O₂ regulation error history

Switch over to VMS mode (compound regulator)

Selector switch (1) to Status

- Switch channel 3 down
 - In this way the fault history can be browsed through by operating the switch channel 2

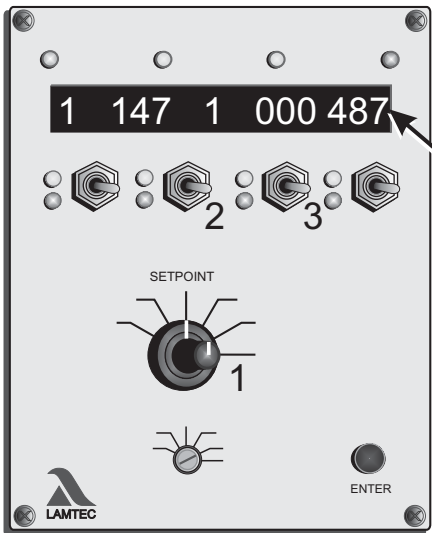

| | | | |
|---------------|---------------|-----------|-----------------|
| 1 | 147 | 1 | 000 487 |
| ↑ | ↑ | ↑ | ↑ |
| Current fault | Internal load | Curve-set | Operating hours |

The display of O₂ history disappears automatically after 5 sec. O₂ regulator faults lasting over 30 sec are stored. They are only stored in the EEPROM once the fault is cleared up or the VMS leaves the operating mode Regulation or Base load.

Fault codes

An "H" before the fault code indicates that the main processor has identified the cause of the defect.

A preceding "Ü" indicates that the monitoring processor has triggered the fault.

*An * next to the fault code means that the control unit will attempt restarting after a few seconds.*

| Fault code number | | | Aids |
|-------------------|-----|---|-------------------|
| H / Ü | 1 | Ignition flame fails to start | |
| H / Ü | 2 | Extraneous light fault | |
| H / Ü | 3 | Flame fault during ignition sequence | H2 |
| H / Ü | 4 | Flame fault during operation | |
| H / Ü | 5 | Flame signal does not appear during 1st safety period | H2 |
| H / Ü | 6 | Flame signal goes out during the stabilisation period | H2 |
| H / Ü | 7 | Flame signal goes out during the 1st safety period | H2 |
| H / Ü | 8 | Flame signal goes out during the 2nd safety period | H2 |
| H / Ü | 9 | Flame signal does not appear during the safety period | H2 |
| H / Ü | 10 | Flame signal goes out during the safety period | H2 |
| H | 102 | Internal communication FIFO memory has overflowed | A7 |
| H / Ü | 103 | Internal fault: EEPROM | A7,A9 |
| H | 104 | D/A converter defective | A7 |
| H / Ü | 105 | Curve data are defective! Curve set No. | A7,A13, A9 |
| Ü | 106 | Unterschiedliche Parameter zwischen HP & UE, at parameter No.: | A7,A14, A9 |
| H / Ü | 107 | Inadmissible configuration in the parameters | A7,A12 |
| H | 108 | Different digital input signals on main and monitoring processor | A7,G8 |
| H / Ü | 110 | CRC-16 test has discovered a fault | A7,A11 |
| H / Ü | 111 | RAM test detects fault | A7 |
| H / Ü | 120 | Different operating mode between main and monitoring processor | A24 |
| Ü | 121 | The correction is outside its admissible range, channel 1 | F1 |
| Ü | 122 | The correction is outside its admissible range, channel 2 | F1 |
| Ü | 123 | The correction is outside its admissible range, channel 3 | F1 |
| Ü | 124 | The correction is outside its admissible range, channel 4 | F1 |
| Ü | 125 | The correction is outside its admissible range, channel 5 | F1 |
| H / Ü | 139 | Integrierter Flammenwächter: Störung bei Selbsttest | |
| H / Ü | 140 | The EEPROM is defective | A2,A7, A12,A15 |
| H / Ü | 141 | Potentiometer defect, feedback varies too rapidly: channel 1 | E13 |
| H / Ü | 142 | Potentiometer defect, feedback varies too rapidly: channel 2 | E13 |

| Fault code number | | | Aids |
|-------------------|-----|---|-------------------|
| H / Ü | 143 | Potentiometer defect, feedback varies too rapidly: channel 3 | E13 |
| H / Ü | 144 | Potentiometer defect, feedback varies too rapidly: channel 4 | E13 |
| H / Ü | 145 | Potentiometer defect, feedback varies too rapidly: channel 5 | E13 |
| H / Ü | 151 | The deactivated re-circulation valve does not reach "CLOSED" position rapidly enough: channel 1 | E2,B1,B3 |
| H / Ü | 152 | The deactivated re-circulation valve does not reach "CLOSED" position rapidly enough: channel 2 | E2,B1,B3 |
| H / Ü | 153 | The deactivated re-circulation valve does not reach "CLOSED" position rapidly enough: channel 3 | E2,B1,B3 |
| H / Ü | 154 | The deactivated re-circulation valve does not reach "CLOSED" position rapidly enough: channel 4 | E2,B1,B3 |
| H / Ü | 155 | The deactivated re-circulation valve does not reach "CLOSED" position rapidly enough: channel 5 | E2,B1,B3 |
| H / Ü | 161 | Running direction monitoring, channel 1 | EE2,E17 |
| H / Ü | 162 | Running direction monitoring, channel 2 | EE2,E17 |
| H / Ü | 163 | Running direction monitoring, channel 3 | EE2,E17 |
| H / Ü | 164 | Running direction monitoring, channel 4 | EE2,E17 |
| H / Ü | 165 | Running direction monitoring, channel 5 | EE2,E17 |
| H | 171 | Dead band exceeded for too long: channel 1 | B1,B4,E2 E4,E5 |
| H | 172 | Dead band exceeded for too long: channel 2 | B1,B4,E2 E4,E5 |
| H | 173 | Dead band exceeded for too long: channel 3 | B1,B4,E2 E4,E5 |
| H | 174 | Dead band exceeded for too long: channel 4 | B1,B4,E2 E4,E5 |
| H | 175 | Dead band exceeded for too long: channel 5 | B1,B4,E2 E4,E5 |
| H | 181 | Dead band not attained for too long: channel 1 | B1,B4,E2 E4,E5 |
| H | 182 | Dead band not attained for too long: channel 2 | B1,B4,E2 E4,E5 |
| H | 183 | Dead band not attained for too long: channel 3 | B1,B4,E2 E4,E5 |
| H | 184 | Dead band not attained for too long: channel 4 | B1,B4,E2 E4,E5 |
| H | 185 | Dead band not attained for too long: channel 5 | B1,B4,E2 E4,E5 |

| Fault code number | | | | Aids |
|-------------------|-----|--|--|----------------------|
| H / Ü | 191 | 1 st monitoring band exceeded for too long: channel 1 | | B1,B3 |
| H / Ü | 192 | 1 st monitoring band exceeded for too long: channel 2 | | B1,B3 |
| H / Ü | 193 | 1 st monitoring band exceeded for too long: channel 3 | | B1,B3 |
| H / Ü | 194 | 1 st monitoring band exceeded for too long: channel 4 | | B1,B3 |
| H / Ü | 195 | 1 st monitoring band exceeded for too long: channel 5 | | B1,B3 |
| H / Ü | 201 | 1 st monitoring band not attained for too long: channel 1 | | B1,B3 |
| H / Ü | 202 | 1 st monitoring band not attained for too long: channel 2 | | B1,B3 |
| H / Ü | 203 | 1 st monitoring band not attained for too long: channel 3 | | B1,B3 |
| H / Ü | 204 | 1 st monitoring band not attained for too long: channel 4 | | B1,B3 |
| H / Ü | 205 | 1 st monitoring band not attained for too long: channel 5 | | B1,B3 |
| H / Ü | 211 | 2nd monitoring band exceeded for too long: channel 1 | | E11,B5 |
| H / Ü | 212 | 2nd monitoring band exceeded for too long: channel 2 | | E11,B5 |
| H / Ü | 213 | 2nd monitoring band exceeded for too long: channel 3 | | E11,B5 |
| H / Ü | 214 | 2nd monitoring band exceeded for too long: channel 4 | | E11,B5 |
| H / Ü | 215 | 2nd monitoring band exceeded for too long: channel 5 | | E11,B5 |
| H / Ü | 221 | 2nd monitoring band not attained for too long: channel 1 | | E11,B5 |
| H / Ü | 222 | 2nd monitoring band not attained for too long: channel 2 | | E11,B5 |
| H / Ü | 223 | 2nd monitoring band not attained for too long: channel 3 | | E11,B5 |
| H / Ü | 224 | 2nd monitoring band not attained for too long: channel 4 | | E11,B5 |
| H / Ü | 225 | 2nd monitoring band not attained for too long: channel 5 | | E11,B5 |
| H | 231 | Compound sticking: channel 1 | | E2,E4,E5 C1,B1,B3 |
| H | 232 | Compound sticking: channel 2 | | E2,E4,E5 C1,B1,B3 |
| H | 233 | Compound sticking: channel 3 | | E2,E4,E5 C1,B1,B3 |
| H | 234 | Compound sticking: channel 4 | | E2,E4,E5 C1,B1,B3 |
| H | 235 | Compound sticking: channel 5 | | E2,E4,E5 C1,B1,B3 |
| H / Ü | 301 | Wire break on correction input, channel 1 | | F2 |
| H / Ü | 302 | Wire break on correction input, channel 2 | | F2 |
| H / Ü | 320 | Wire break load input | | D7 |

| Fault code number | | | Aids |
|-------------------|-----|---|---------|
| H / Ü | 321 | Wire break feedback channel 1 | E9 |
| H / Ü | 322 | Wire break feedback channel 2 | E9 |
| H / Ü | 323 | Wire break feedback channel 3 | E9 |
| H / Ü | 324 | Wire break feedback channel 4 | E9 |
| H / Ü | 325 | Wire break feedback channel 5 | E9 |
| H / Ü | 351 | Barred curve change with burner running | G3 |
| H / Ü | 352 | Inadmissible curve selection (no selection signals present) | G4 |
| H / Ü | 353 | Inadmissible curve selection (more than one selection signal present simultaneously) | G4 |
| H | 360 | Fault switch-off through integral O ₂ regulator | |
| H / Ü | 361 | Different status from ignition position relay | E6 |
| H / Ü | 370 | Internal communication between processors defective | A20 |
| H | 371 | Internal load output defective | C4 |
| Ü | 372 | Load value difference between HP and UE too great | A7,D11 |
| Ü | 381 | Difference between HP & UE too great Correction input 1 | A7,F6 |
| Ü | 382 | Difference between HP & UE too great Correction input 2 | A7,F6 |
| Ü | 391 | Fuel valves opened in ST operating mode | A7,A19 |
| H | 392 | Remote no longer responds (time-out) | |
| H | 393 | Remote shut-off has been triggered (shut-off via interface) | |
| Ü | 400 | Different point number on acceptance | A23 |
| H / Ü | 451 | Ignition position was exited in ignition mode, channel 1 | E18 |
| H / Ü | 452 | Ignition position was exited in ignition mode, channel 2 | E18 |
| H / Ü | 453 | Ignition position was exited in ignition mode, channel 3 | E18 |
| H / Ü | 454 | Ignition position was exited in ignition mode, channel 4 | E18 |
| H / Ü | 455 | Ignition position was exited in ignition mode, channel 5 | E18 |
| H | 500 | Internal comparison: relay output terminal 67 does not pull on | A19, A7 |
| H | 501 | Internal comparison: relay output terminal 43 does not pull on | A19, A7 |
| H | 502 | Internal comparison: relay output terminal 16 does not pull on | A19, A7 |
| H | 503 | Internal comparison: relay output terminal 11 does not pull on | A19, A7 |
| H | 504 | Internal comparison: relay output terminal 45 does not pull on | A19, A7 |
| H | 505 | Internal comparison: relay output terminal 68 does not pull on | A19, A7 |
| H | 506 | Internal comparison: relay output terminal 36 does not pull on | A19, A7 |
| H | 507 | Internal comparison: relay output terminal 41 does not pull on | A19, A7 |

| Fault code number | | | Aids |
|-------------------|---|--|----------|
| H 508 | Internal comparison: relay output terminal 76 does not pull on | | A19, A7 |
| H 520 | Internal comparison: relay output terminal 67 does not drop out | | A19, A7 |
| H 521 | Internal comparison: relay output terminal 43 does not drop out | | A19, A7 |
| H 522 | Internal comparison: relay output terminal 16 does not drop out | | A19, A7 |
| H 523 | Internal comparison: relay output terminal 11 does not drop out | | A19, A7 |
| H 524 | Internal comparison: relay output terminal 45 does not drop out | | A19, A7 |
| H 525 | Internal comparison: relay output terminal 68 does not drop out | | A19, A7 |
| H 526 | Internal comparison: relay output terminal 36 does not drop out | | A19, A7 |
| H 527 | Internal comparison: relay output terminal 41 does not drop out | | A19, A7 |
| H 528 | Internal comparison: relay output terminal 76 does not drop out | | A19, A7 |
| H / Ü 600 | Program monitoring time (FAT) elapsed cause | | H1,H6 |
| H / Ü 601 | Leak check fault: gas pressure still present Main gas 1 defective CAUTION! Follow safety instructions in the aids | | I1,H6,I4 |
| H / Ü 602 | Leak check fault: gas pressure still present Main gas 2 defective CAUTION! Follow safety instructions in the aids | | I2,H6,I4 |
| H / Ü 603 | Vent gas line manually | | I3 |
| H / Ü 604 | Flame signal does not promptly follow 1 st safety period | | H2 |
| H 605 | Oil pressure >min!!! | | H5 |
| H 606 | Gas >min occurs in oil operating mode | | H3 |
| H 607 | Ignition position acknowledge drops out inadmissibly between ignition position and end of safety period 2 | | H4 |
| H 608 | Boiler safety interlock circuit drops out inadmissibly | | |
| H 609 | Gas safety interlock circuit drops out inadmissibly | | |
| H 610 | Oil safety interlock circuit drops out inadmissibly | | |
| H / Ü 611 | Gas pressure too low. gas >min during operation | | |
| H / Ü 612 | Gas pressure too high | | |
| H 613 | Air pressure signal absent | | |
| H 700 | Pre-ventilation signal present without signal on terminal 2 | | G2,G5 |
| H 701 | Flame signal present without signal on terminal 2 | | G2 |
| H 702 | Flame signal appears during pre-ventilation | | G2,G5 |
| H 703 | Flame signal goes out, although terminal 2 signal still present | | G2 |
| H 711 | Inadmissible operating mode change | | H6 |

| Fault code number | | Aids |
|-------------------|--|--------|
| Ü 713 | Incorrect signal combination in AU mode | H6 |
| Ü 714 | Incorrect signal combination in BE mode | H6 |
| Ü 715 | Incorrect signal combination in VO mode | H6 |
| Ü 716 | Incorrect signal combination in ZP mode | H6 |
| Ü 717 | Incorrect signal combination in ZÜ mode | H6 |
| Ü 720 | Ignition transformer switched on too long | H6 |
| Ü 721 | Ignition valve opened too long | H6 |
| Ü 722 | Fuel valves opened in servicing mode | H6 |
| Ü 723 | Ignition sequence lasts too long | H6 |
| Ü 724 | Gas valves opened in oil fuel mode | H6 |
| Ü 725 | Oil valves opened in gas fuel mode | H6 |
| Ü 726 | Main gas 1 opened without main gas 2 | H6 |
| Ü 727 | Main gas 1 opened inadmissibly | H6 |
| Ü 728 | Main gas valves and ignition valve opened too long | H6 |
| Ü 729 | Ignition sequence lasts too long (without pilot burner) | H6 |
| Ü 730 | Servicing mode without pilot burner | H6 |
| Ü 731 | Ignition valve opened, although unit configured without pilot burner | H6 |
| Ü 732 | Incorrect signal combination during operation | H6 |
| Ü 733 | Incorrect signal combination after operation | H6 |
| Ü 734 | Pre-ventilation time not adhered to | H6, H8 |
| Ü 735 | Fuel safety interlock circuit missing | H6 |
| Ü 736 | Leakage test: Both gas valves opened | H6 |
| Ü 737 | Leakage test: Main gas 2 shut-off delayed too long | H6 |
| Ü 738 | Leakage test: Incorrect sequence | H6 |
| Ü 739 | Leakage test: Main gas 2 open too long | H6 |
| Ü 741 | Leakage test: Main gas 1 open too long | H6 |
| Ü 743 | Flame detection: flame after-burn too long | H6 |
| Ü 744 | Flame detection: flame back on | H6 |
| Ü 745 | Program monitoring time too long | |

| Fault code number | | Aids |
|-------------------|--|---------------|
| Ü 746 | Solenoid valve cur-out defective | H6 |
| Ü 747 | Leakage test: venting into boiler not permitted | H6 |
| Ü 750 | Fault cut-out via the BUS | |
| Ü 751 | No data transfer via BUS (time-out) | |
| Ü 760 | Fuel change not permitted during adjustment | G3 |
| Ü 791 | BUS master is stopped | |
| Ü 792 | BUS data length is wrongly designed | |
| Ü 793 | BUS master is disconnected | |
| H / Ü 800 | Error in the parameters, at parameter No. | A7,A9, A14 |
| H / Ü 900 | Fault in sequencer internal self-test | A7 |
| H / Ü 901 | Terminal 10 +24 volt cut-out defective | A7,A21,A22 |
| H / Ü 902 | Fault in over-voltage self-test | A7 |
| H / Ü 903 | Fault in optical coupler self-test | A7,G7 |
| Ü 904 | Fault in the load reference | A7,A21 |
| Ü 905 | Fault in the reference element of the main processor | A7,A21 |
| H 906 | Fault in the reference element of the monitoring processor | A7,A21 |
| Ü 911 | Fault in the reference, channel 1 | A7,A21 |
| Ü 912 | Fault in the reference, channel 2 | A7,A21 |
| Ü 913 | Fault in the reference, channel 3 | A7,A21 |
| Ü 914 | Fault in the reference, channel 4 | A7,A21 |
| Ü 915 | Fault in the reference, channel 5 | A7,A21 |
| H / Ü 921 | Relay driver self test: terminal 11 output defective | A19,A7 |
| H / Ü 922 | Relay driver self test: terminal 16 output defective | A19,A7 |
| H / Ü 923 | Relay driver self test: terminal 43 output defective | A19,A7 |
| H / Ü 924 | Relay driver self test: terminal 67 output defective | A19,A7 |
| H / Ü 925 | Relay driver self test: terminal 45 output defective | A19,A7 |
| H / Ü 926 | Relay driver self test: terminal 68 output defective | A19,A7 |
| H / Ü 927 | Relay driver self test: terminal 36 output defective | A19,A7 |
| H / Ü 928 | Relay driver self test: terminal 41 output defective | A19,A7 |
| H / Ü 929 | Relay driver self test: terminal 76 output defective | A19,A7 |
| H / Ü 998 | Internal fault: | A7 |
| H 999 | Internal fault: | A7 |

A1

Display remains dark
all LEDs are off

Check whether there is a voltage present on the unit

Check "F1" fuse (back of the unit in cold unit case)

Check connectors for correct seating

A2

Display remains dark

or shows confused characters,
some or all LEDs light up

or fault 111, 140

After changing an EPROM or RAM

- take out processor card

Check modules for correct polarity
(all notches point in same direction)

Check that all modules are correctly seated in the bases
(any prongs bent over), if necessary push in again

Check correct seating of the processor card connection to backplane

Check correct seating of the power supply card connection to the backplane

A3

"AU" does not appear
between the channels

Cause: mode selector switch is not set to automatic
or signal on terminal 2 is not equal to zero

A4

Ignition-position relay does
not pick up when selector
switch is in the 'Set' position

Check fuse 'F 2' (on front panel of power supply unit)

Check wiring from the relay module to the VMS

(see connection plan)

Possible that parameters for ignition-position relay are not correctly set,
see parameter no. 753 (level 2 only)

A5

"Store" does not appear on display
when switching from "Setting"
to Automatic

No curve point was modified or the modification was lost

Repeat programming

A6

Instead of 'EI', the display
shows 'EV', 'ES', 'EZ' or 'EG'

If 'EV', 'EZ' or 'EG'

- The signal sequence is not correct
Burner is still in the start-up phase.

Wait until preventilation is complete and control is enabled

In case of absence of preventilation and 'control enabling' signal
(terminal 4) at that point: check wiring (terminals 2, 3, 4, and 8)

If 'ES'

Press any of the keys

- 'ES' display changes to 'EI'

In the 'ES' mode, the VMS provides control function according to a partial
curve in the RAM. When a key is pressed, it changes to the 'Set' mode.

A7

Fault in an internal self-test

Reset fault, possibly turning mains voltage off and back on
Check all fuses in the unit

If fault message occurs repeatedly in succession D change unit or respective card

A9

Fault 105

When reading the redundant data in the EEPROM an error was discovered.

Reset fault, if fault still persists

EEPROM possibly defective

Re-enter curve

Enter parameters again or check

If fault persists:
Change EEPROM and read in curves and parameter again,
see A12

A10

| | | |
|-------|-----|-----|
| Fault | 211 | 221 |
| | 212 | 222 |
| | 213 | 223 |
| | 214 | 224 |
| | 215 | 225 |

After switching from "Setting" to
"Automatic" with burner running

If switched from "Setting" to Automatic with the burner running, the VMS immediately assumes its monitored operation. The value of the internal load is set to the last known position of the compound in "Setting" and now follows the external load. If this last compound position cannot be properly determined, however, (because a control element was moved from the last accepted point by means of a switch before storing the curve, for example), the value of the internal elements are too far removed from the set-point values, load is equated to that of the external load. If the actual values of the control the fault "2nd monitoring band" is emitted.

The curve has nevertheless been properly stored.

Reset fault

A11

Fault 110

The program EPROM may be defective.

Request a new program EPROM from, LAMTEC, giving precise details of the order number and contract number at the time, the agent's order and all software checksums. Please always return the defective EPROM (for address see back cover of this booklet).

A12

Fault 140, 107
EEPROM defective

The EEPROM of each processor contains important operating data, the parameters and the curves.

When replacing this module, a basic setting must be provided before it is possible to do anything else with the unit.

If the unit data are provided via PC interface it will be sufficient to feed these data into the new EEPROM.

For details, see remote control software documentation.

If this is not possible, a pre-programmed E² EPROM must be ordered from LAMTEC, quoting the unit number and the software checksums.

This is essential in order to avoid any confusion.

For the address, see the back cover of the booklet.

A13

Fault 105

In checking the redundant curves an error was identified

If data were provided via PC interface:

Enter curve data again for the corresponding curve set

if this is not possible:

select appropriate curve set

Clear memory

Re-enter curve

A14

Fault 106

In checking the redundant parameters an error was identified

If data were provided via PC interface:

Read in parameter again

if this is not possible:

select said parameter

check value displayed and if necessary amend

In order to restore the parameter, a change must be made. If the correct value is displayed, adjust by one digit and change back again.

Should several parameters be defective, repeat as necessary.

If the parameter is not included in your release level, an EEPROM must be requested from LAMTEC.

A15

Fault 105
140

On attempting to store the curve in the EPROM an error was identified.

Repeat programming

if necessary, change EEPROM, see A12

A16

It was attempted to store or add a point, but there appear to be "> 20 points"

The curve already contains 20 points. It is not possible to add any more. Only individual load points can be altered (recognisable from the flashing figure after the load rating). Otherwise a new curve must be entered via "Clear memory".

or

if a fuel change occurred after "Clear memory" the old curve is reactivated.

Run load down and clear memory again.

Selector switch (2) to "Clear memory"

Press Acceptance (3)

A17

The software version number displayed does not match the number on the configuration sticker.

The unit supplied possibly did not correspond to the order. Consult LAMTEC. (For address see back cover of this booklet) or since the time of delivery the program EPROM has been changed and the new checksums were not noted.

A18

The running text
"Recessed selector switch defective!
Automatic activated!" appears

Voltage off and back on

If fault appears again

Change front panel

Further fault-free operation is possible. In the event of a defective selector switch, however, it may be that the "Setting" mode can no longer be selected.

A19

| | | | |
|-------|-----|-----|-----|
| Fault | 500 | 520 | 921 |
| | 501 | 521 | 922 |
| | 502 | 522 | 923 |
| | 503 | 523 | 924 |
| | 504 | 524 | 925 |
| | 505 | 525 | 926 |
| | 506 | 526 | 927 |
| | 507 | 527 | 928 |
| | 508 | 528 | 929 |

The VMS checks the function of all connected relays on the external modules. The voltage present on the relay coils is read back.

Possible causes:


- Relay module not connected or connected wrongly
- Relay or relay module defective
- External voltage is fed into the corresponding terminal
- Terminal 9 and terminal 10 reversed
- 24V fuse F2 (front panel) defective

Check wiring

Check relay

- measure coil for continuity

| | | |
|-------|-----|--|
| A20 | | |
| Fault | 370 | <div>The internal communication is not functioning. Voltage off and back on After changing EPROM Check whether the monitoring program EPROM is correctly inserted These faults are often caused by EMC leakage. Check shielding. Otherwise: Change processor car</div> |
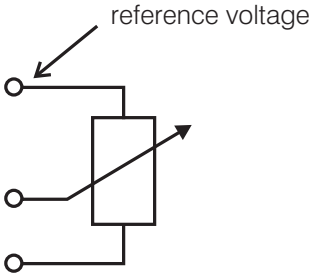
| | | |
|-------|---|---|
| A21 | | |
| Fault | 901 911 904 912 905 913 906 914 915 | <div><i>After changing a potentiometer the reference must be inputted again.</i> <i>Voltage levels are checked in the unit. These can give rise to false errors as a result of incorrect external wiring.</i></div> <div>Check wiring In the case of analog inputs the reference element serves for voltage supply to the potentiometers.</div> <div></div> <div>in the case of fault 904, 911 915, in particular, check the corresponding reference, In the unloaded condition (terminal open) it is 2.4 V. With potentiometer connected somewhat lower, depending on the resistance of the potentiometer. Re-enter reference value with potentiometer connected. Selector switch (2) to "Setting" Back to "Automatic" - new reference value is stored.</div> |

| | | |
|-------|-----|---|
| A22 | | |
| Fault | 901 | <div>Although terminal 9 and 10 both have +24V they are nevertheless monitored by internal tests at different times. They must not be connected to one another. Use terminal 9 only for supplying digital input signals. Use terminal 10 only for the supplying the relay modules. Do not connect any other consumers unless expressly permitted.</div> |

A 23

Fault 116
400

The monitoring processor and the main processor may not have precisely the same load rating, so that in one an old point has been overwritten, whilst in the other a new one has been added. This is possible particularly where the load ratings of the individual points lie close together.

Selector switch (2) to "Clear memory"

Press Acceptance (3)

Re-enter curve

A24

Fault 120

Different operating modes on main and monitoring processors.
The digital input signals are detected at slightly different times on main and monitoring processor.

A signal change occurs only for such a brief instant that the main processor detects it but the monitoring processor does not.

Check signal sequence

B1

Motor does not move

Check whether "OPEN" and "CLOSE" relays pull on when the switch (4) is operated.

If not:

Make sure that there is not a fault
(recognisable from the fault LED)

Check F2 fuse (on power supply front panel)

Check VMS relay-module connection

If so:

Check whether "OPEN" and "CLOSE"
signals are present on motor

Check fuse on relay-module

Check voltage supply circuit of the motor

B3

| | | |
|-------|-----|-----|
| Fault | 151 | 201 |
| | 191 | 202 |
| | 192 | 203 |
| | 193 | 204 |
| | 194 | 205 |
| | 195 | |

The control element may not have reached its set-point value rapidly enough.
Possible especially on control elements that are activated separately and
then have to run their full travel (e.g. re-circulation damper or flue gas damper
or in the case of flying curve switching).

Increase control speed on motor (if possible)

or

Limit control range by means of limit switch (in order to save running time)

otherwise

Increase parameters for monitoring bands (if admissible)
(possible only for level 2)

B4

| | | |
|-------|-----|-----|
| Fault | 171 | 181 |
| | 172 | 182 |
| | 173 | 183 |
| | 174 | 184 |
| | 175 | 185 |

Although the control element is in the monitoring band it does not reach
the dead band.

Increase pulse length for the channel (parameter 730 to parameter 734)
or
limit switch is too close the programmed top or bottom point.

Adjust limit switch

*After adjusting the limit switch the FMS must read in the range limits again,
see page 111.*

B5

Fault

211 221
212 222
213 223
214 224
215 225

2nd monitoring band fault appears sporadically during operation.

Cause:

Motor is possibly running in wrong direction

- this may happen on capacitor motors if:
 - the capacitor is defective
 - there is a broken wire in the motor or in the lead
-

C1

Control element does not react
Changes to continuous output
of the FMS

Measure continuous output in order to make sure that the VMS is
working correctly.

Check output circuit to the control element

*It is recommended that the VMS output signal be simulated with current
transmitter, making it very easy to locate the fault.*

See also C2 and C4

C2

No current signal measurable on the
continuous output, although a
figure >0 appears on "continuous
output value" display

Hardware probably defective

First change continuous additional cards (see page 16)

if fault persists, change processor card

if fault persists, change backplane

C4

Fault 371

*The monitor output of the VMS constantly monitors the current flowing
(terminals 47 and 49), (only if set to "Internal Load"). A current must flow at
all times if the monitor output is configured to "Internal Load".
If the output is not used, the terminals must be short-circuited.*

Check wiring

Measure current
(Maximum apparent ohmic resistance 600 W)

Short-circuit terminals directly

Reset fault

*If the current can no longer flow entirely via the negative input (terminal 49)
because of an external earth connection, this fault will occur even though the
output current is correct.*

If the 'internal load' is not used for fail-safe application (e.g. for display only),
switch off monitoring (parameter 764).

D2

Load signal cannot be changed

Check whether fault present

if so

Rest fault
(selector switch on status switch up)

if not

Check load circuit
If only "000" is displayed
- current input poles reversed

D3

When changing a point,
"Err" or >20 point appears on the
display instead of "Point"

Load rating was not run precisely to the point previously programmed.

Repeat process

but this time

Run precisely to load rating

It is possible that the digital display shifts after the load rating, if
- the load rating is right at the edge of the adjustment range

For this reason:
Run load rating to the middle of the adjustment range
(flashing number after the load rating)

D4

Load signal cannot be set higher
than approx. 500, although the
5kW potentiometer runs
over the full range

Load potentiometer wrongly connected (middle reversed with outer)
or
the internal wiring of the configuration cards causes the VMS to expect a
current signal as load default

Check wiring

Check that the correct configuration jumpers are inserted,
if not, change them

D5

Load value does not attain the
bottom value indicated

If the load transducer is in the basic position but does not emit
the lowest possible value.

Make sure that this position of the load transducer is the lowest load
rating position that occurs in operation

D6

Load rating does not attain
the highest value indicated

If the load transducer is in the maximum position but does not emit the
highest possible value.

Make sure that this position of the load transducer is the highest
load rating position that occurs in operation.

D7

Fault 320

Load input is not correctly connected

In the case of load due to current default:
Current is less than 4 mA, poles possible reversed

Check wiring

Check input current

D11

Fault 372

The two load ratings for main and monitoring processor are compared with
one another.

Change processor card.

E1

A minimum value is not displayed in "Actual value" position and "AU" display

On feedback via potentiometer:

Cause: potentiometer connections transposed

Check terminals

Cause: Potentiometer incorrectly fitted to the motor shaft

Turn potentiometer with control element connected until the desired value is displayed.

Cause: control element is not in "CLOSED" position

Check whether the "CLOSE" relay on the relay module has pulled on (recognisable from the LED on the relay module)

Check "F2" fuse (on the power supply front panel) of the VMS

Check lead to the control elements

(Is the "CLOSE" signal reaching the control element)

Cause: the VMS has read in an incorrect range limit.

Re-enter range limits

E2

Feedback does not move, although the control element moves

Check feedback connection to the VMS (See connection diagram)

In order to locate faults, it is recommended that the feedback be simulated at various points on the feedback circuit (using potentiometer or a current transmitter).

E3

The feedback of the continuous output does not display the values indicated

For feedback via potentiometer, see E4

For feedback via current, see E5

E4

The feedback displays much too high a value or goes only to approx. 500 points

Potentiometer leads are transposed

Check connections

In order to ensure that the VMS is working correctly a 5kW potentiometer may connected directly to the VMS feedback input in order to simulate the feedback manually.

E5

Feedback shows "000" and does not vary, even if the current is increased.

The poles of the feedback current signal are probably reversed.

Check connections

The feedback can be simulated by means of a current transmitter. This makes it easier to locate the fault on the feedback circuit.


E6

Fault 361

Main and monitoring processor do not show the same feedback value, although the same signal is fed to each of them

Check limit switch position

Check connections for transposition and reversal, see also E5, E4, E1
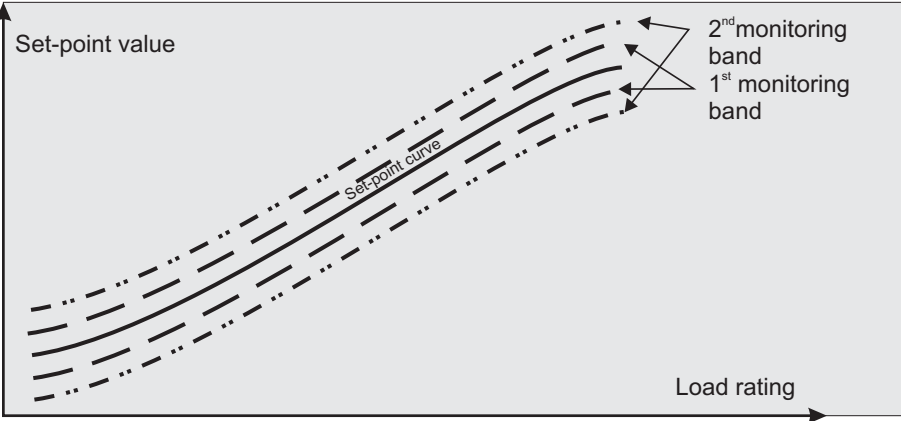
| | |
|---|--|
| E7 | |
| The feedback values displayed do not correspond to the values indicated | <div>If the feedback element in its normal position is not at the bottom stop, a higher feedback value may also be displayed. (e.g. in feedback of the fan speed minimum speed)</div> <div>Make sure that the control element is in the normal position.</div> |
| E8 | |
| The feedback potentiometers do not attain the upper value indicated | <div>The potentiometer connections are possibly transposed (centre with outer)</div> <div>Check wiring</div> |
| E9 | |
| Fault | 321 |
| | 322 |
| | 323 |
| | 324 |
| | 325 |
| | <div>Broken wire in feedback lead or feedback is not properly connected.</div> <div>Current feedback poles are possibly reversed or below a minimum value of 4 mA</div> <div>Check wiring</div> <div>Check input current</div> |
| E10 | |
| "---" on the display instead of a figure | <div>Selector switch (2) is on "Setting"</div> <div>Set selector switch (2) to "Automatic"</div> |
| E11 | |
| Fault | 211 |
| | 212 |
| | 213 |
| | 214 |
| | 215 |
| | 221 |
| | 222 |
| | 223 |
| | 224 |
| | 225 |
| | <div>Control element is outside the 2nd monitoring band.</div> <div><i>The 2nd monitoring band serves to switch off immediately in the even of an uncontrolled action of the control element.</i></div> |
|  | |
| <div>If the actual value is outside the 1st monitoring band, the compound is stopped. After the parameterised time fault 231-235 occurs.</div> <div>The 2nd monitoring band is standard 40 points above the 1st monitoring band.</div> | |

E11 - Continued

If the actual value is outside the 2nd monitoring band, there is an immediate shutdown (3 sec.).

Check control element, actuation and feedback.

A relay may be "sticking", the system may not have been in the starting position when starting (all channels closed)

The motor is possibly defective (direction of rotation reversed)

E12

Integral rev. speed sensor

During motor startup, the display increases from ca. 0-7 digits until from a certain point it suddenly jumps back again to 0-7 digits.

The sensing pulses are too short, or the contact gap between Namur sensor and measured object is too small, to allow error-free measurement at higher rev. speeds.

Check the Namur sensor's attachment:

- The measuring point should be made of steel if at all possible
 - Contact gap as small as possible
 - The measuring point must be at least as large as the sensor element's area
-

E13

Fault 141
 142
 143
 144
 145

Only on three-point step control output
the feedback values vary more rapidly than the maximum specified in the parameter section

Check potentiometers for short-circuits
otherwise
Change potentiometers

E14

Text message Channel X does
not reach aeration position rapidly
enough and/or fault 600

The range monitoring during pre-ventilation resulted in too low a limit stop value of the feedback potentiometer. The upper and lower limit value were not reached during pre-ventilation.

Check potentiometer, check continuous feedback value

Compare range limits with feedback stop values

If necessary, re-enter range limits

If limit switches are adjusted after a curve has been programmed in, the range limits must be re-entered.

Actuation of the motor possibly defective
Check relay module
Check wiring

E17

Fault 161
 162
 163
 164
 165

Only with "flying curve switching" option

With the flying curve switching option the 2nd monitoring band is replaced by running direction monitoring for up to 30 seconds after switching over. This tests whether the control element is moving towards the new set-point value.

Check feedback signal at the instant of switching, the value must change.

E18

Fault 451
 452
 453
 454
 455

A control element has left the ignition range after the VMS had detected the ignition position.

Possible causes:

- control element oscillating
 - wiring fault
 - holding torque of motor too low
-

F1

| | | |
|-------|---------------------------------|---|
| Fault | 121 122 123 124 125 | <i>The monitoring processor checks whether the present correction values lies within the range set.</i> |
| | | Check correction range |
| | | Otherwise A7 |

F2

| | | |
|-------|------------|--|
| Fault | 301 302 | Correction input is configured for 4 ... 20 mA, but the instantaneous value is < 4 mA, wire possibly broken or connection poles transposed |
| | | Check wiring |
| | | Check parameter 431, 432 |

F3

| | |
|---|--|
| Selector switch on LR1 on "Measure" incorrectly at output 0...20 mA but no 10 mA at output 4...20 mA but no 12 mA | Centre position potentiometer P4 on power unit LPE 1/S possibly set (see LR 1 operating instructions) Turn potentiometer to 10 or 12 mA (on LPE 1/S) |
|---|--|

F4

| | |
|--|--|
| A value other than 200 or +/-100 is displayed | The maximum correction range according to the standard software setting is 200 points. Other range sizes are available for special cases, however. |
|--|--|

F5

| | |
|----------------------|--|
| 50% is not displayed | Either 10 or 12 mA are not being fed to the VMS Measure current Check wiring Otherwise as for F2 or F3 or Jumpers are incorrectly inserted on the back of the front panel. Check |
|----------------------|--|

F6

| | | |
|-------|------------|---|
| Fault | 381 382 | The values of the correction input signals are compared between main and monitoring processor. Change processor card |
|-------|------------|---|

F8

Message

"Correction effect switched
off, since over 97% for
longer than 1 hour"

The correction signal is monitored in order to be able to detect an error function of the correction signal source (in O₂ regulation). If a correction signal >97% is present on the input for 1 hour a defect is assumed and the correction influence is disregarded.

Activate correction again

- Selector switch 1 to "Status"
 - Channel 1 switch up
- Check correction effect

Selector switch (1) to "Load rating"

Press "acceptance"

- instantaneous correction input is displayed

If display >97%, check O₂ regulator

G1

The display does not show 'Burner OFF' as the status signal.

The status signals are not 0.

Check status signals

No voltage should be applied to terminal 2, terminal 4 or terminal 8

G2

Fault 700
701
702
703

The signal sequence, as described in 'Function sequence' (Page 10), has not been adhered to.

Check wiring (see also G5)

Check actuation

G3

Fault 351 and
760

The curve set was changed during operation

Check wiring

Especially the activation of terminal 75

Even if the "flying curve switching" software option is activated on the VMS, allowing the curve set to be changed during operation, it must be remembered that in "EI" mode (Setting) a flying change is not permitted.

G4

Fault 352
353

There is a non-permissible signal combination for the fuel inputs (only one may be active; at least one must be active)

Check wiring

Check actuation

Especially the activation of terminals 1, 2, 5, 7, 35, 69, 71, 73, 74

G5

Fault 700

The preventilation signal is given at the wrong time or is still present at the wrong time.

Check wiring

Check actuation

Especially terminals 2, 3, 4 and 8

G6

No signal defaults are accepted (Status remains "Burner OFF")

24 V possibly defective (terminal 9 and 10)

Check fuse F2 (on power supply front panel)

G7

Fault 903

The optical couplers of the digital inputs are cyclically tested to see that they are functioning. This is done by briefly withdrawing the voltage from terminal 9 (+24 V supply). A check is then conducted to see whether the signals on the digital inputs also go to 0 V.

A voltage remains on at least one of the digital inputs during the self-test.

Check wiring

- terminal 9 might not have been used to supply the inputs.

Disconnect terminal 9

and

Re-measure voltage level on all inputs

- an external voltage is possibly being fed in
- terminal 9 and 10 are possibly transposed


Otherwise A7

G8

Fault 108


The digital input signals for main and monitoring processor are compared

Change processor card

| | |
|---|--|
| P1 Parameter 4 (level 2) | This parameter determines whether or not the compound control unit works with separate ignition point and whether the load default is set automatically during setting. (See Tips & Tricks) |
| P2 Parameter 707 | This determines whether the band shift in the event of a change in power output (in order to obtain excess air whilst running to a new load point) acts on the load axis or the set-point axis. If it acts on the set-point axis the points set are simply added to the existing set-points. If it acts on the load axis the points are rated at the steepness of the curve and only then added. In the case of continuous outputs and control elements with a linear characteristic the effect should be applied to the set-point axis. In the case of control elements with non-linear or exponential characteristic the parameter should be set to "1". |
| P3 Parameters 708 to 712 | The band shift of the respective channel in the event of a change in power is entered in points here. The electronic compound control unit automatically assesses the directions in which the band shift is to act on the basis of the configuration of each control element (air up, fuel down). The band shift also acts only when the load varies in the direction that represents an air advance for the channel (in a load reduction the fuel is advanced, in a load increase the air). The size of the values that must be entered here depends on the effect of the control element on the lambda. |
| P4 Parameters 346 to 350 | A number of points is entered here determining how wide the duct is to open in pre-ventilation. If 999 is entered (standard value) the duct runs as far as the stop. This parameter serves for setting pre-ventilation limits, e.g. on air dampers in order to curtail the pre-ventilation time (whilst nevertheless guaranteeing the exchange of air during pre-ventilation) or on the re-circulation damper in order to prevent overloading of the re-circulation frequency converter during pre-ventilation. |
| P5 Parameters 186 to 300 | The range limits (upper and lower) for the respective control element are entered here. Generally these are determined automatically, i.e. the VMS fills in this parameter itself. The range limits determined form the limits of the unit's control range. Should motors be changed or limit switch settings be adjusted, the range limits must be re-determined. |
| P6 Parameters 374 to 378 | These indicate how the control element is to behave in the event of a fault shut-off. The direction of running may be entered or the direction of running combined with an external condition. |
|  | <p>NOTE:</p> <p>Since the VMS is already in the "Fault" condition, the function of the control element can no longer be reliably monitored after this fault shut-off. If it is absolutely essential that the position entered by reliably attained, this must be guaranteed by way of a separate interrogation measure, e.g. limit switch.</p> |
| | <p>(may be possible with defined valve positions for turbine exhaust gas systems etc.)</p> <p>With some internal faults, the VMS also switches off the +24 V supply to terminal 10. In this case, too, the servomotors will no longer run.</p> |

| | |
|---|--|
| <p>P7 Parameters 517 to 676</p> | <p>The correction range in points is entered here. Since the possible entries range from 0 999 it is possible to program a horizontal to a channel and to run it entirely via the correction input. If parameter 430 is set to "0", only parameters 517 and 597 will function.</p> |
| <p>P8 Parameter 677</p> | <p>This setting determines what value the monitor output (terminal 47 and 49) will emit as 4 ... 20 mA signal. This function cannot be adjusted on VMS 5, since these terminals then serve for output of the channel 5 control signal. If the value of the output is set to "Internal Load" (parameter content "0" standard value), the internal monitoring for this signal is also active. This monitoring, however, can still be controlled via jumper. However, this monitoring is switched on as standard.</p> |
| <p>P9 Parameters 678 to 680</p> | <p>Same function as parameter 677, but for curve set 2 to 4. As a rule, however, the same contents are entered here as for parameter 677.</p> |
| <p>P10 Parameters 685 to 688</p> | <p>This indicates the number of points at which the monitor output will emit 4 mA, i.e. depending on the selected source for the monitor output signal, a lower range is selected from which the monitor output is activated. If the signal is below the selected limit, 4 mA nevertheless continues to be emitted, i.e. a change below the limit is not displayed.</p> |
| <p>Parameters 693 to 696</p> | <p>This setting determines at what number of points the monitor output will display 20 mA. If the number of points of the source signal is higher than the value set here, 20 mA is nevertheless emitted, i.e. a change in the source signal above the value indicated is no longer displayed.</p> |
| <p>P11 Parameter 702</p> | <p>This setting can determine how many points the air ducts are to advance if the "Flying Change" is activated.</p> |
| <p>Parameter 703</p> | <p>This setting determines how long after a curve set change the air advance remains active.</p> |
| <p>Parameter 704</p> | <p>This can be used to select the channels on which the air advance will act (via Bit pattern).</p> |
| <p>P12 Parameter 718</p> | <p>This setting determines how rapidly the external load signal will vary if the load is set via a DPS signal. In the case of a DPS signal the external load is formed by a counter that counts up or down depending on the prevailing contact. The speed of the counter is therefore set via this parameter. The setting is in points per minute. If the load is not a DPS signal, the parameter must be set to "0".</p> |

| | |
|-------------------------------------|--|
| P13 Parameters 719 to 723 | <p>If the respective channel is configured as continuous output, this setting can determine how rapidly this output must achieve the maximum adjustment. The time set here, however, is only a minimum running time. Due to the compound routine it may happen (for example, when using even slower damper drives on another channel) that this time is clearly exceeded. This parameter primarily serves to achieve an adjustment in the actuation frequency converters. The value set here should agree with the run-up time programmed on the frequency converter.</p> |
| P14 Parameter 839 | <p>This defines the dead band of the load input. Load changes lying within this entered range are ignored and do not lead to any adjustment of the compound. If the load dead band selected is too small, the compound runs very erratically, since even the most minor load changes give rise to a correction. Due to the additional routines, such as air advance in the event of changes in power output and overshoot (approaching of control element from one side) this leads to unnecessary disturbance. With a slightly fluctuating or disturbed load signal the control elements are in constant movement. Selecting too large a load dead band means that power requirements are not run at full capacity by the load control unit, or that this is done only when the set-point/actual difference becomes even greater, the change then occurring in an abrupt surge. This can lead to excessive fluctuations in the actual value of the control equipment (steam pressure or supply temperature). The optimum for this parameter must be determined on the system. Only in exceptional cases should the parameter content should be set below three digits, however, so that at least the signal fluctuations on the load input do not lead to adjustment of the compound</p> |
| P15 Parameter 729 | <p>This setting determines the minimum running time of the compound in seconds. This parameter serves to purposely retard the run-up time of the burner from low load to full load, or the run-down time in the opposite direction.</p> |
| P16 Parameters 730 to 734 | <p>If the respective channel is configured for DPS these parameters can be used to enter the minimum cycle length that must be emitted in the actuation of the relay module. The electronic compound endeavours to set the necessary cycle length for adjustment of the control element as a function of its running time and of the steepness of the curve, so that all control elements run to the new value as synchronously as possible. To do this it makes maximum use of short timing pulses in order to achieve a large variance between the control elements. Where external factors (inertia of the contactors or of the motor, or use of mechanical relay modules) call for a minimum cycle length so as to produce any reaction at all, this must be entered here. Where electronic relay modules and responsive motors are used, the smallest possible cycle length should be selected in the interests of a smooth and evenly running compound. Where type 6 60 R 0011 mechanical relay modules are used, the minimum cycle length must be set to no lower than one 1/10th of a second. With cycle lengths \leq than 1/10th of a second the relay may fail to transmit the clock pulses. The smallest value that can be emitted is 50 ms.</p> |
| P17 Parameter 754 | <p>This parameter is used to set the number of points by which the internal load must fall for the compound, during setting, to skip automatically to the "Set/Control" mode.</p> |

| | |
|---|--|
| P18 Parameter 758 | This parameter is used to configure the burner for post-ventilation. If the time is set to "0", no post-ventilation occurs. |
| P19 Parameter 755 | This serves for entering how many seconds the ignition position relays are delayed after detection of the ignition position by the compound (or ignition on the VMS is released). |
| P20 Parameter 756 | Here a delay time may be set so that the compound waits before leaving the programmed, separate ignition point after ignition, to run to the next base load point. This parameter only has any effect if a separate ignition point is configured. |
| P21 Parameter 757 | This serves for setting the delay time during which a given control release (signal on terminal 4) is ignored. During this time the burner remains in the ignition position or base load. |
| P22 Parameters 433, 434 | <p>Correction input spread factor This can be used to set a situation where the correction has a smaller effect at weak loads or vice versa, in the range (00.0 - 99.9). The standard setting is 10 (i.e. 01.0), then the correction has the same effect in all load ranges.</p> <p>With values above 1.0, the selected correction range increases with rising load and reaches the times-X value at full load.</p> <p>Example: Parameter value 35 $\hat{=}$ (3.5) Correction range 150 points With weak load the correction range is 150 points and at full load - 525 points. There is linear interpolation between these values.</p> <p>With values below 1.0, the selected correction range drops with increasing load.</p> <p>Example: Parameter value 5 $\hat{=}$ (0.5) Correction range 200 points With weak load the correction range is 200 points and at full load - 100 points.</p> |
|  | <i>This can be used to increase or reduce previous weighting of the correction range via the correction mode on the load axis.</i> |
| P23 Parameters 822, 823 | These are used to set the baud rate of the serial interface. The standard value for the parameter content is "4" (19.200 baud). Should it be apparent from the system that problems are occurring with serial transmission (particularly with long serial connections), it may possibly help to reduce the baud rate. However, this must be done both on the VMS and on the operating unit, e.g. laptop. |

| | |
|---|---|
| <p>P24 Parameters 826, 827</p> | <p>The network address for the respective serial interface is given here. The network address in the unit's delivered state is "0". The network address is to be altered only where several units are polled via a BUS. If a network address other than "0" is set, this must be noted on the unit sticker.</p> |
| <p>P25 Parameter 831</p> | <p>This may be used to set the brightness of the display. By means of this parameter the light intensity of the display can be adjusted to the ambient light conditions. Since the power consumption of the display is quite high, choosing a lower brightness level brings a not inconsiderable energy saving. This also reduces the amount of heat generated by the unit. When not being used, the unit after a time automatically switches to the lowest brightness level.</p> |
| <p>P26 Parameter 832</p> | <p>Here a time is configured in which the VMS, after the last operation (key press etc.) reverts to the lowest brightness level. As soon as a key is pressed or a fault appears, the unit automatically switches back to the brightness level set. If "0" is entered in this parameter the display does not dim down. In order to increase the life of the display, however, and to minimise the heat generated in the unit, we recommend that this parameter be used. The setting on delivery is 600 seconds, i.e. after 10 minutes without operation the unit switches its brightness level back.</p> |
| <p>P27 Parameters 740 744</p> | <p>This serves for setting the minimum time that must elapse after a control pulse from a DPS output until another one occurs. The smallest value is 50 msec. If a control element has a tendency to oscillate, stabilisation can be achieved not only by enlarging the dead band but also by increasing this parameter.</p> |
| <p>P29 Parameter 759</p> | <p>An ignition delay in seconds during setting can be entered here. This allows the person commissioning the unit to observe the 1st ignition attempt at the burner or boiler end. It runs from the 2nd operation of the acceptance key (after confirming the question "Really ignite?"). For details, see "Tips & Tricks".</p> |
| <p>P55 Parameters 850 to 885</p> | <p>This allows the display format to be configured.</p> |
| <p>P71 Parameter 427</p> | <p>This is used to set the re-circulation damper delay in seconds. For details of the effect of this parameter, see Appendix.</p> <hr/> <p>This parameter has a double function: If the unit is configured as VMS, a threshold value in points is given here (see VMS Commissioning Instructions).</p> |

| | |
|-----------------------|--|
| P 80 Parameter 790 | <p>This parameter activates the output regulator and selects the corresponding mode.</p> <p>A value of 0 means load regulator is switched off.</p> <p>A value of 1 means fixed target value regulator, switching between 2 target values is possible.</p> <p>A value of 2 means weather control.</p> |
| P 81 Parameter 791 | <p>As long as boiler temperature or steam pressure remain below this value, the startup circuit is operational (q.v.).</p> |
| P 82 Parameter 792 | <p>This is the internal load output value for the startup circuit.</p> |
| P 83 Parameter 793 | <p>The specified load is increased up to the maximum load over the time-interval indicated by this parameter, whilst the startup circuit is operational.</p> <p>Input is in seconds.</p> |
| P 84 Parameter 794 | <p>By entering a non-zero value, the internal load is limited to this maximum value, provided terminal 75 is set.</p> |
| P 85 Parameter 795 | <p>Must be set to "0".</p> |
| P 86 Parameter 796 | <p>This is where the target values are entered.</p> <p>796 = target value 1 if weather control is activated 2 (switch-over to target value with signal terminal 4), otherwise this parameter forms the lower target-value limit 1.</p> |
| Parameter 797 | <p>797 = upper target-value limit 1 if weather control is activated, otherwise this parameter is unassigned.</p> |
| Parameter 798 | <p>798 = target value 2 if no weather control is activated, otherwise this parameter forms the lower target-value limit 2.</p> |
| Parameter 799 | <p>799 = upper target-value limit 1 if weather control is activated, other wise this parameter is unassigned.</p> |
| P87 Parameter 800 | <p>This is where the weather control limits are entered, from which a floating target-value displacement is derived.</p> |
| Parameter 801 | <p>The entered value refers to the external temperature.</p> <p>In the case of external temperatures above the upper or below the lower limit, the maximum or the minimum target value is output as a fixed value.</p> |

| <p>P 88 Parameter 802</p> | <p>Control value for the thermostat function: If the boiler temperature or the steam pressure is below the necessary target value less the bottom control region, the burner is switched on. If a negative value is entered here, the burner starts via the target value.</p> | | | | | | | | |
|--|---|--------------------|----------------|---|----|---|---|-----|-----|
| <p>P 89 Parameter 803</p> | <p>If the boiler temperature or the steam pressure is above the necessary target value plus the top control region, burner load is set to base load. <i>Values between parameters 802 and 803 are the control region.</i></p> | | | | | | | | |
| <p>P 90 Parameter 804</p> | <p>If the boiler temperature or the steam pressure is above the necessary target value plus the value for Burner Off, the burner is switched off. <i>Values between parameters 803 and 804 are the shutdown region, i.e. base load is output as the demanded load.</i></p> <p>If the load regulator is deactivated (e.g. via remote control software, manual operation or for adjustment), the "Burner Off limit" is not operational.</p> | | | | | | | | |
| <p>P 91 Parameter 805 Parameter 806 Parameter 807</p> | <p>Example values: The control parameters are adjusted here.</p> <table border="1"> <thead> <tr> <th>Hot water facility</th><th>Steam facility</th></tr> </thead> <tbody> <tr> <td>4</td><td>10</td></tr> <tr> <td>3</td><td>5</td></tr> <tr> <td>250</td><td>100</td></tr> </tbody> </table> | Hot water facility | Steam facility | 4 | 10 | 3 | 5 | 250 | 100 |
| Hot water facility | Steam facility | | | | | | | | |
| 4 | 10 | | | | | | | | |
| 3 | 5 | | | | | | | | |
| 250 | 100 | | | | | | | | |
| <p>P 92 Parameter 808</p> | <p>The time that elapses until a new calculation of load-value displacement is performed (should correspond to the control-path's dead time). <i>An extension of the readjustment time increases the regulator's D-component indirectly, and vice versa.</i></p> | | | | | | | | |
| <p>P 93 Parameter 814 Parameter 815 Parameter 816 Parameter 817 Parameter 818 Parameter 819 Parameter 820 Parameter 821</p> | <p>Burner output for the relevant curve-set in % in base load. Serves only for conversion if a display in percent was selected.</p> | | | | | | | | |
| <p>Note: All load-regulator parameters (except for fuel output and load-regulator type) can be altered during current operation.</p> | | | | | | | | | |

P30

Parameter 896
Level 0

- 0 → O₂ regulation off
 - 1 → Standard regulator
 - 2 → Without lag time
 - 3 → Only display, neutral value is output
 - 8 → Only display, base value for deactivated O₂ regulation is output
 - 9 → Only display, base value for air shortage is output
- } Selection of regulation strategy:


P31

Parameters 897
901/902
917/918

Level 1

If O₂ regulation is perturbed, it is deactivated and the specified correction value for "Deactivated O₂ regulation" or "Air shortage" is output, depending on the cause. The burner is not shut down.

Parameter 897 is used to preselect whether the burner should be shut down in the event of "Air shortage" errors.

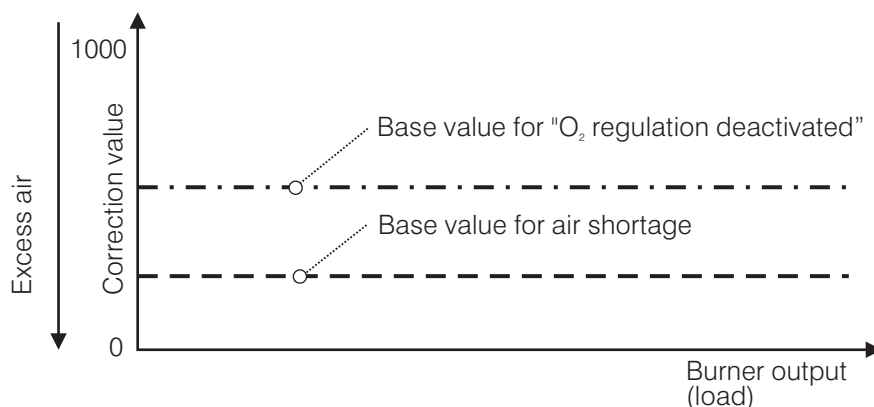

Note: The specified base value for air shortage must be smaller than or equal to the base value for deactivated O₂ regulation.

Recommended settings:

Base value for deactivated O₂ regulation \leq neutral value

Base value for air shortage $<$ base value for deactivated O₂ regulation



Note: The neutral value is obtained from the chosen correction mode:
Correction mode +50% / -50% → neutral value 500 $\hat{=}$ 50%
Correction mode +60% / -40% → neutral value 600 $\hat{=}$ 60%
See also the explanations on page 53.



ATTENTION!

It is necessary to ensure that the burner's operation is still stable with the selected base values. These can be selected as follows in order to check the combustion:

Parameter 896 set to

8 → correction input $\hat{=}$ base value for "Deactivated O₂ regulation"
 $\hat{=}$ parameter 901/902

9 → correction input $\hat{=}$ base value "Air shortage"
 $\hat{=}$ parameter 917/918

P32

Parameters 898/899/900
Level 0

See page 55, "Calculation and setting of control parameters"

| | |
|--|--|
| P33 Parameter 903 Level 1 | Deactivation time for O ₂ regulation in the case of curve switching during operation. Switching during burner operation. The time starts from when the actuators have reached the "new" position. The regulator is deactivated as soon as the switch-over starts, and the correction value for deactivated regulation is output (parameter 902). |
| P34 Parameter 904 Level 1 | Delay time for activating the O ₂ regulator after the flame appears. |
| P35 Parameters 914/915 Level 0 | These parameters can be used to deactivate the O ₂ regulator below and above a defined load value. The correction value for "Deactivated O ₂ regulation" is output. |
| P36 Parameters 919/920 Level 1 | These two parameters serve to equalise the O ₂ regulator module with an O ₂ meter coupled via an analogue signal (4...20 mA). Taking into account probe control during pre-ventilation, it is recommended to set a measurement range of 0...25 vol.% O ₂ . |
| P37 Parameters 931 to 934 Level 1 | These parameters are used to set the O ₂ monitoring bands for base and full load, referenced to the O ₂ target value in %. For details see page 45. Example: O ₂ target value 3 vol.% O ₂ 50% below threshold specified Shut-down limit < 1.5 vol.% O ₂ . |
| P38 Parameter 936 Level 1 | This parameter can be used to set the demand threshold for the "Dynamic probe test" function control. Factory setting: 2 → 0.2 vol.% O ₂ 0 → means "Dynamic probe test" switched off. |

Changing a data EPROM
or a
program EPROM

Pull out mains connector

Release and remove front panel

Pull out processor card (card fully to the left) and lay it down,
remove any auxiliary card (on processor card).

Carefully remove modules and replace with new ones.

Make sure that

- the module points in the correct direction (notches of the upper module row and the lower module row are on opposite sides)
- all prongs are correctly inserted in the base
- the correct module is changed

Press in firmly again
plugging any auxiliary card back in

Push the card back into the unit

Push on front panel

Push cards right in

Screw down

Plug mains connector back in

If a new program EPROM has been inserted D proceed as described
on page 113




Mixing up the data EPROM and program EPROM can destroy the unit.

If a unit is changed and the previously programmed curves are to be inserted into the new unit, care must be taken to ensure that both the data EEPROM of the main processor and the EEPROM of the monitoring processor are transferred to the new unit.

Unless the data have been backed up on PC. Then it is sufficient to record them onto the new unit.

Re-entering range limits

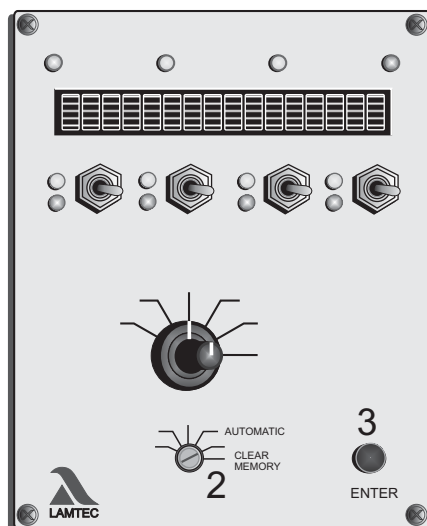

When adjusting the limit stops after programming, the range limits must be redefined.

Selector switch (2) to "Clear memory"

Press Acceptance (3)

- the curve and the range limits are cleared

Selector switch (2) back to "Automatic"

- "restore previous curve" appears on the display
- Channel key 3 (5) upwards
- "Read old curve" appears on the display
- since no point has been entered, the old curve is reactivated, but the range limits remain cleared

Allow system to pre-ventilate

- new range limits are re-entered

This can be observed at "set-point" switch setting. Without limits, the set-point is 0 or 999. If the limit is defined the set-point skips to the actual value.

Procedure for installation of
new software in the VMS

Insert EPROMs
Monitoring EPROM on card top left
Main processor EPROM on card bottom left


Power On
- Display: LAMTEC VMS 4/5
- Self tests

Please remember that the installation of modified software in a system that has already undergone acceptance will require a new acceptance or at least approval of the modification by the competent authorities. The new EPROM numbers (displayed during the start-up self-tests) are to be inserted accordingly.


Connection of screening

All leads from the VMS and to the VMS are to be screened (exception: 230 V lead).
The screening must be laid to PE by the shortest possible route.

Correct:



Wrong!

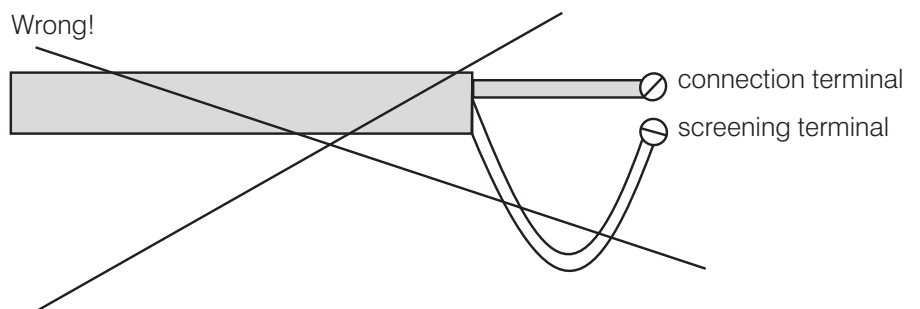

PE bus bar

On the back of the unit two bars are fitted left and right parallel to the terminal strips. All screening is to be laid up to those bars. Although this bar already has a connection to PE via the housing, the fault leakage conduction is improved if a separate, low-impedance PE wire is laid to each of these in addition.

Switch cabinet wiring

The low-voltage lines from the VMS and to the VMS should not lie parallel to the feed and down conductors of the power electronics in a conduit. Frequency converter lines and switches/contactors that switch high inductive or capacitive loads are especially critical. Parallel laying with the drive lines of solenoid valves, ignition transformers or large servomotors and the like is therefore to be avoided.

Although this unit to some extent far exceeds all applicable EMC standards, suitable wiring is essential in ensuring that the entire system functions trouble-free in all circumstances.


Screening of leads from the field

Screened leads from the field (e.g. potentiometer leads) are best laid directly to the VMS (without intermediate terminals).

Should intermediate terminals be necessary, the screening is also to be led immediately alongside via the terminal.

Long distances in the conduit without screening should be avoided.

Positive connection

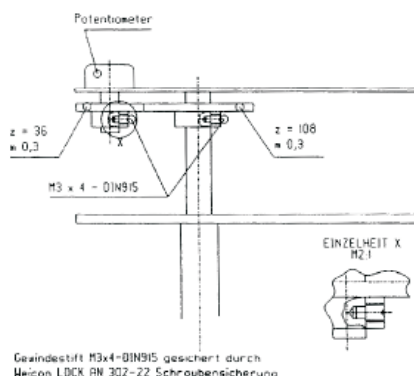

Since the VMS, in the case of three-point step channels, adjusts the damper until the actual value is equal to the set-point value, the feedback potentiometer must always reliably correspond to the damper position.

The damper motor potentiometer connections must be positive interlock connections, i.e. not able to rotate.

In addition potentiometers with high quality standards must be used (see below).

If one of the two points is not given, two independent potentiometers (not dual-operated potentiometers) per channel must be used for the feedback.

Example of positive potentiometer connection

The motor damper connection must always be a positive interlock.

Error-proof feedback

In the case of single-channel feedback of TPS outputs, only authorised potentiometers may be used. These must be switched directly.

Examples of potentiometers

The following potentiometers are authorised for use as sole feedback in the case of VMS, on condition that they are positively connected to the damper:

| | | |
|----------------|--------------|-------------------|
| 1. Novotechnik | SP-Serie | Rating: 5kW* |
| 2. Contelec | PL240 | Rating: 1kW -5kW* |
| 3. Contelec | PL310 | Rating: 5kW* |
| 4. Contelec | PL295 | Rating: 5kW* |
| 5. Bourns | 6639S-095-.. | Rating: 5kW* |

Other potentiometers are admissible only after consultation with LAMTEC or the TÜV.

Examples of servomotors

Servomotors with approved potentiometer, fitted with a positive interlock connection:


| | |
|----------------------|--|
| Schimpf | All motors with feedback type R1* and type R2* |
| Landis & Geyer | SQM series with potentiometer PL 240 |
| Haselhofer | HD 60 D 2 with Novotechnik potentiometer |
| Haselhofer | HD 60 D 10 with Novotechnik potentiometer |
| Aris | WAN1, WAN6 |
| Regeltechnik | |
| Kornwestheim | ST 5102 and ST 5113 |
| Keller | CA03 and CA12 |
| Auma | Address enquiries to the manufacturer |
| KFM Regelungstechnik | 4d124B |

Other motors are admissible only if the potentiometer connection forms a positive interlock or two independent potentiometers are used for feedback.

* also obtainable through LAMTEC

| Action | Switch Position top selector switch (1) | Switch Position bottom selector switch (2) | Buttons / Other |
|---|--|--|---|
| Recall correction ranges Status | | Monitoring display Automatic Setting Clear memory | Acceptance |
| Cold start (long reset) | Status | | Fault / Switch 1 OPEN |
| Warm start (short reset) | Status | | Fault / Switch 1 OPEN and Switch 2 OPEN |
| Code entry for parameterisation | Status | Parameterisation | Switch 2 / 3 OPEN Switch 4 CLOSE |
| Scan fault history | Status | Monitoring display Automatic Setting Clear memory | Channel 1 switch OPEN or CLOSE (not in fault mode) |
| Recall correction input values | Load rating | | Acceptance |
| Load adjustable via switch 1 (manual operation) | Load rating | Automatic | Channel 1 switch open/ close |
| Quit manual mode | Load rating | Automatic | operate a switch, channel 2,3 or 4 |
| Load adjustable via switch 1 (internal load default) | Load rating | Setting | Channel 1 switch OPEN or CLOSE |
| EG / ES mode is activated | Load rating | Setting Clear memory | Channel 3 switch CLOSE Mode GL or RG (EI on display) Compound engaged (No "ES barred" message) |
| EG / ES mode is terminated | | Setting Clear memory | Switch on front panel operated in EG or ES mode Exception Switch 1 at sep. ignition point or load default configured via switch |
| Display of running time meter / Starts counter | Set-point value | Monitoring display Automatic | Acceptance |
| Store point | Set-point value Actual value feedback | Setting | Acceptance |
| Clear present curve | Set-point value | Clear memory | Acceptance |
| Display of acceptance data CRCs for all levels Oil/gas safety times Pre-ventilation time | Set-point value feedback | | Acceptance |
| Traverse channels | Set-point value Actual value feedback | Setting | Switch 1 - 4 |
| Channel 5 set-point adjustable | Channel 5 display | Setting | Switch 2 |
| Scanning of serial No. | Actual value feedback | Monitoring display Automatic | Acceptance |
| Call up flame intensity | Actual value feedback | Automatic | Channel 3 switch up |

| Action | Modus | Position of top switch (1) | Position of bottom switch (2) | Keys / other |
|--|--------------------------------|----------------------------|---|---|
| Mode switch-over: O ₂ regulation-VMS/FMS | | Status | Automatic or O ₂ regulation | Channel 3 key (5) Open Z O ₂ regulation Closed Z VMS/FMS |
| O ₂ error reset | O ₂ - regulation | Status | Automatic | O ₂ regulation mode Press Acceptance key (3) and query cause of error Channel 3 switch (5)Z Open |
| Calling up text messages | O ₂ - regulation | Status | Automatic | Press Acceptance key (3) or O ₂ regulation |
| Adjusting correction value | TK | Load | O ₂ regulation | Channel key 1 Open Z Excess air Closed Z Air shortage |
| Changing O ₂ target value to "Adjust" | T | Set-point | O ₂ regulation | Channel key 4 Open Z more O ₂ Closed Z less O ₂ |
| Calling up O ₂ regulation error history | VMS/FMS | Status | Automatic | Channel key 2 upwards/downwards |
| Change load regulator | load value | Operation | | Channel key 3 up, channel key 4 down. When display blinks, channel key 2 for c hanging setpoint, store with ENTER key |

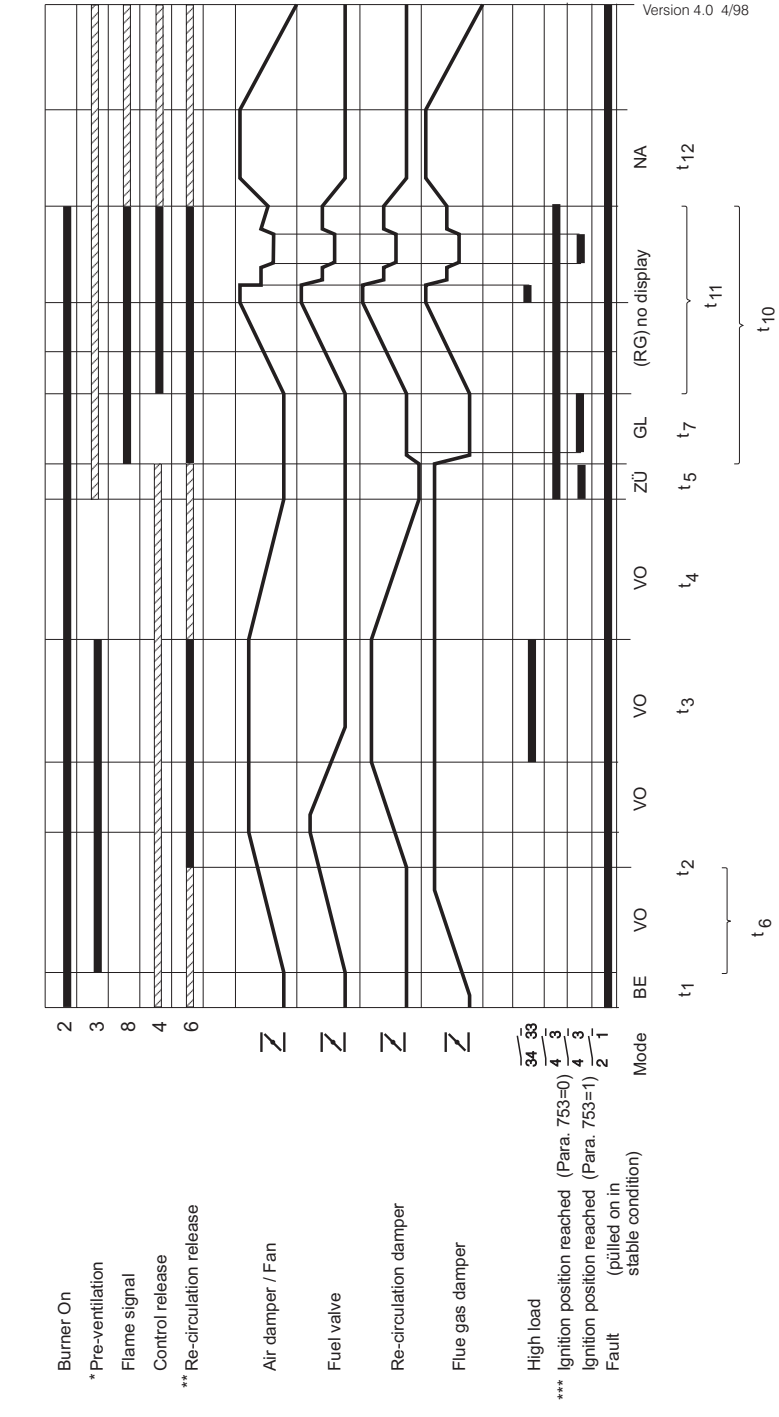

* If the ducts run closed after a shut-off, the pre-ventilation signal is ignored until they have reached the lower monitoring threshold.


** In the absence of the re-circulation signal, the re-circulation dampers remain closed or run closed (even in pre-ventilation). The extent to which re-circulation is retarded during pre-ventilation compared to the air damper, can be set via parameter "VODelR (No. 427) "0".

*** Parameters can be used to select whether the signal is to function as a limit switch or whether it is always present after ignition.


The following circuit diagrams are universal. They do not go into the use of the respective channels.

In addition all analog inputs (except correction) are drawn for potentiometer connection. If current is used as input quantity on some channels, however, the respective inputs are to be wired as shown below.


Where current is used as feedback signal in place of a potentiometer:

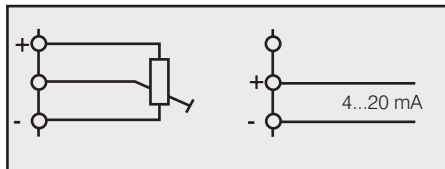


Where a three-point step signal from the load control unit is used as load input, the contacts are to be connected as follows in place of the load potentiometer:

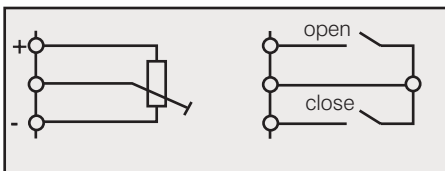


Where a 4-20 mA unit is to be supplied with 24 V.

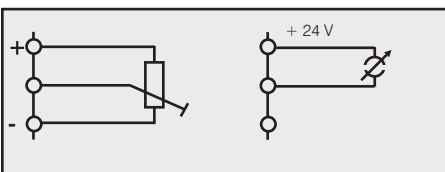


Where the speed feedback is not by way of 0/4 ... 20 mA but through integral speed sensing (direct switching of a Namur transmitter)

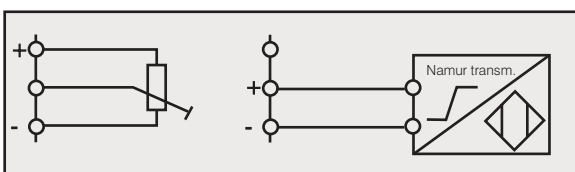

Where the speed feedback is not by way of 0/4 ... 20 mA but through integral speed sensing (inductive sensor with three wire system)

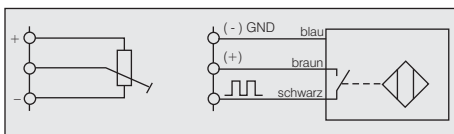

Where an input is configured as PT 100.

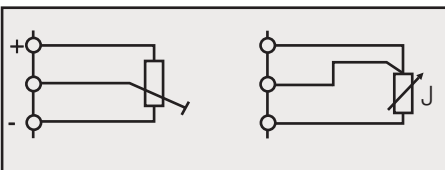


The pin-compatible 6 60 R 0131 relay module may also be used instead of the 6 60 R 0013 relay module shown.

If the 6 60 R 0019 is used instead for the actuation of dc motors, terminal 4 of the relay module must also be connected to terminal 31 of the FMS.


The digital signals can also be pre-set via the 230 V signal input module instead of via floating contacts (6 60 R 0018).

VMS 4 type 6 64 V 0010 with 4 three-point step control outputs

VMS 5 type 6 65 V 0010 with 4 three-point step control outputs and one continuous control output

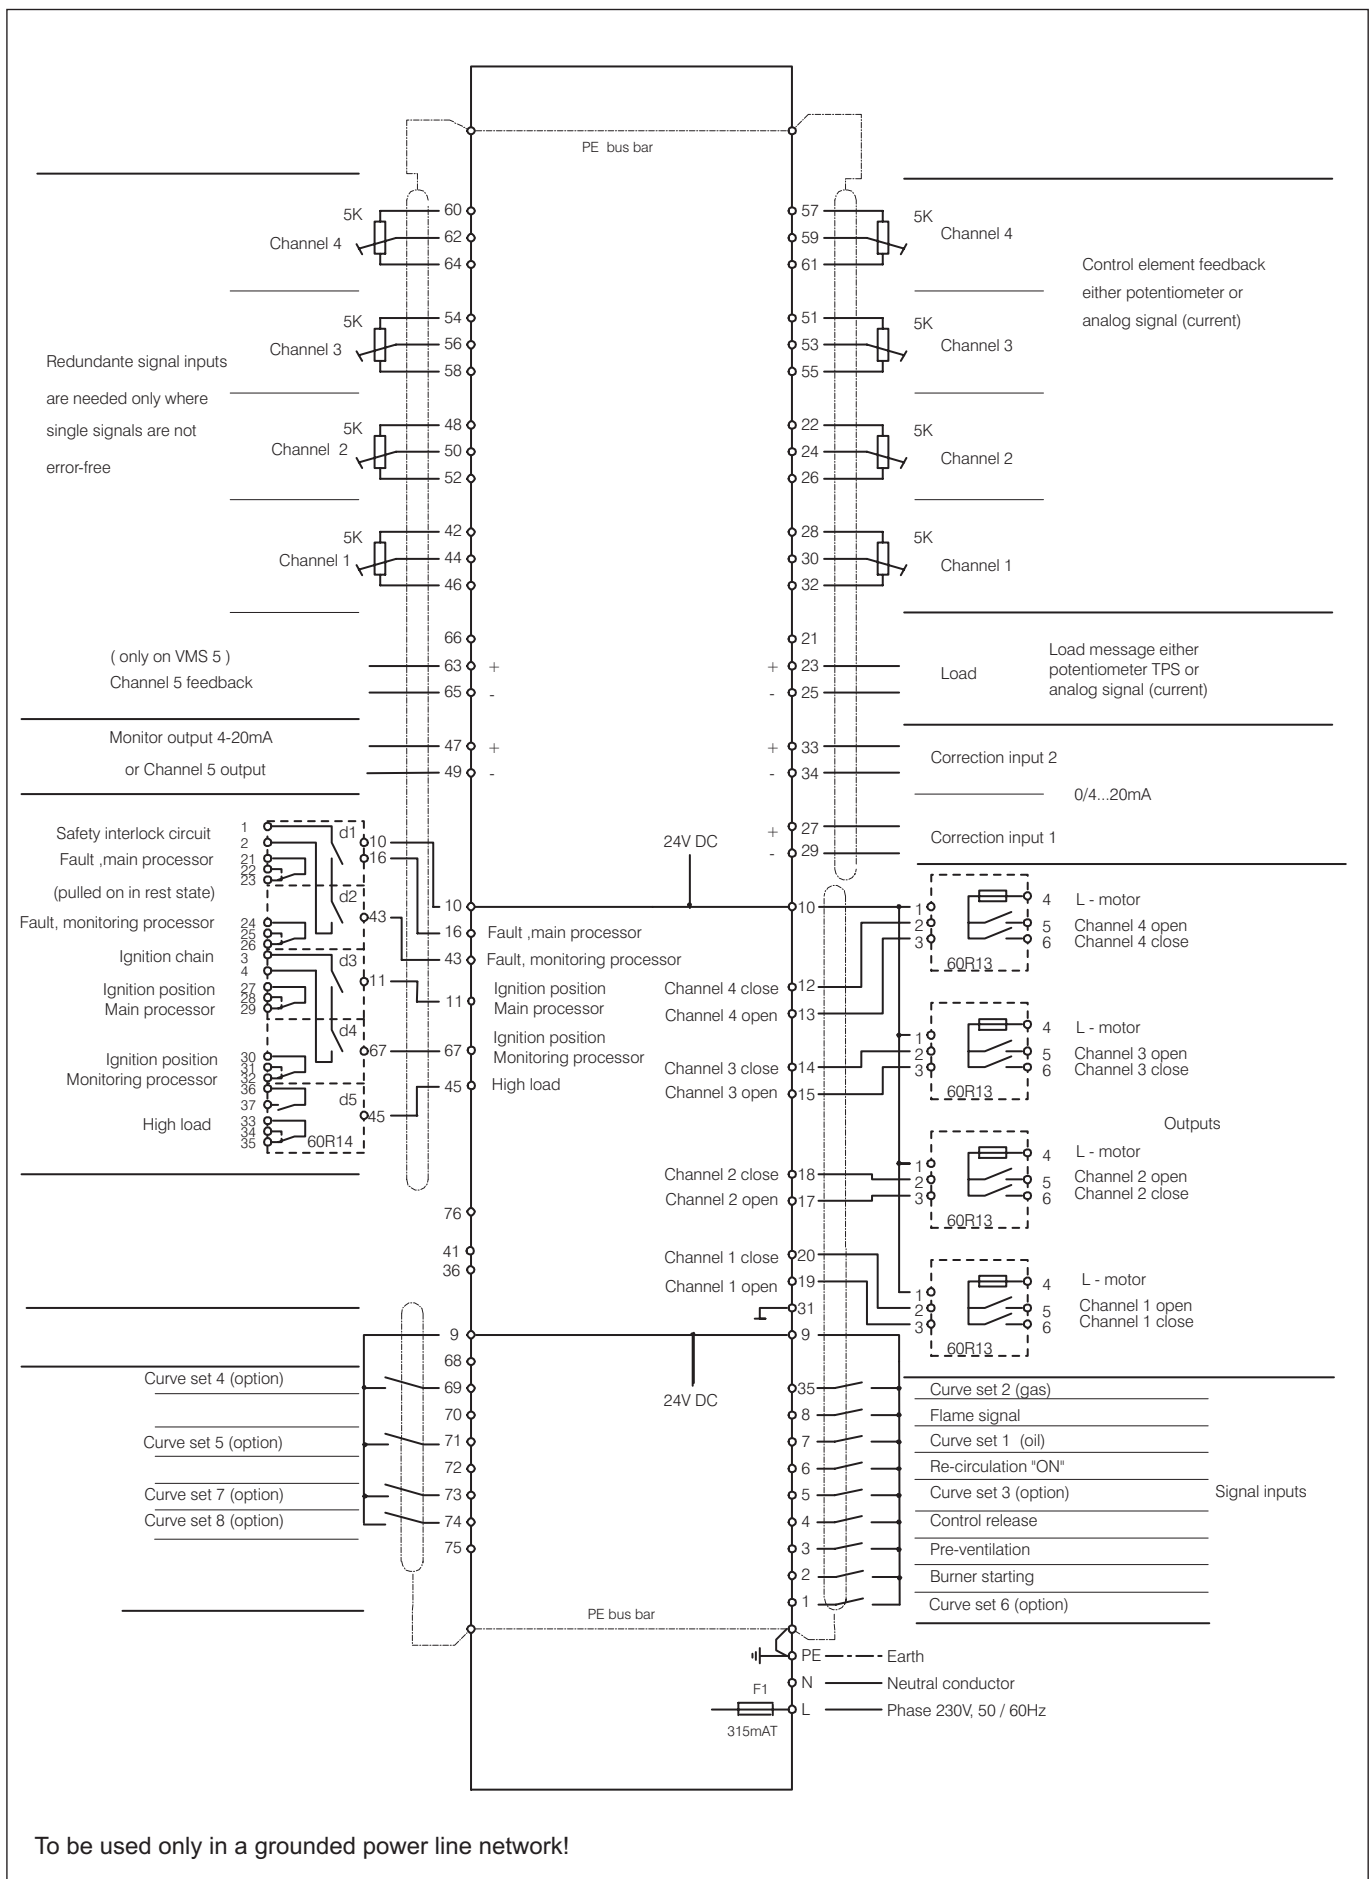


VMS 4 Typ 6 64 V 0020 with one continuous control output and 3 three-point step control outputs
 VMS 5 Typ 6 65 V 0020 with two continuous and 3 three-point step control outputs

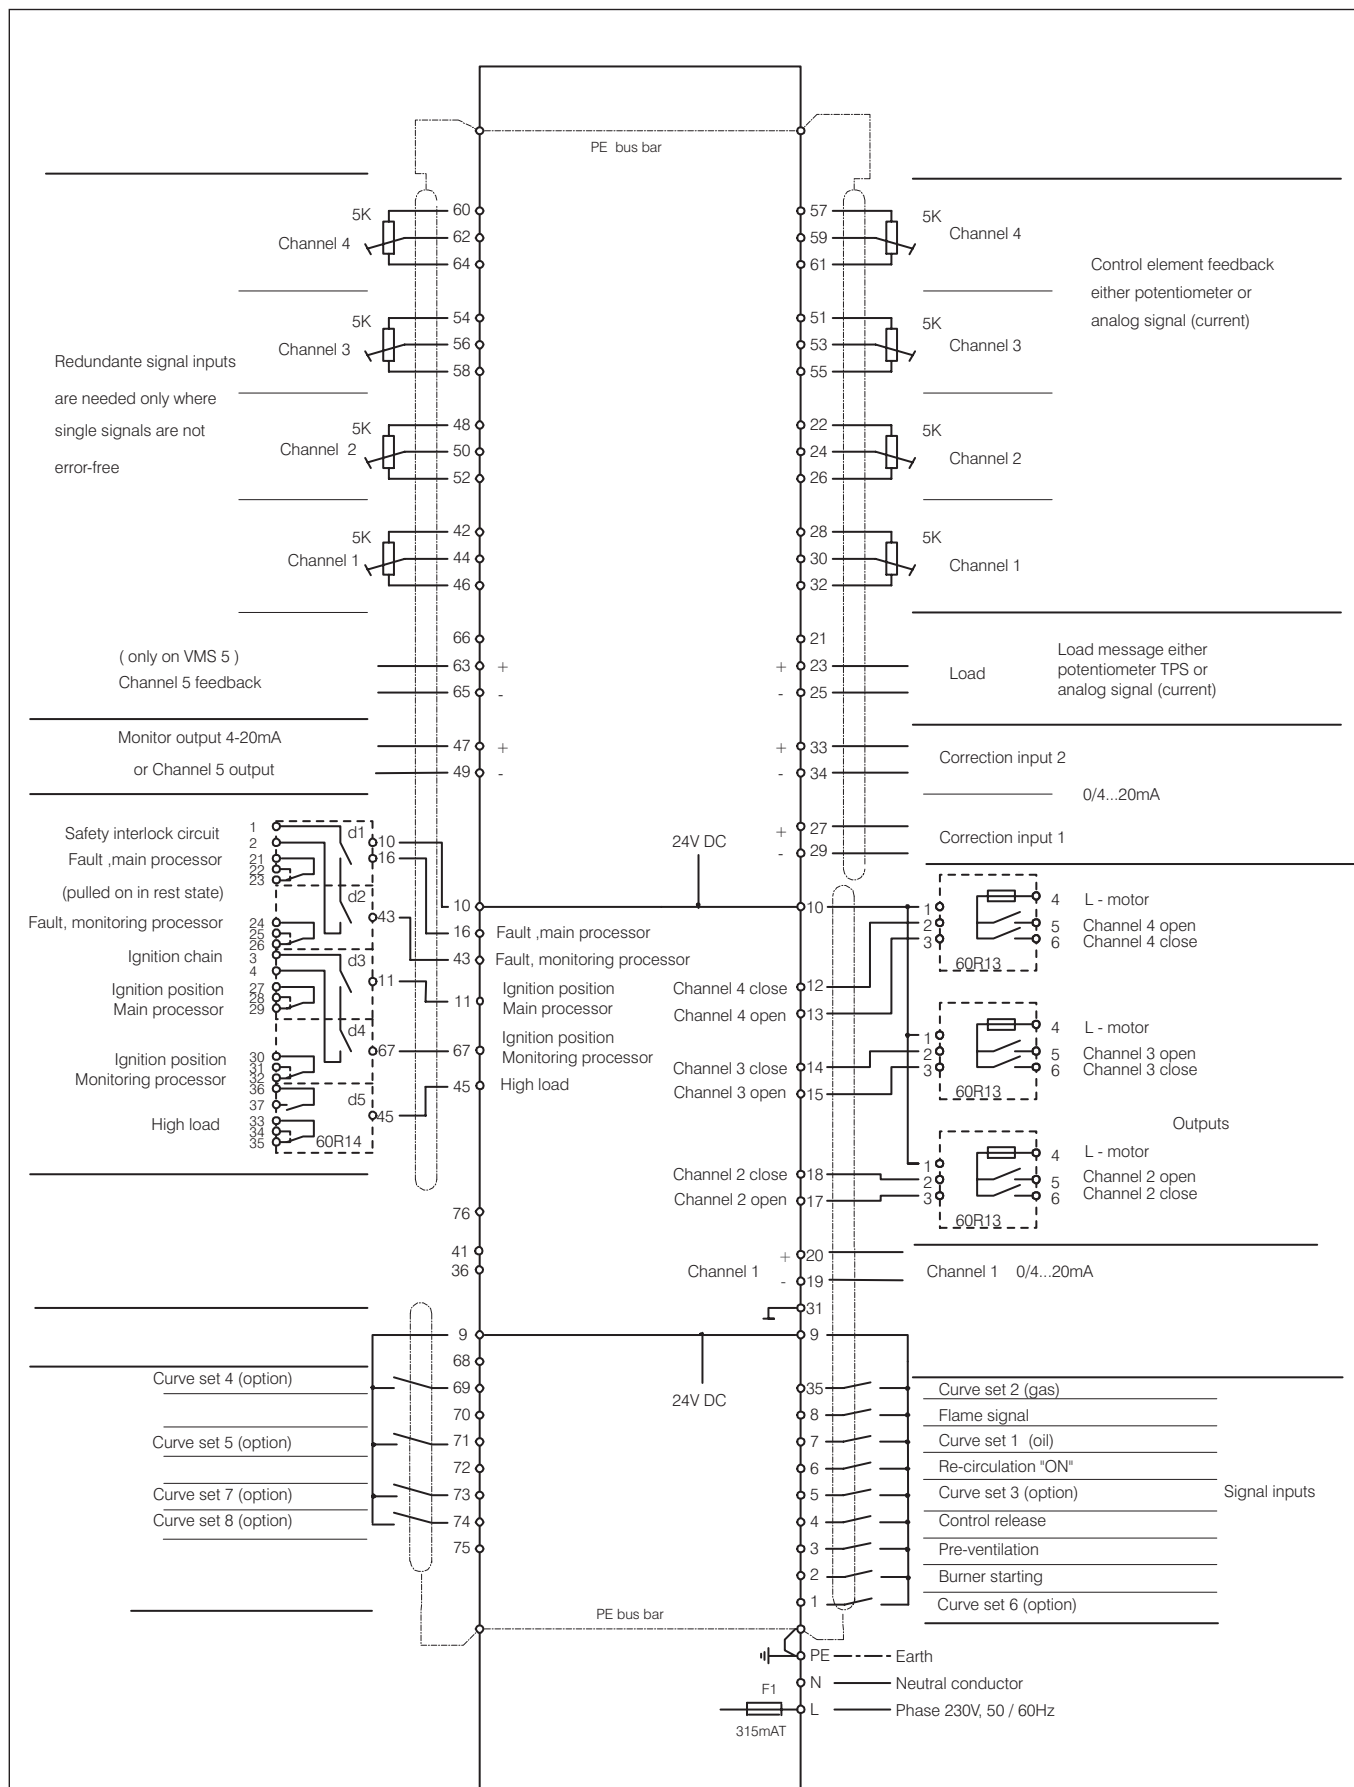

To be used only in a grounded power line network!


VMS 4 Typ 6 64 V 0030 with two continuous and 2 three-point step control outputs

VMS 5 Typ 6 65 V 0030 with three continuous and 2 three-point step control outputs

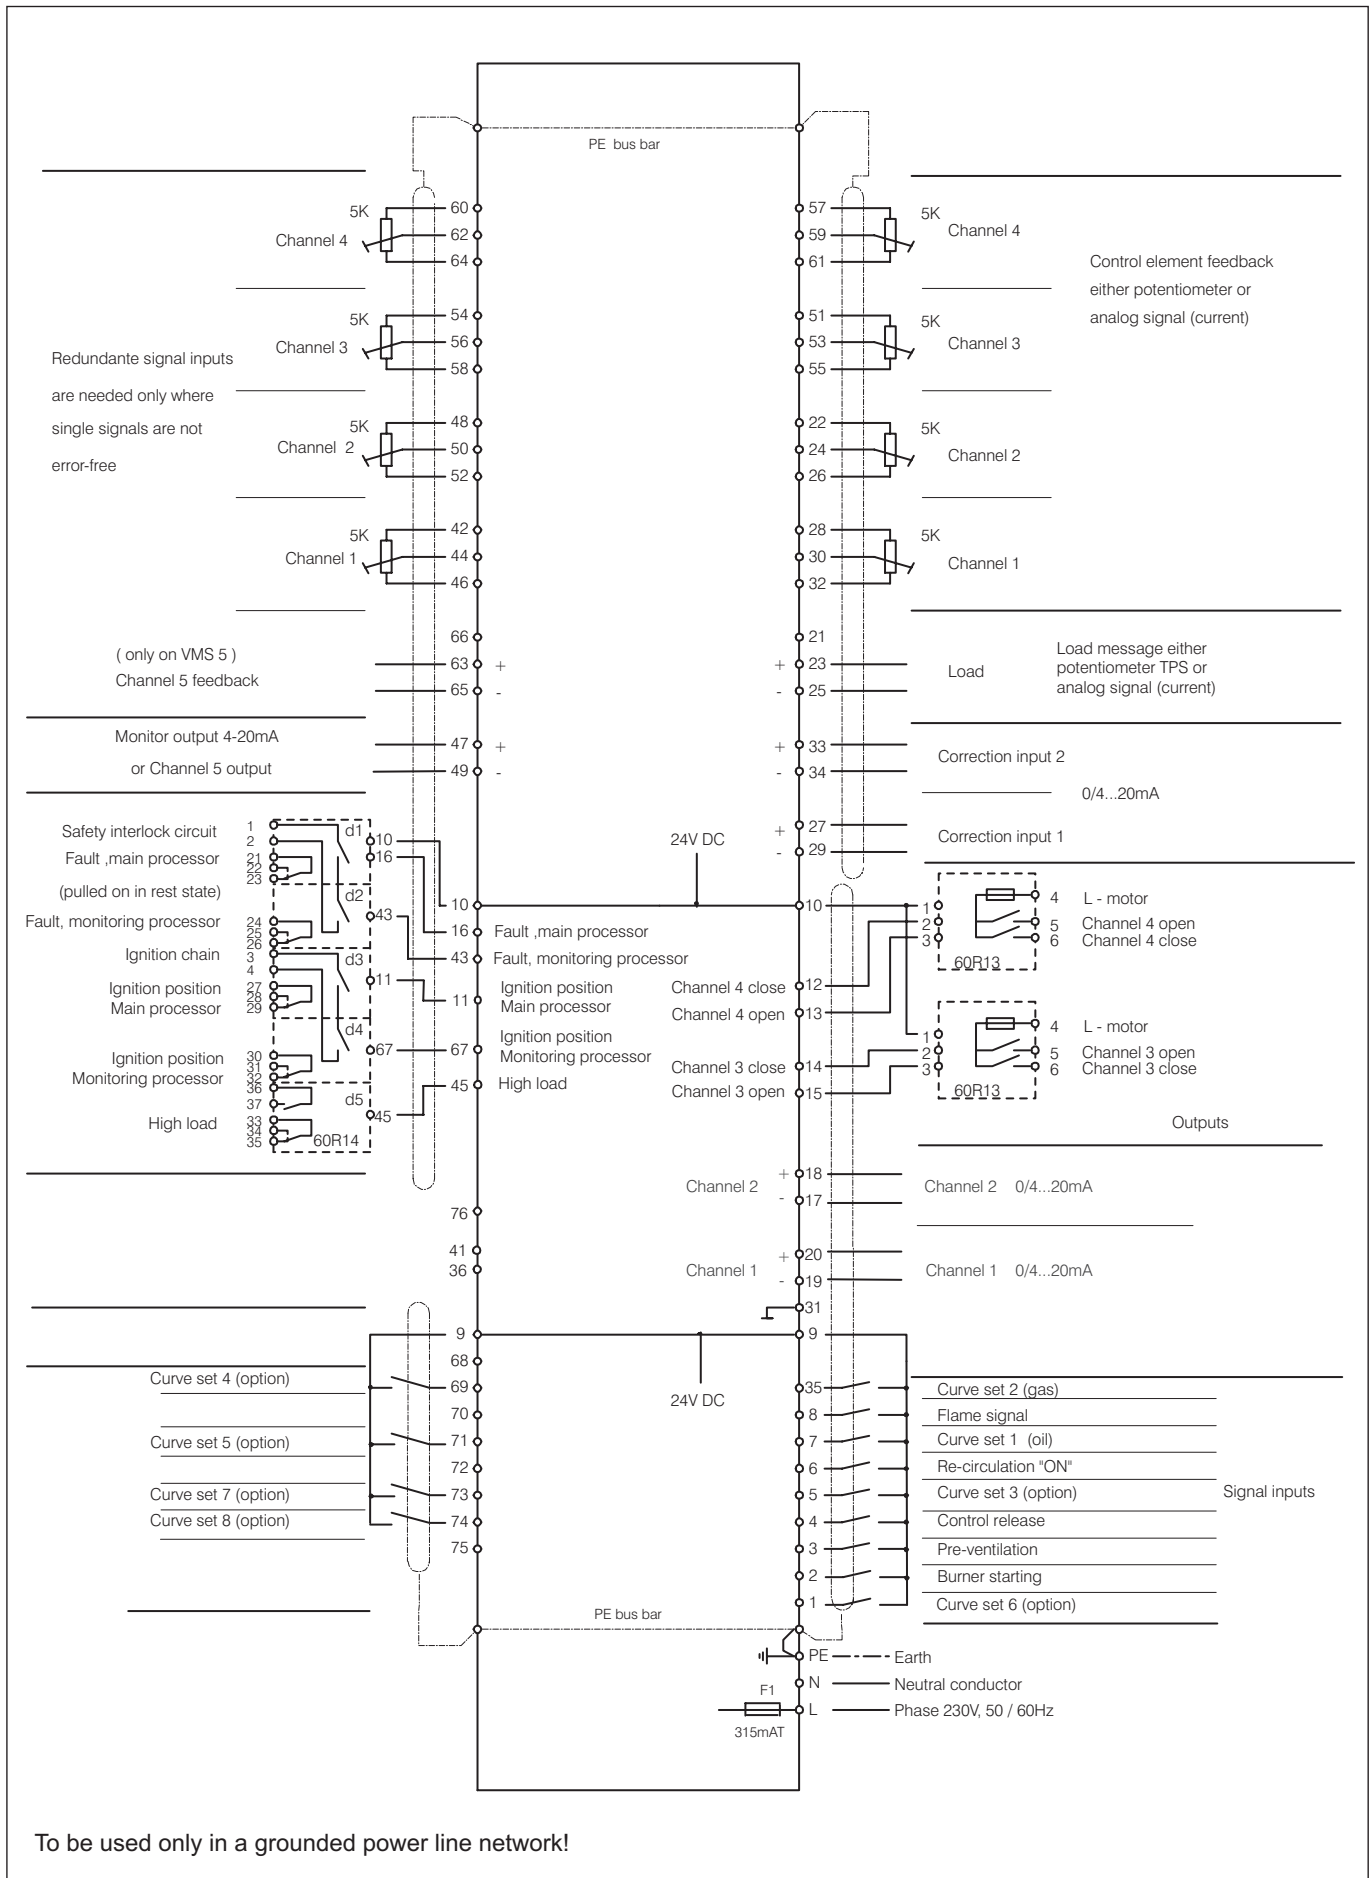


VMS 4 Typ 6 64 V 0040 with three continuous and one three-point step control output


VMS 5 Typ 6 65 V 0040 with four continuous and one three-point step control output

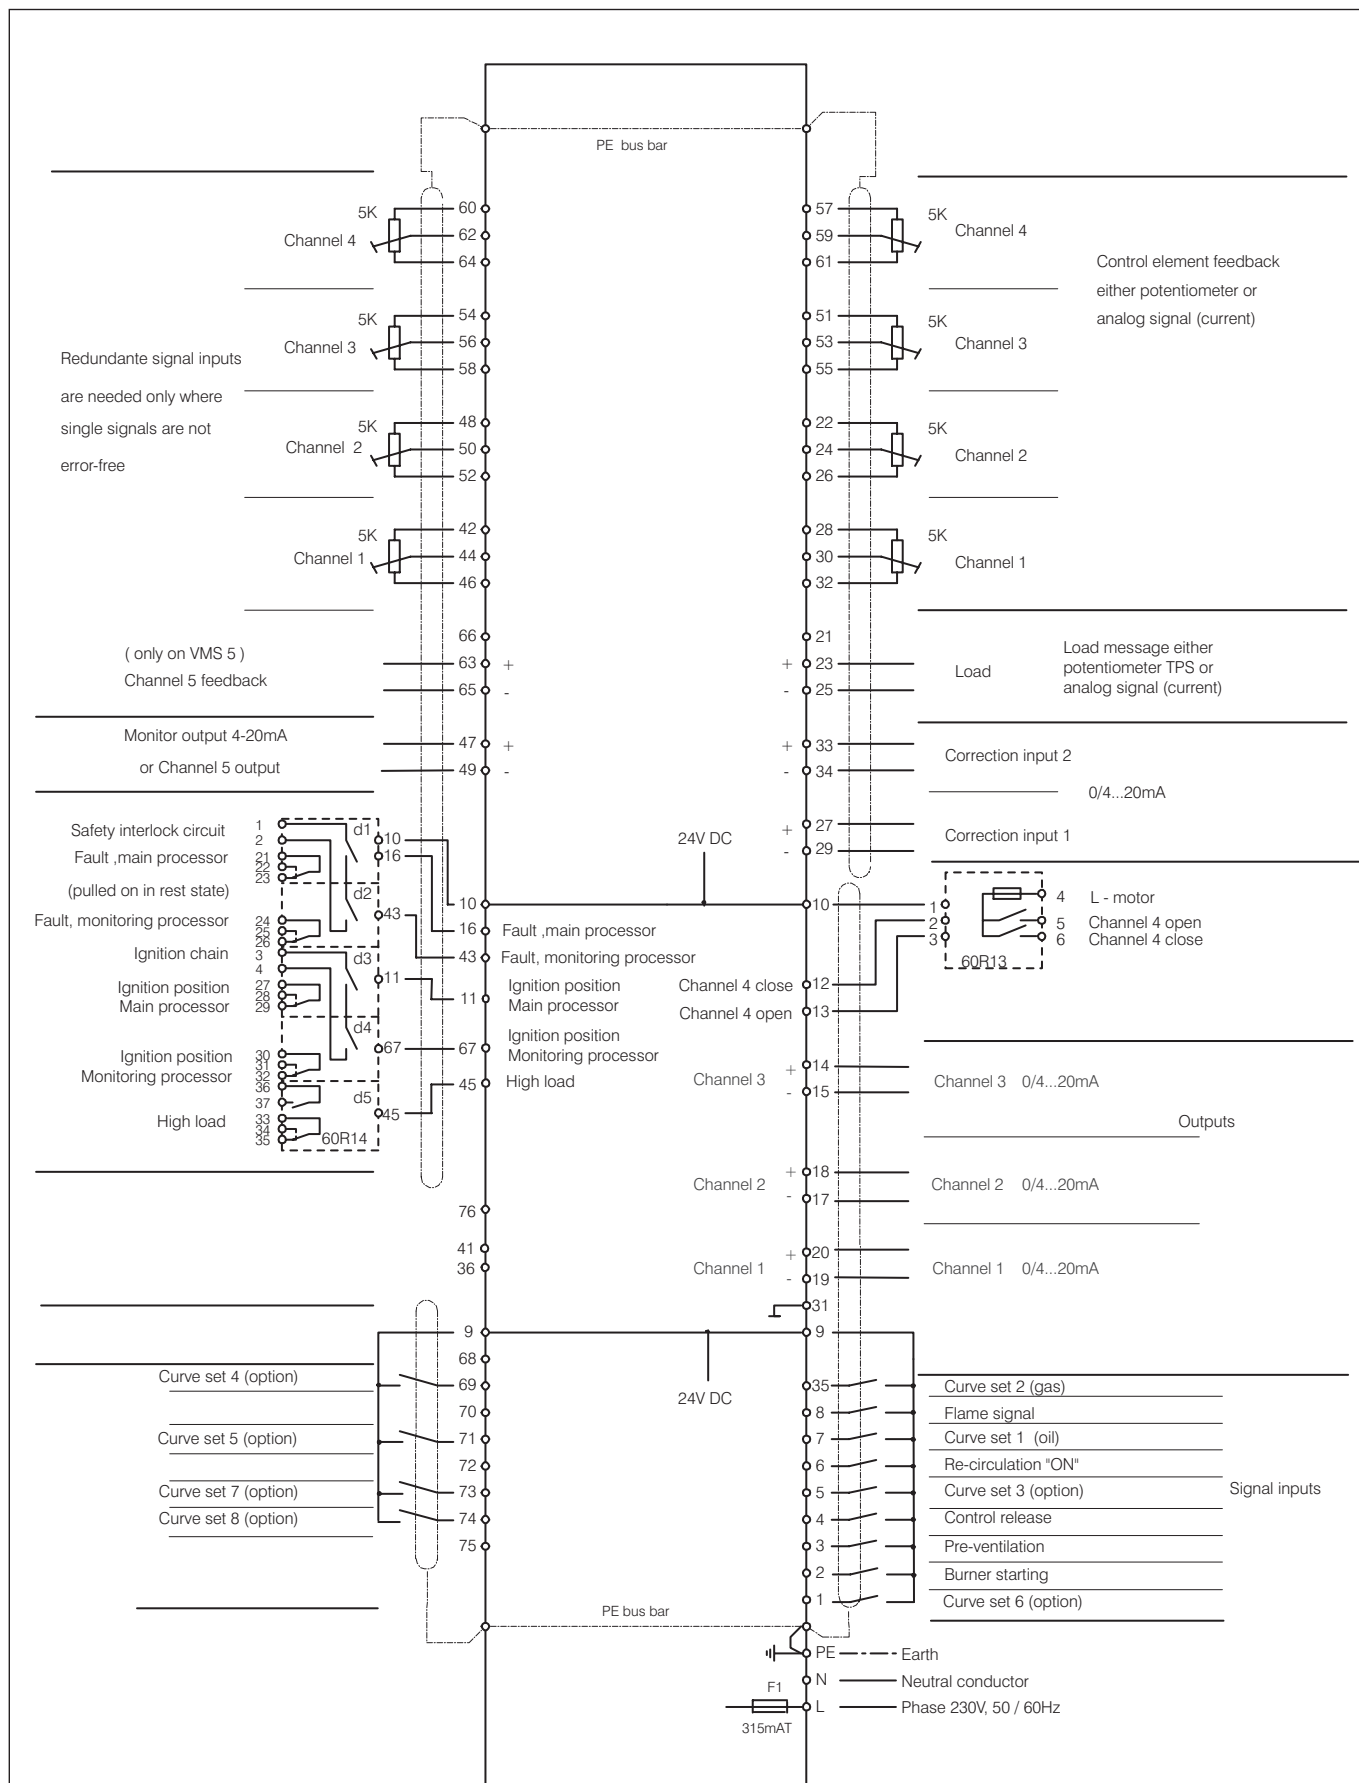

To be used only in a grounded power line network!

VMS 4 type 6 64 V 0050 with four continuous control outputs
 VMS 5 type 6 65 V 0050 with five continuous control outputs

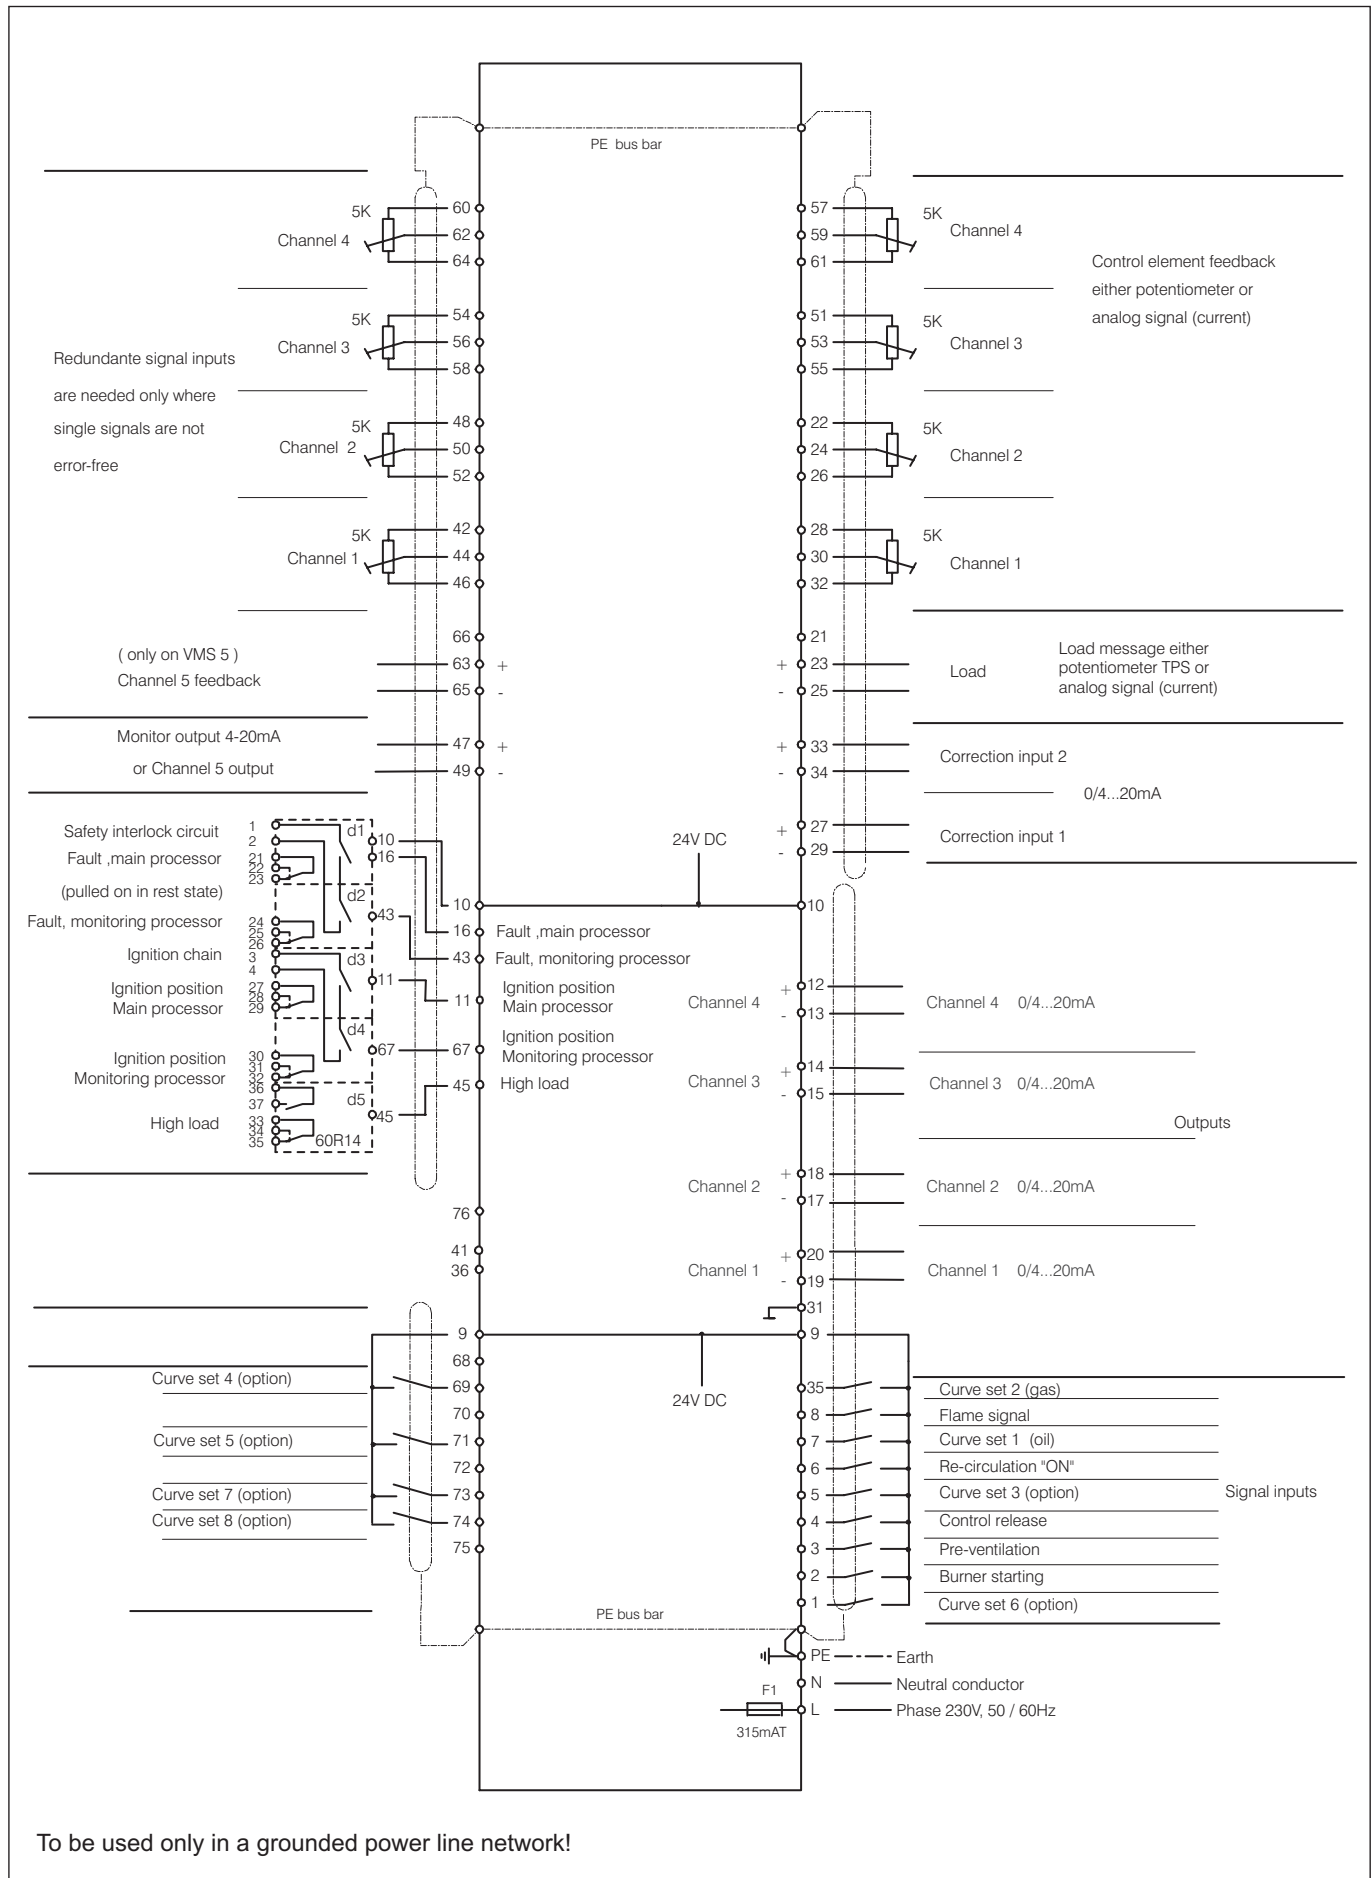

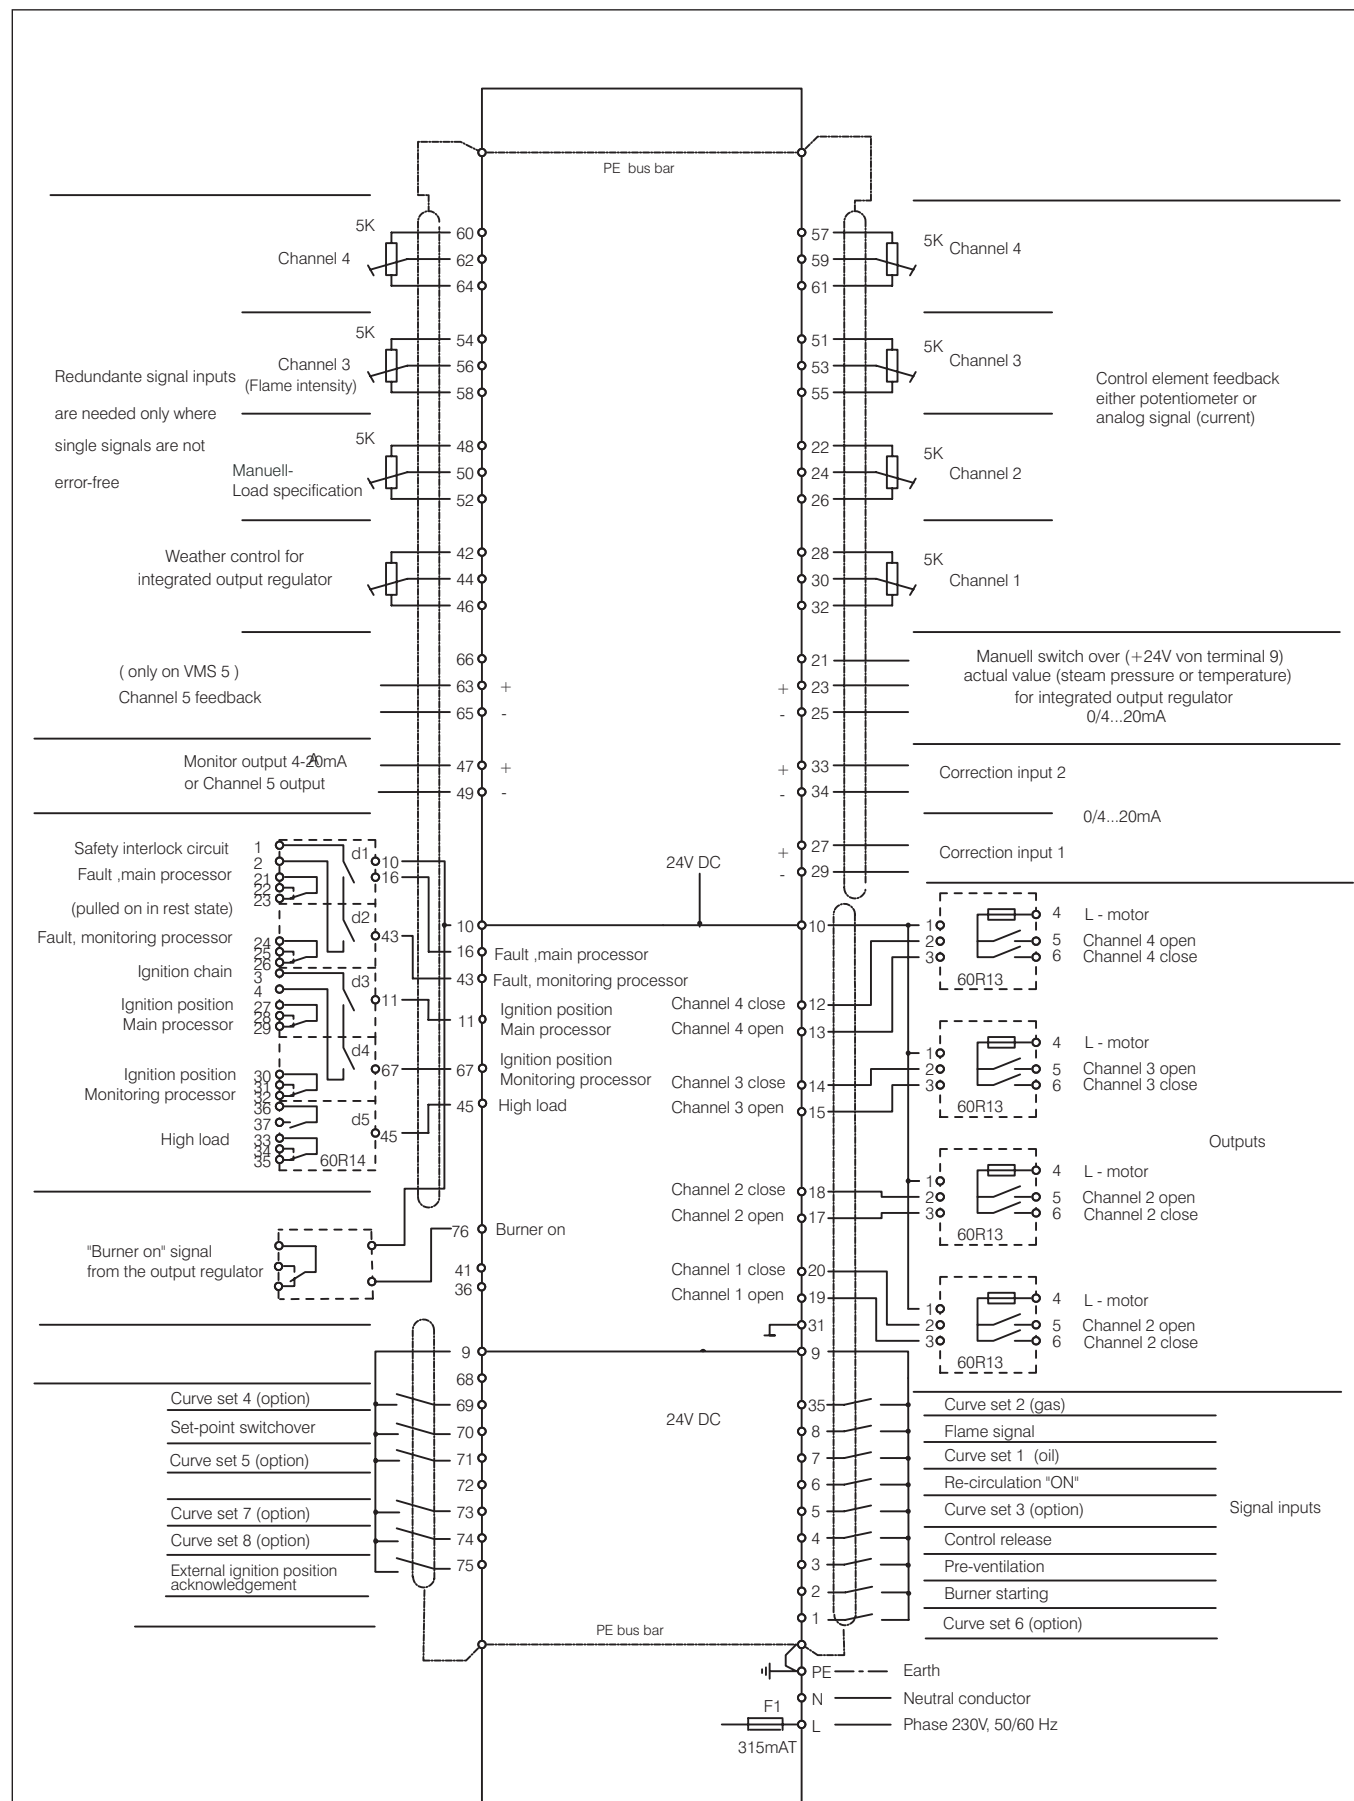

A configuration card can be integrated into the VMS that permits switching on a r.p.m. sensor as a two wire system or a Messrs.Turck inductive sensor with switch terminals as a three wire system for r.p.m. data feedback. There are 4 speed/pulse ranges available (settings ex factory)

| | | | | | | |
|-----|-----|------|---------------|-----------|------------|---------------|
| I | 30 | 300 | pulses / min. | $\hat{=}$ | 164 to 819 | points (+/-5) |
| II | 600 | 7200 | pulses / min. | $\hat{=}$ | 143 to 819 | points (+/-5) |
| III | 300 | 3600 | pulses / min. | $\hat{=}$ | 140 to 819 | points (+/-5) |
| IV | 30 | 300 | pulses / min. | $\hat{=}$ | 164 to 819 | points (+/-5) |

If the set pulse range is exceeded the value remains at the upper end of the range (higher pulse numbers are ignored).

The standard setting is range III (i.e. on motors with 3000 rpm at 50 Hz, 1 pulse per revolution)




Make sure that the selected measuring range is not exceeded, otherwise speed changes in excess of this will no longer be detected

Below the measuring range the signal goes to approx. 0-7 digit, see Aids: E12.

Extract from circuit diagram

Instead of the potentiometer shown in the connection diagram, connect the Namur transmitter on the corresponding channel as follows:

Technical Data

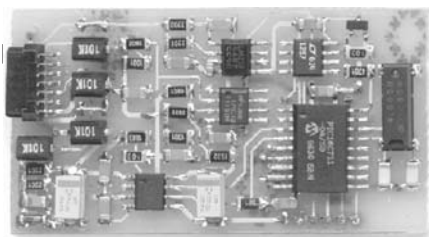

| | |
|---------------------|--|
| Namur input: | $U_0 = 8.2 \text{ V}; I_k = 8.2 \text{ mA}, \pm 5\%$ |
| - make threshold: | max 1.98 mA (type 1.8 mA) $\pm 5\%$ |
| - break threshold: | max. 1.62 mA (type 1.4 mA) $\pm 5\%$ |
| - linearity error: | $\leq 0.1 \%$ |
| - temperature drift | $\leq 75 \text{ ppm/K}$ (type. 60ppm/K) |

Measuring method: period duration measurement over 5

Input pulse width: $> 200 \mu\text{s}$

Temperature range: $0 \dots 60^\circ\text{C}$

Useable Namur transmitter: all Turck sensors, which contain Y0 or Y1 in their type designation

Owing to the large number of useable transducers LAMTEC has only one two wire element and one three wire element in the range.


It is selected so as to cover a number of measuring tasks.

Other transducers only on enquiry or direct from Messrs. Turck.

663 R 8101 r.p.m. sensor as a two wire system
d= 12mm, switch gap 2mm

663 R 8103 inductive sensor
with switch terminals in three wire system
d=12mm, switch gap 4mm

Selecting a suitable sensor for rev. speed monitoring

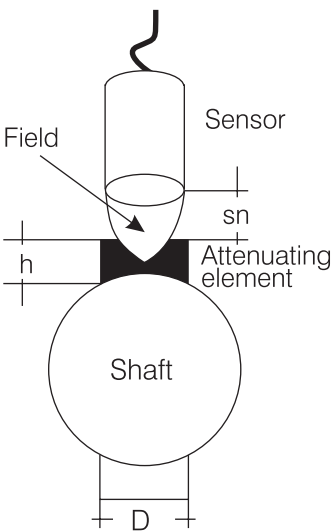

The correct sensor should always be selected, taking into account the structural features of the element to be measured.

Since this element is not always known, the following is an approximation procedure for dimensioning the attenuating elements and selecting a suitable sensor.

In most cases, a shaft is sensed directly. One or several attenuating elements (screw-heads or metal plates) are attached directly to the shaft. A symmetrical arrangement should be ensured, since many instruments work on the principle of measuring the period, and in the case of more than one attenuating element require 100% equal intervals between them. If this cannot be guaranteed, the signal can exhibit jumps (asymmetry can become particularly noticeable in analogue signals). This problem can be solved by installing only one attenuating element (this is the standard setting for rev. speed capture in the VMS).

The illustration (left) shows a typical arrangement of attenuating element, sensor and shaft.

How the system works:

Every inductive sensor forms an electric field at its active surface, from which the contact gap (nominal contact gap "Sn") can be derived as a function of sensor size. The table lists several typical sensors with their characteristics. The effective contact gap is 0.8 x nominal contact gap in the case of structural steel. An additional correction factor that depends on the material must be included for other materials. These factors are specified in the sensor manufacturer's data-sheets.

The installation distance between the sensor and the attenuating element's upper edge should be $S_n/2$ (half the nominal contact gap). The sensor's diameter depends on the required nominal contact gap and can be derived from the table. The attenuating element's diameter should be equal to or greater than the sensor's diameter (for frequencies < 20% of the sensor's maximum switching frequency). If the attenuating element is too small, this can cause problems at high rev. speeds since the element cannot be detected.

The attenuating element's height should be at least 3/4 of the nominal contact gap. If this value cannot be ensured, the sensor may detect the shaft or it is pre-attenuated by the shaft to such an extent that reliable rev. speed measurement cannot be guaranteed. This error too, may become noticeable only at higher rev. speeds.


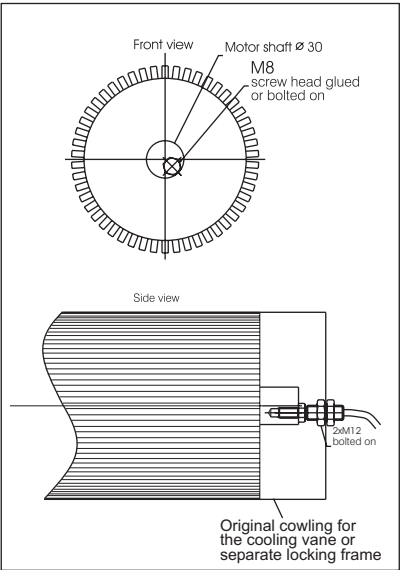


Illustration: Example of attaching an attenuating element (bolt M8) to the motor shaft's end-face


Selective list of Turck NAMUR sensors

| Typ | sn [mm] | sn x 0,8 [mm] | D [mm] | f [Hz] | Installation |
|----------------|---------|---------------|--------|--------|--------------|
| Bi1-EG05-Y1 | 1 | 0,8 | 5 | 5.000 | flush |
| Bi1,5-EG08K-Y1 | 1,5 | 1,2 | 8 | 5.000 | flush |
| Ni3-EG08K-Y1 | 3 | 2,4 | 8 | 5.000 | non-flush |
| Bi2-G12-Y1 | 2 | 1,6 | 12 | 5.000 | flush |
| Ni5-G12-Y1 | 5 | 4 | 12 | 2.000 | non-flush |
| Bi5-G18-Y1 | 5 | 4 | 18 | 1.000 | flush |
| Ni10-G18-Y1 | 10 | 8 | 18 | 500 | non-flush |
| Bi10-G30-Y1 | 10 | 8 | 30 | 500 | flush |
| Ni15-G30-Y11 | 15 | 12 | 30 | 200 | non-flush |


Typ 6 60 R 0013, Typ 6 60 R 0131

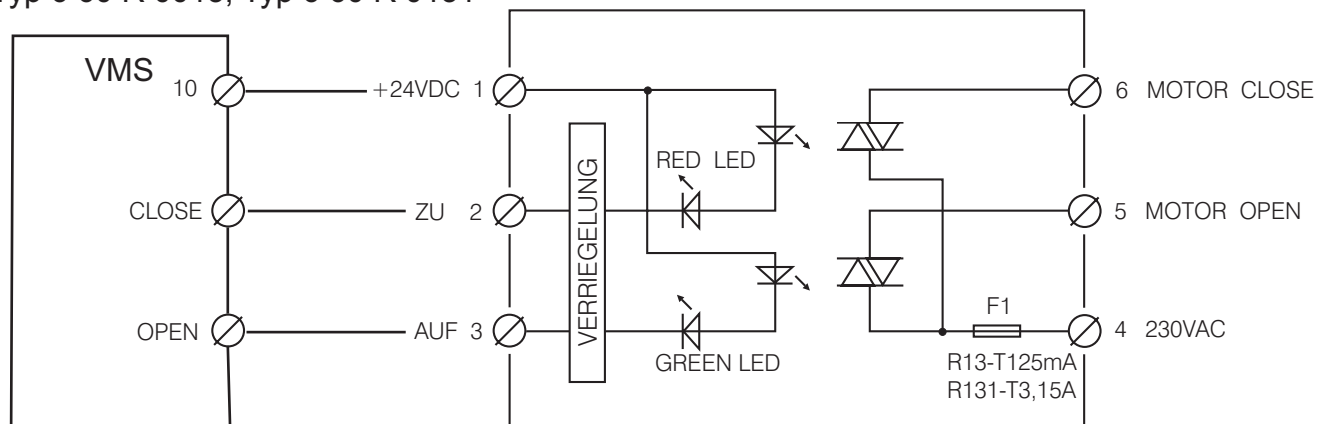


Typ 6 60 R 0019

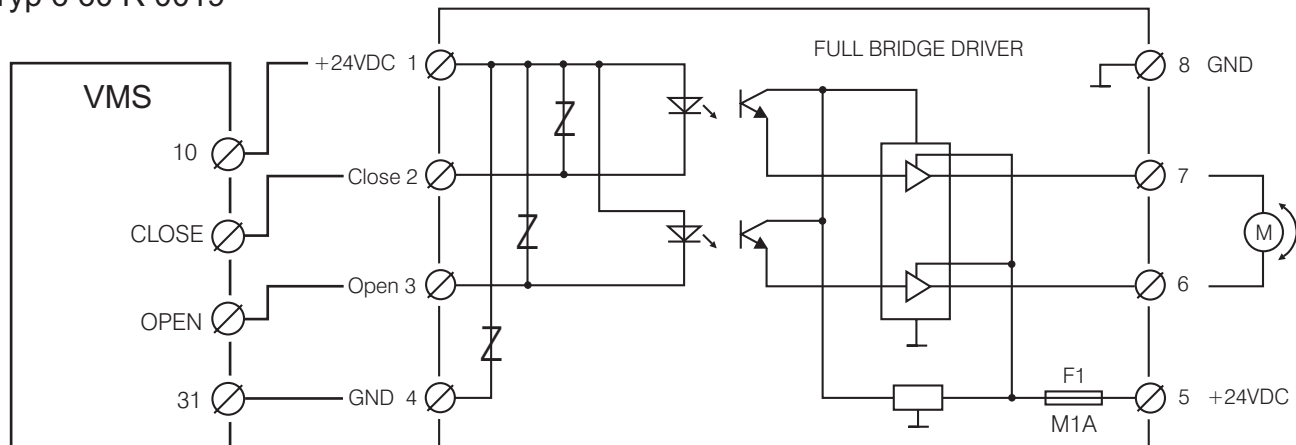

Typ 6 60 R 0014

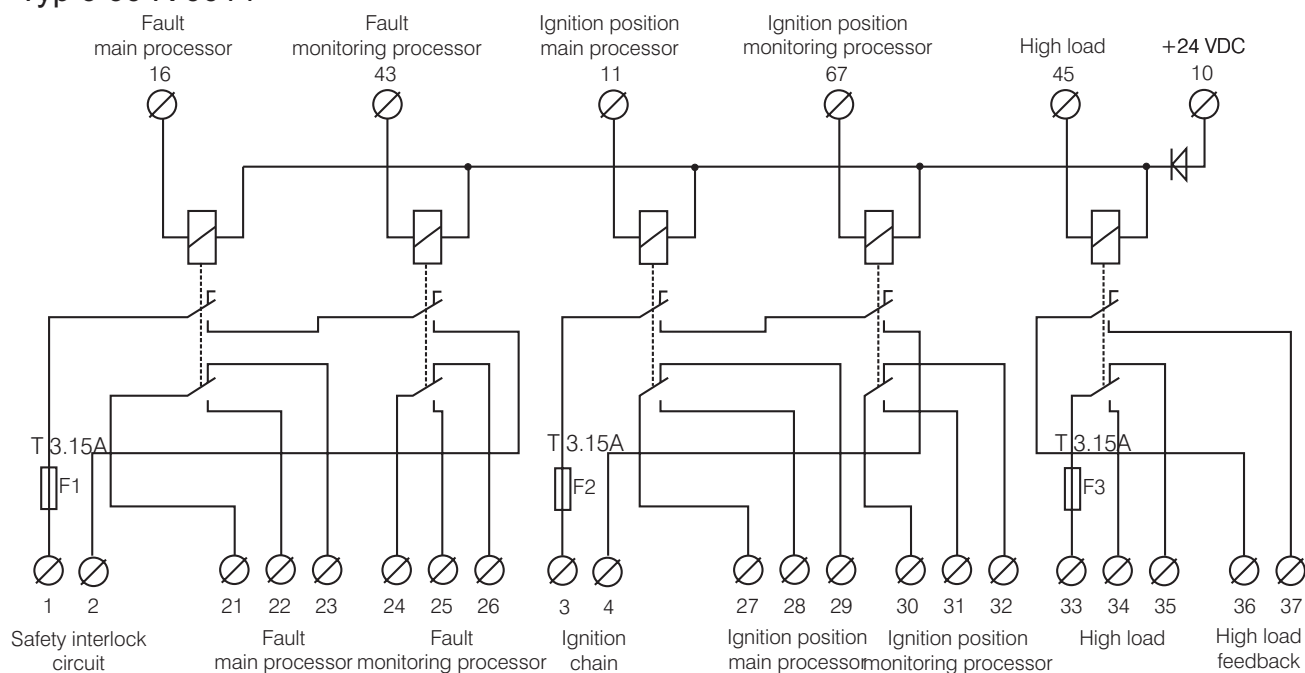

Also possible is a connection between VMS via modem.
The industrial modem (optional) for mouting top hat rail makes possible to access to 31 units at the same time with the Windows PC software.
This allows to realize a remote control of the operating mode of the units.
The wiring between modem and RS422 module (interface adapter) provided by the customer. The cable should be 4-wire, twisted and screened.

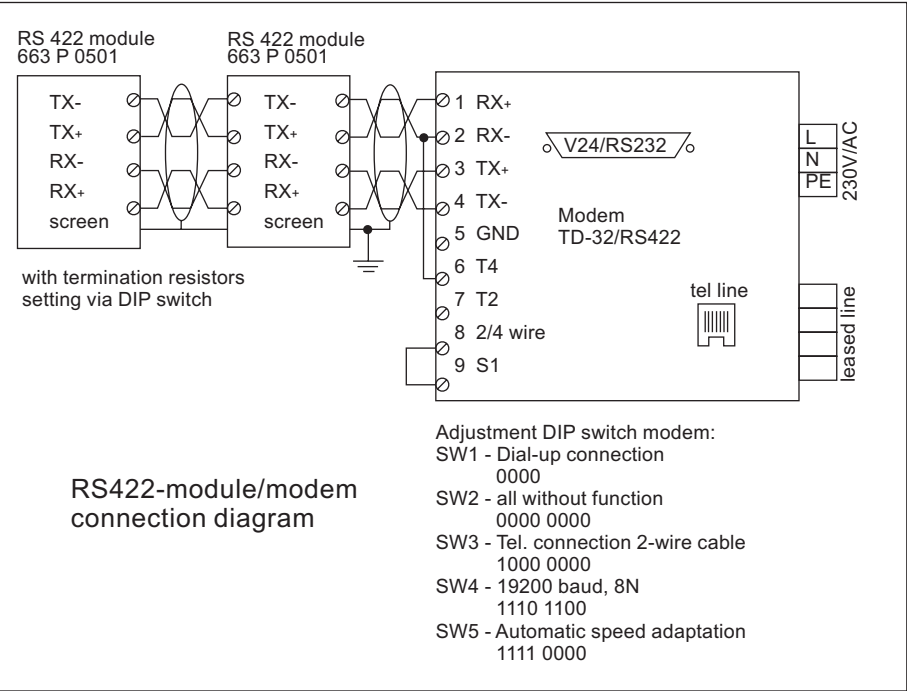



6 60 R 0013

Relay module
 Type 6 60 R 0011 (not shown)
 For three-point-step control output
 Mechanical relay
 L77 x W 112 x D 70 mm
 Characteristics:
 Continuous current 3.15 A
 Wear dependent on the
 connected motor load



6 60 R 0131

Relay module
 Type 6 60 R 0013
 For three-point-step control output
 For motors with a torque
 less than/equal to 20 Nm
 (but dependent on internal
 motor construction)
 Wear-free electronic relay
 L77 x W 70 x D 60 mm
 Characteristics:
 Leakage current max. 5 μ A
 Continuous current max. 0.05A

Relay module
 Type 6 60 R 0131
 For three-point-step control output
 For motors with a torque
 greater than 20 Nm
 Wear-free electronic relay
 L77 x W 70 x D 80 mm
 Characteristics:
 Leakage current max. 5 mA
 Continuous current max. 5A







6 60 R 0014

Relay module
 Type 6 60 R 0019 (not shown)
 For three-point-step control output
 For dc motors with 24 V voltage
 Wear-free electronic relay
 Characteristics:
 L77 x W 70 x D 60 mm
 Continuous current max. 0.8A

Relay module
 Type 6 60 R 0014
 For signal outputs (5 relays)
 Especially for VMS signals
 1 x high load relay
 2 x ignition position
 (once contact laid in series)
 2 x fault
 (one contact laid in series)
 L77 x W 170 x D 60 mm

Technical Data

| | |
|--|--|
| Dimensions (L x W x D) mm: | |
| VMS 4 / VMS 5 Compound Management System | 147 x 147 x 328 |
| Mounting depth | 295 |
| Relay module 6 60 R 0011 (not shown) | 77 x 112 x 70 |
| Relay module 6 60 R 0013 | 77 x 70 x 60 |
| Relay module 6 60 R 0131 | 77 x 70 x 80 |
| Relay module 6 60 R 0019 (not shown) | 77 x 70 x 60 |
| Relay module 6 60 R 0014 | 77 x 170 x 60 |
| Weight: | |
| VMS 4 / VMS 5 Compound Management System | 3.75 kg |
| Relay module 6 60 R 0013 | 0.1 kg |
| Relay module 6 60 R 0131 | 0.18 kg |
| Relay module 6 60 R 0016 | 0.3 kg |
| Protection class to | |
| DIN 40 050: VMS 4 / VMS 5 Compound Management System | IP 40 |
| Relay module | IP 00 |
| Installation: | |
| VMS 4 / VMS 5 Compound Management System | Panel mounting |
| Relay module | Cabinet mounting, mounting rail/top hat rail |
| Position of use | any |

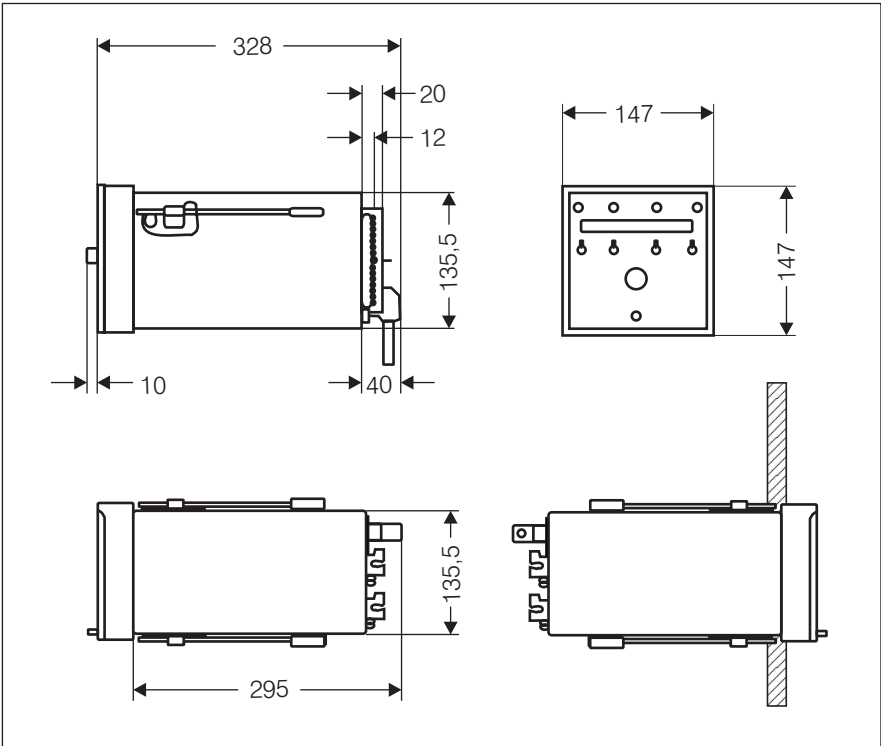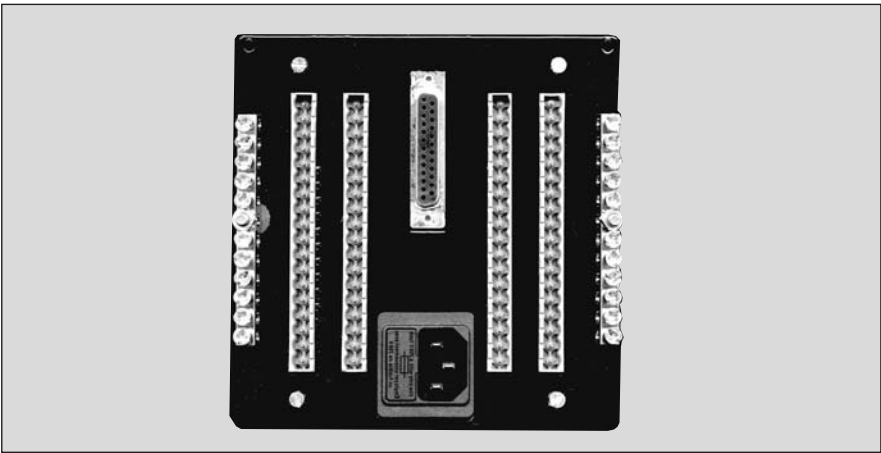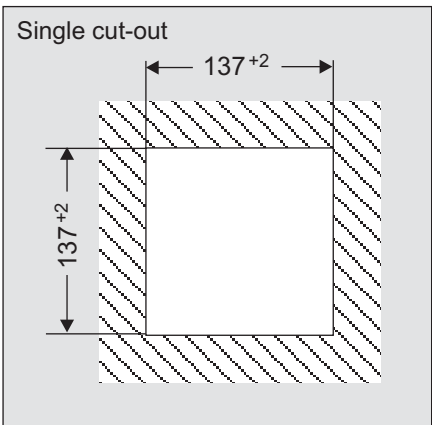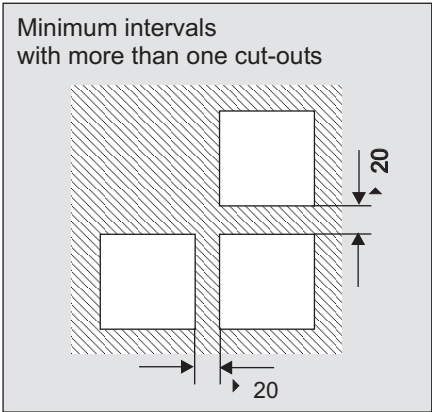

Technical Data

| | |
|---|--|
| Voltage supply: | 230V + 10% - 15% 50/60 Hz To be used only in a grounded power line network! |
| Power input: | approx. 34 VA |
| Ambient temperature: Operation: | + 0°C ... +60°C |
| Transport and storage: | -25°C ... +60°C |
| Display: | Alphanumeric display, 16-digit switchable to set-point, load rating, status, actual value feedback, set-point feedback, digital inputs, continuous control output value, correction input and correction range. Running text display |
| Admissible ambient humidity: | Class F, DIN 40 040 |
| Inputs and outputs: | 16 Digital inputs 8 - 16 Digital outputs 1 - 5 Analog outputs 12 Analog inputs all carrying a potential |
| Digital signal inputs: | 16 via floating 24 V DC contact, or optionally via 230 V module, type 6 60 R 0018 The parasitic capacitance of the 2,2 μ F line connected to the digital inputs must not be exceeded by the VMS self-tests. The line length should be limited to 100 m. |
| Load default: | Either potentiometer 1-5 kW, current signal (0/4...20 mA) or three-point step control output Optional: PT 100 direct switching |
| Feedback inputs: | Either potentiometer 1-5 kW, current signal (0/4...20 mA) Optional: Namur transmitter direct switching |
| Control outputs: | 4 or 5 either continuous or three-point step, on VMS 5 channel 5 fixed continuous |
| Resolution: each analog input | 999 points, 10 bit |
| Three-point step: Recommended running time of servo drives: | 30 s...60 s |
| Continuous control output: Apparent ohmic resistance: | 0...10 V > 5 kW 0/4...20 mA < 600 W |

Technical Data

Signal outputs

| | |
|---|---|
| Monitor output: | 4...20 mA signal, apparent ohmic resistance > 600 W |
| Correction inputs: | 2, adjustable to 0...20 or 4...20 mA channel and effect adjustable via parameters. |
| Fault message: | Centralised alarm through one floating relay contact for each processor, that is 2 per unit. 1 x um (230 V AC 6 A) closed circuit principle. |
| Ignition position: | Message that all active ducts have reached their ignition position, through floating relay contact. Two per unit (one relay per processor), each 1 x um (230 V AC 6 A). Open circuit principle. |
| High load position: | Message that all channels relevant to pre-ventilation are at maximum value. |
| Storage of set-point values and variable data: | In EEPROM up to 20 points per curve with linear interpolation |
| Number of curve sets: | 2 per channel (e.g. for oil/gas combination burner) Optional 4 and 8 |
| Pre-setting the operating condition: | By signals from control unit |
| Memory capacity: | Unlimited (EEPROM) |
| 4 curve sets: 8 curve sets: | Available as option for VMS 4 and VMS 5 (4 / 8 set-point curves per channel) |
| Interface: | 2 serial interfaces on 25-pole Sub-D connector accessible only via adapter (RS 232 (standard setting 19200 baud, parity even 8, 1 |

CAUTION!

Using the interface without adapter can damage the unit.

Plug adapter in or remove only with the voltage off.

Only connect units conforming to DIN EN 60950 / VDE 0805.

| | |
|-----------------|--|
| BUS connection: | Via 25-pole Sub-D connector BUS card optional for the following systems: Interbus-S (Phoenix) Profibus-DP Modbus CANopen (in preparation) |
|-----------------|--|

Accessories and Spare Parts

| | | |
|--|--|-------------|
| Accessories for VMS Compound Management System | Novotechnik potentiometer, 5 kW, for VR, VMS/FMS TÜV-approved | 6 60 P 7001 |
| | Contelec potentiometer, 5 kW, for VR, VMS/FMS TÜV-approved | 6 60 P 7003 |
| | Contelec potentiometer, 5 kW, for VR, VMS/FMS TÜV-approved short axis for conversion of L & G motors | 6 60 P 7002 |
| | Contelec potentiometer, 5 kW, at 90° for conversion of Autoflame motors | 6 60 P 7004 |
| | Servomotor 12 Nm, running time 60 sec. at 90°, 2 limit switches, incl. TÜV-approved potentiometer | 6 62 R 2110 |
| | Servomotor 19 Nm, running time 60 sec. at 90°, 2 limit switches, incl. TÜV-approved potentiometer | 6 62 R 2111 |
| | Servomotor 30 Nm, running time 60 sec. at 90°, 3 limit switches, manual operation incl. TÜV-approved potentiometer | 6 62 R 2112 |
| | Isolation amplifier TUI21 (0...20 mA / 0...20 mA) | 6 55 R 0100 |
| | Isolation amplifier TUI21(input and output set at factory) | 6 55 R 0101 |
| | Module for 230V signal inputs | 6 60 R 0018 |
| | Module for connecting the PC remote-control software (RS 232 adapter for 25-pole Sub-D socket) | 6 63 P 0600 |
| | Remote-control software for VMS / FMS | 6 63 R 9000 |
| | Remote display software (end-user version) | 6 63 R 9001 |
| Spare parts for VMS Compound Management System | Fuses 1A, T for VMS/FMS, 24V supply (pack of 10) | 6 60 R 0110 |
| | Fuses 3.15A, T for VMS/FMS, 230V (pack of 10) | 6 60 R 0116 |
| | Fuses 3.15A, T for relay module 6 60 R 0011/ R 0012 / R 0014 / R 0131(pack of 10) | 6 60 R 0115 |
| | Fuses 80 mA, T for relay module 6 60 R 0013 (pack of 10) | 6 60 R 0113 |
| | Fuses 2A, T for relay module 6 60 R 0016 (pack of 10) | 6 60 R 0114 |
| | Fuses 0.5A, T for relay module 6 60 R 0016 (pack of 10) | 6 60 R 0117 |
| | Spare relay for relay module 6 60 R 0011 (Open/Close) | 6 60 P 0110 |
| | Spare relay for relay module 6 60 R 0012 / R 14 | 6 60 P 0101 |
| | Spare relay for relay module 6 60 R 0013 | 6 60 P 0126 |
| | Spare relay for relay module 6 60 R 0131 | 6 60 P 0125 |

Accessories and Spare Parts

| | |
|--|-------------|
| VMS / FMS Program Up-Date | 6 63 R 1100 |
| Edge connector, 18-pole for VMS / FMS | 6 55 P 9211 |
| Installation fixing (pack of 2) | 6 60 R 0080 |
| Set-point memory (EEPROM) for VMS / FMS | 6 62 R 0111 |
| Spare power supply electronics for VMS / FMS | 6 63 P 0923 |
| Spare computer electronics for VMS / FMS | 6 63 P 0921 |
| Continuous output electronics card for VMS / FMS | 6 63 P 7000 |
| Front electronics for VMS / FMS, complete | 6 63 P 5000 |
| Spare backplane for VMS / FMS | 6 63 P 3000 |
| Configuration module: | |
| PT 100 module | 6 57 P 0990 |
| Speed module | 6 63 P 8001 |
| Potentiometer 5 k Ω | 6 63 P 6000 |
| 0/4...20 mA | 6 63 P 6001 |
| 0/4...20 mA with 24 V supply for transducer | 6 63 P 6002 |
| 0/4...20 mA with digital input | 6 63 P 6003 |
| Zero modem cable 10 m | 6 63 R 0100 |
| Extension 10 m | 6 63 R 0101 |

Declaration of Conformity

EC Declaration of Conformity

Month/Year: March /..... 1997

Manufacturer **LAMTEC Meß- und Regeltechnik
für Feuerungen GmbH & Co KG**

Address: Impexstraße 5, 69190 Walldorf

Product Designation: VMS 4 / VMS 5 Compound Management System

The designated product complies with the provisions of the following European Directives

| Number | Subject |
|---|--|
| 89/336/EEC | Electromagnetic compatibility |
| 73/23/EEC | Electrical equipment within defined voltage limits |
| 90/396/EEC | Gas Appliance Directive |
| Appendix contains further information on compliance with this Directive | |

Affixing of CE Mark: No, since components

Plate, Date: Walldorf, 3 March 1997

Legally binding
Signature:

.....


The appendices form an integral part of this Declaration
This declaration certifies compliance with the Directives quoted, but contains no assurance of the characteristics.
The safety instructions in the product documentation enclosed must be followed.
This declaration of conformity is only valid for the unit supplied, if the corresponding test numbers are affixed thereto.
Declaration of Conformity

Declaration of Conformity

Appendix
to the EC Declaration of Conformity
or EC Manufacturer's Declaration

Month/Year: March /.....1997

Product Designation: VMS 4 / VMS 5 Compound Management System
.....
.....
.....

The compliance of the designated product with the provisions of the above-mentioned Directives is verified by adherence to the following standards and regulations:

Harmonised European Standards:

- Reference No.
- EN 298
 - EN 230
 - IEC 801 / DIN VDE 0843

National Standards

- Reference No.
- VDE 0110
 - VDE 0100
 - VDE 0116
 - VDE 0801 AK 4 completely
AK 5 partially
 - DIN VDE 160
 - DIN 4788 Part 3
 - Integral leakage test: DIN V 3440

Technical Regulations:

- Reference No.
- TRD 604, where applicable
 - TRD 411, where applicable
 - TRD 412, where applicable

Date: _____

Location: _____

ID-No. Typ 6 _____ R _____

Unit-No. _____

Commissioned by: _____

Fuel: _____

Correction range 1: _____


Correction range 2: _____

Plant: _____

Display
Main processor

| Load point | Load Rating | Channel 1 Set-point value | Channel 1 Feed-back value | Channel 2 Set-point value | Channel 2 Feed-back value | Channel 3 Set-point value | Channel 3 Feed-back value | Channel 4 Set-point value | Channel 4 Feed-back value | Channel 5 Set-point value | Channel 5 Feed-back value | O ₂ value without regulation | O ₂ value with regulation |
|--------------------|-------------|------------------------------|------------------------------|------------------------------|------------------------------|------------------------------|------------------------------|------------------------------|------------------------------|------------------------------|------------------------------|---|--------------------------------------|
| lower range limits | | | | | | | | | | | | | |
| 1 | | | | | | | | | | | | | |
| 2 | | | | | | | | | | | | | |
| 3 | | | | | | | | | | | | | |
| 4 | | | | | | | | | | | | | |
| 5 | | | | | | | | | | | | | |
| 6 | | | | | | | | | | | | | |
| 7 | | | | | | | | | | | | | |
| 8 | | | | | | | | | | | | | |
| 9 | | | | | | | | | | | | | |
| 10 | | | | | | | | | | | | | |
| 11 | | | | | | | | | | | | | |
| 12 | | | | | | | | | | | | | |
| 13 | | | | | | | | | | | | | |
| 14 | | | | | | | | | | | | | |
| 15 | | | | | | | | | | | | | |
| 16 | | | | | | | | | | | | | |
| 17 | | | | | | | | | | | | | |
| 18 | | | | | | | | | | | | | |
| 19 | | | | | | | | | | | | | |
| 20 | | | | | | | | | | | | | |
| upper range limits | | | | | | | | | | | | | |

Appendix
O₂ target value curves

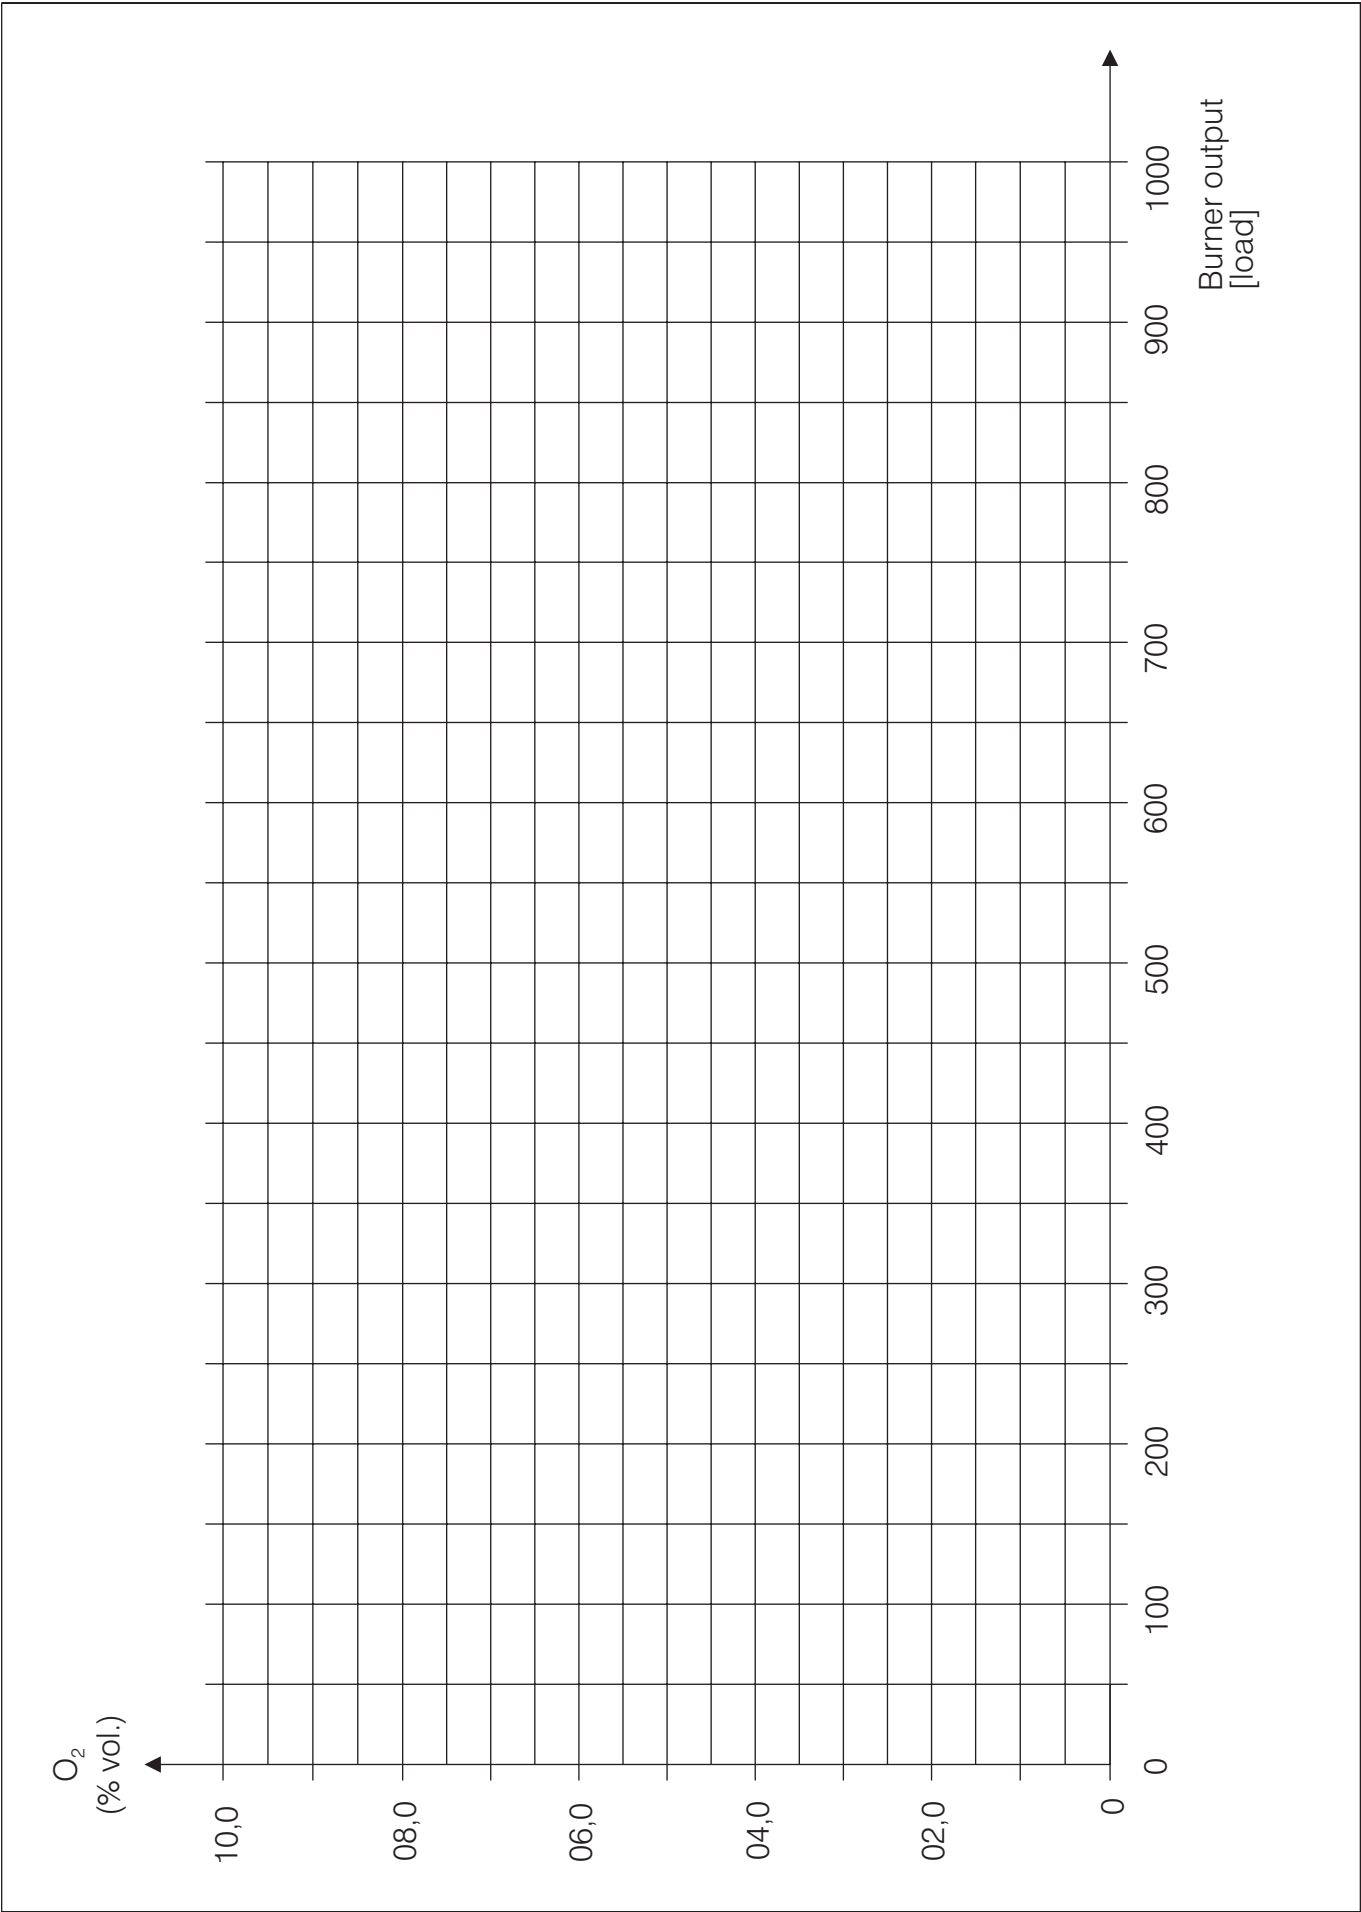



**LAMTEC Meß- und Regeltechnik
für Feuerungen GmbH & Co KG**

Impexstraße 5
D-69190 Walldorf
Telefon (+49) 06227 / 6052-0
Telefax (+49) 06227 / 6052-57
Internet: <http://www.lamtec.de>
e-mail: info@lamtec.de

LAMTEC Leipzig GmbH & Co KG

Schlesierstraße 55
D-04299 Leipzig
Telefon (+49) 0341 / 863294-00
Telefax (+49) 0341 / 863294-10

Presented by:

Druckschrift-Nr. D LT6065-07-aE-0083
Printed in Germany